

ASSEMBLY INSTRUCTIONS

DESCRIPTION: HEADBOARD

Important safety instructions:

Please carefully read all instructions before assembling.

For your safety and ease, assembly by two or more adults is recommended.






Keep instructions for future use.

Pre-assembly:











Remove all parts and hardware from box along with any plastic protective packaging.



Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware

Parts List


Item	Description		QTY
P1	Headboard		1
P2	Left Support Leg with 3 Mounting Brackets (With the sticker "Left" on the bottom)		1
P3	Right Support Leg with 3 Mounting Brackets (With the sticker "Right" on the bottom)		1
P4	Left Wing		1
P5	Right Wing		1

Hardware List


Item		Description		QTY
Pack A (Used to assemble the headboard)	H1	Bolts $\Phi 5/16$ "x1"L		5
	H2	Spring Washer Ring 5/16"		5
	H3	Flat Washer Ring 5/16"		5
	H4	Allen Key 5/16"		1
Pack B (assemble the headboard to the bed frame)	H5	Bolts $\Phi 5/16$ "x1"L		4
	H6	Spring Washer Ring 5/16"		4
	H7	Flat Washer Ring 5/16"		4
	H8	Nut Cap 5/16"		4
	H9	Solid Wrench 5/16"		1
Pack C	H10	Bolts $\Phi 5/16$ "x2"L		7

(assemble the wings to the headboard)	H11	Spring Washer Ring 5/16"		7
	H12	Small Flat Washer Ring 5/16"		7

Step 1: Take out Legs and hardware under the headboard

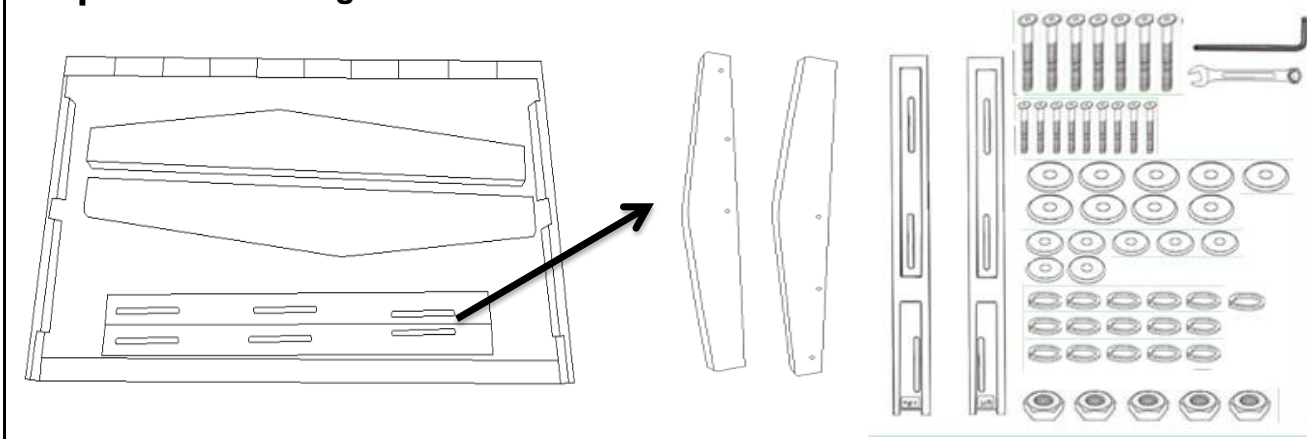

Step 2:

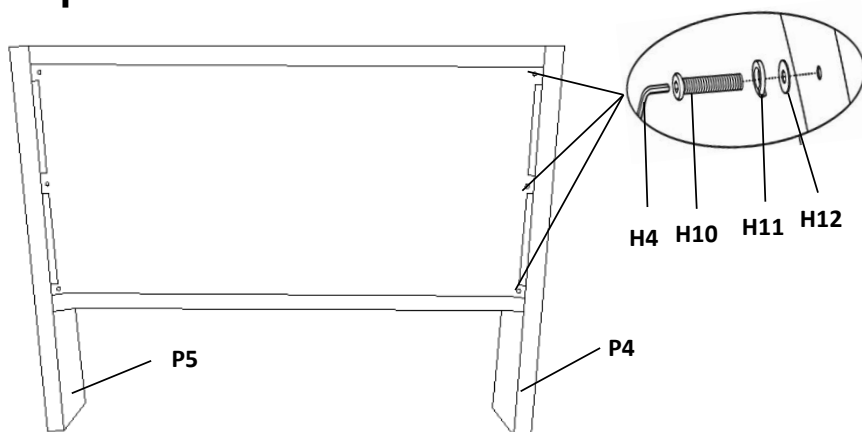


Put the Headboard onto a flat surface.

Align the mounting position on Headboard to the mounting position on Left Wing(P4).

Then, lock the mounting positions by using Flat washer (H12), Spring washer(H11), bolt(H10), Then tighten the bolts with allen wrench (H4) .

Repeat the same steps to install the Right Wing(P5).

Step 3:

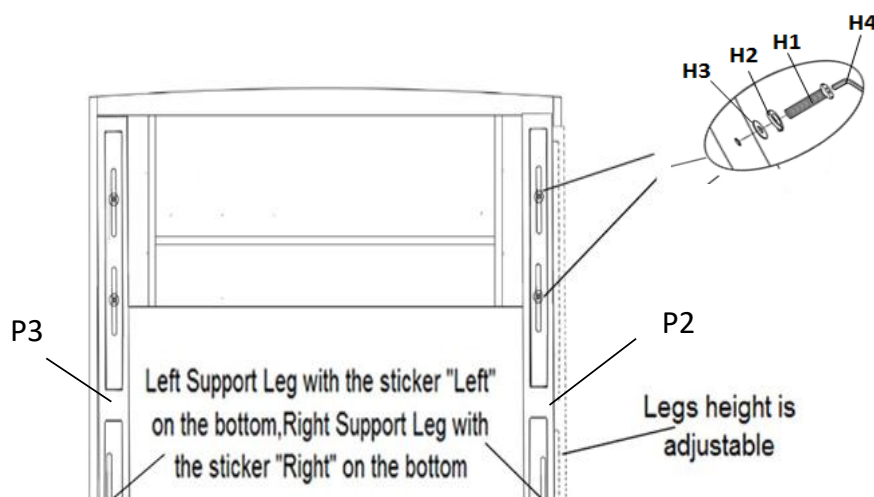

Put the Headboard onto a flat surface.

Align the mounting position on Headboard to the mounting position on Left Support Leg(P2).

Then, lock the top and the middle mounting positions by using Flat washer (H3), Spring washer(H2), bolt(H1), Then tighten the bolts with allen wrench (H4) .


Repeat the same steps to install the Right Support Leg(P3).

At this point of assembly, DO NOT overfasten the connections.

The final height of the

Headboard may be adjusted
to your own need.

Step 3 :Headboard is ready to be assembled to bed frame using Pack B Parts.

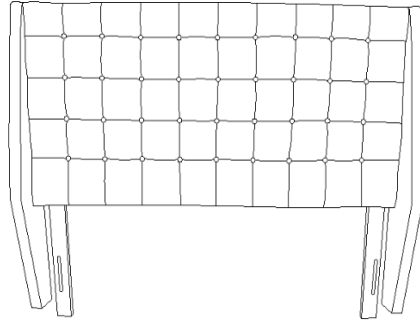

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase