





Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.








Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Right Headboard		1
P2	Left Headboard		1
P3	Leg Right Headboard		1
P4	Leg Left Headboard		1

Hardware List

Item	Description		QTY
H1	Bolts M6 X 20mm		4
H2	Bolts M6 X 50mm		8
H3	Bolts M6 X 60mm		2
H4	Lock Washer Ø6 x Ø11 x 2mm		14
H5	Flat Washer Ø6 x Ø16 x 1mm		14
H6	Allen Wrench 4 mm		1
H7	Connector Plate		1

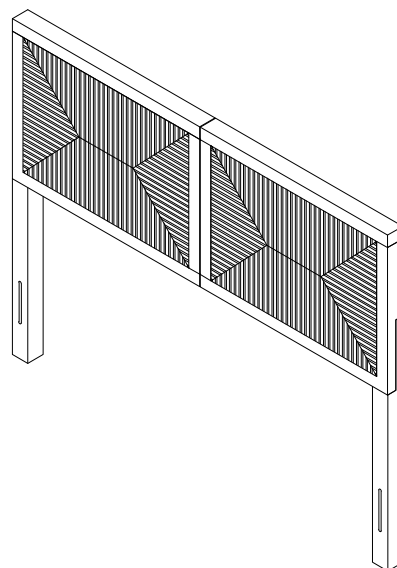


DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:

Step1.

1) Assemble the headboard on a flat, soft surface such as a carpet or cloth to prevent scratching the finishing.

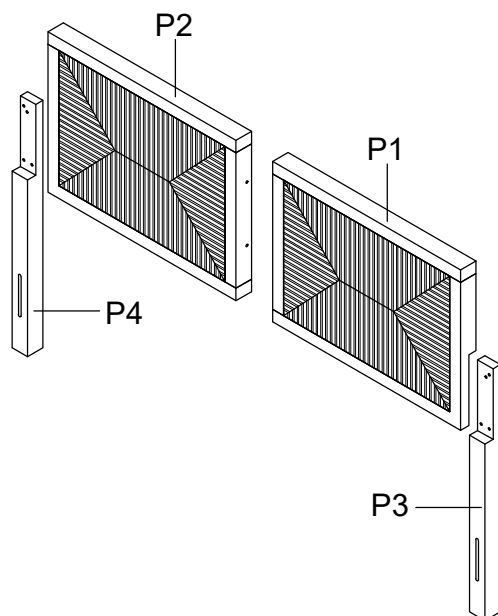



2) Assembled left headboard (P2) to right headboard (P1) as shown below.

(H3)x2 Bolts M6 X 60mm

(H4)x2 Lock Washer Ø6 x Ø11 x 2mm

(H5)x2 Flat Washer Ø6 x Ø16 x 1mm

(H6)x1 Allen Wrench 4 mm

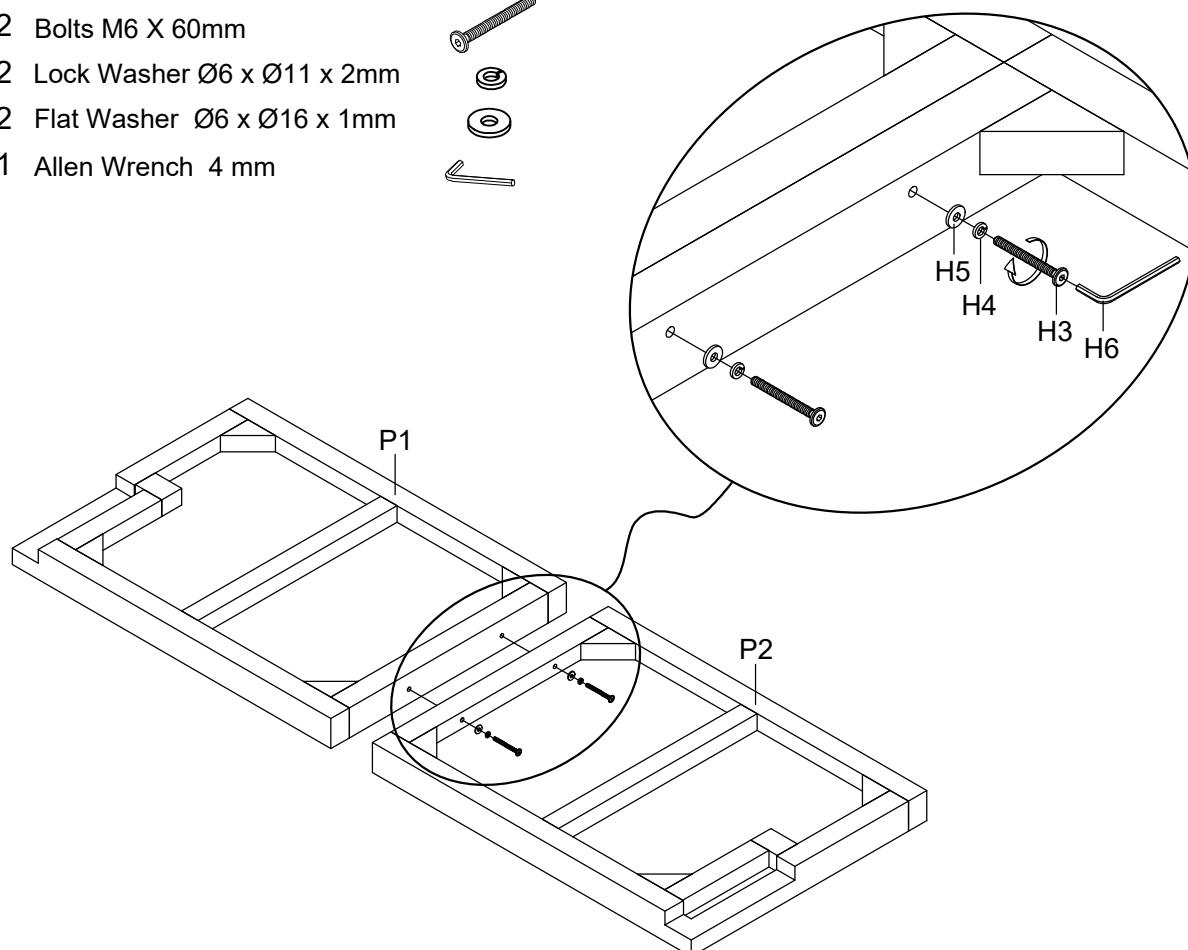

ASSEMBLY INSTRUCTIONS

Description: SEAGATE HEADBOARD


Step 2. Attach the leg right headboard (P3) to the right headboard (P1) and leg left headboard (P2) to the left headboard (P2) as shown below.

(H2)x8 Bolts M6 X 50mm

(H4)x8 Lock Washer Ø6 x Ø11 x 2mm

(H5)x8 Flat Washer Ø6 x Ø16 x 1mm

(H6)x1 Allen Wrench 4 mm

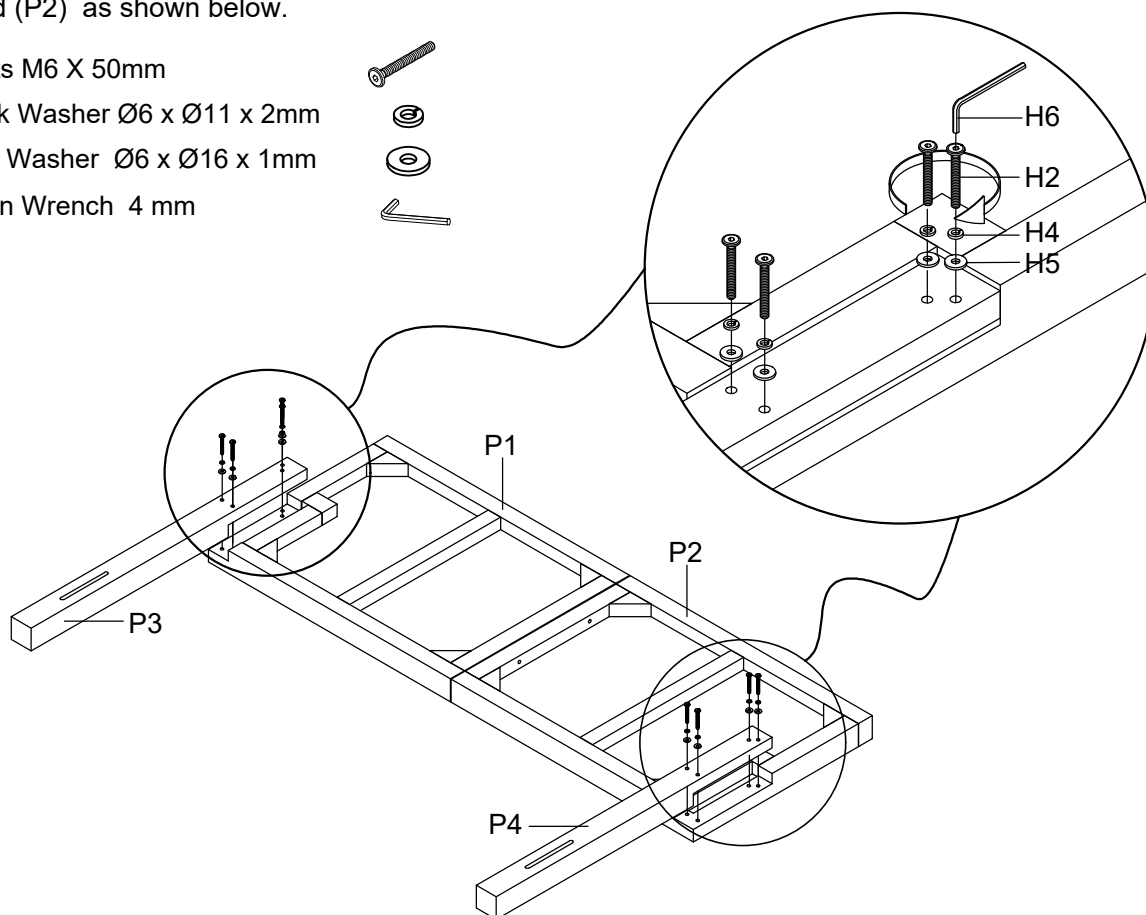

Step 3. Attach the connector plate (H7) to the right headboard (P1) and left headboard (P2) as shown below.


(H1)x4 Bolts M6 X 20mm

(H4)x4 Lock Washer Ø6 x Ø11 x 2mm


(H5)x4 Flat Washer Ø6 x Ø16 x 1mm

(H6)x1 Allen Wrench 4 mm

(H7)x1 Plat Connector

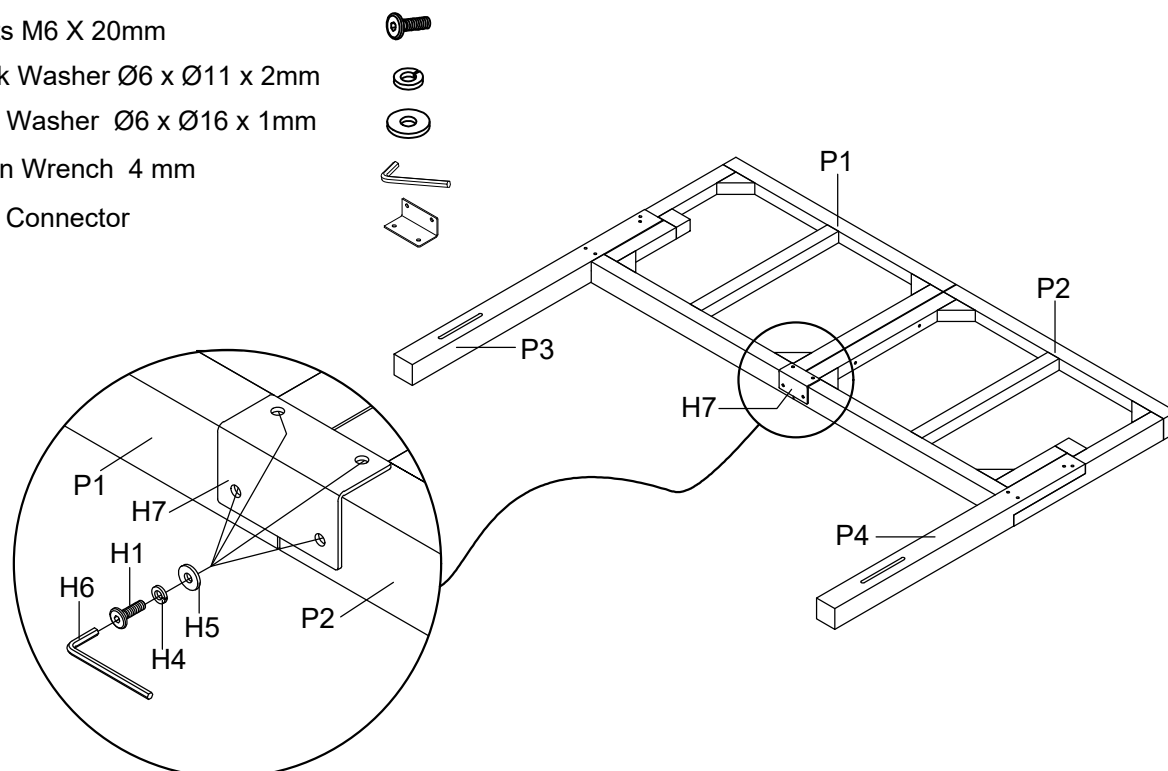

Step 4. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

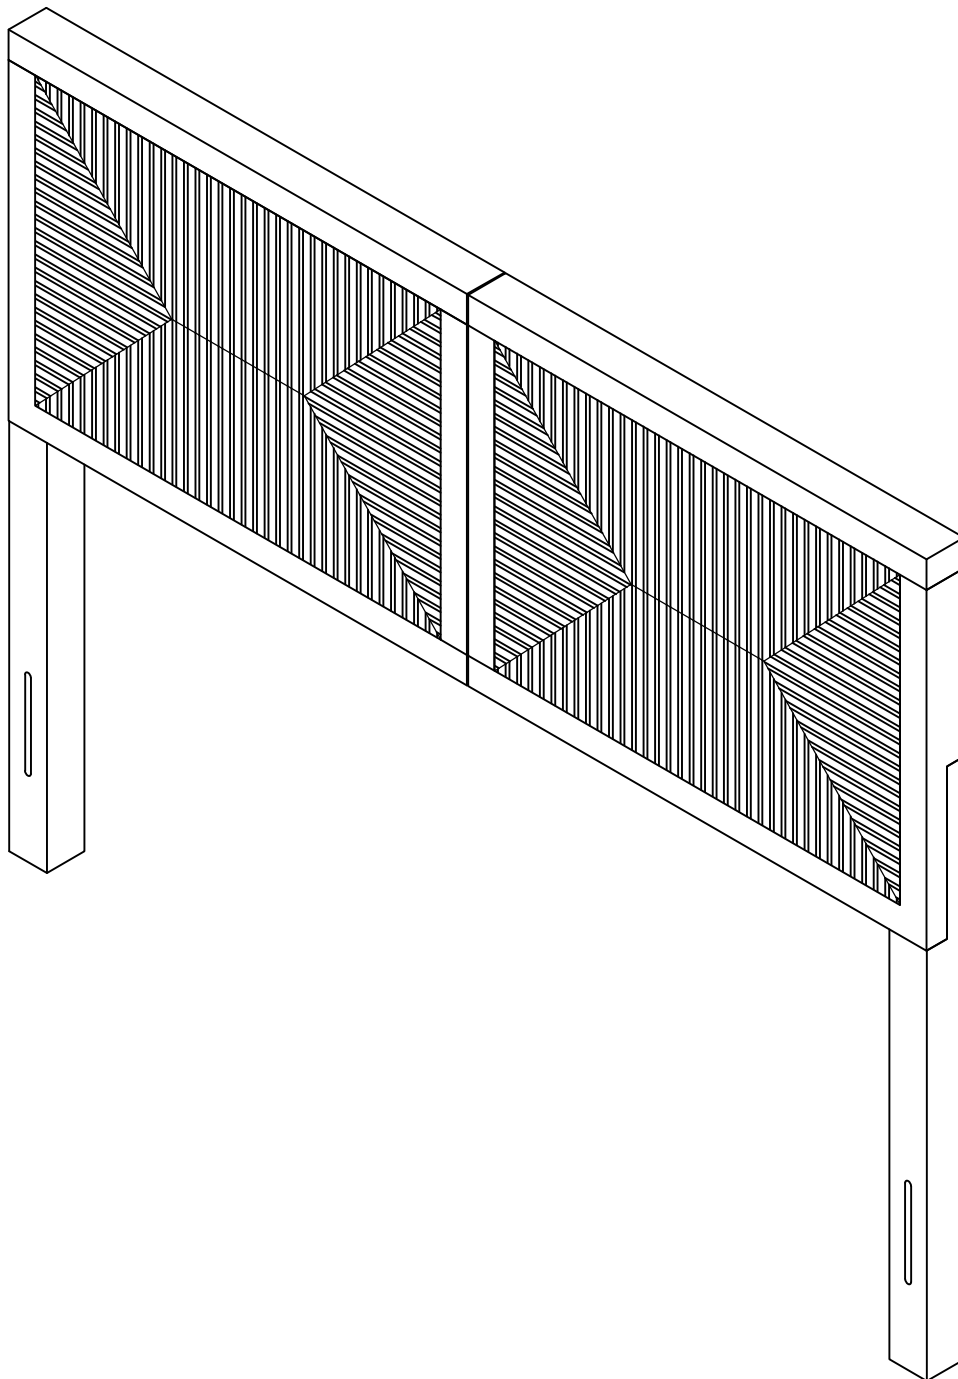

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Disclaimer: When properly assembled, this item is safe for intended use. Seller is not liable for any damages resulting from item being improperly assembled after purchase.

Thank you for your purchase