

ASSEMBLY INSTRUCTIONS

Description: Wren Square Dining Table

Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description	QTY
P1	Table Top	1
P2	Legs	4
P3	Stretchers	4

Hardware List

Item	Description	QTY
H1	Nuts Ø5/16"	8
H2	Lock Washers 5/16"	8
H3	Flat Washers 5/16"	8
H4	Open Wrench 5/16"	1
H5	Wood Screw 8*1-1/2"	8

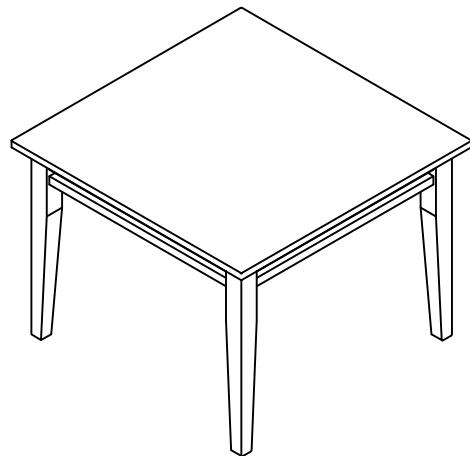

Assembly Procedures:


Step 1: Assemble the table on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach one leg (P2) to the bottom of table top (P1) as shown below.

(H1)x2 Nuts Ø5/16"

(H2)x2 Lock Washers 5/16"

(H3)x2 Flat Washers 5/16"

(H4)x1 Open Wrench 5/16"

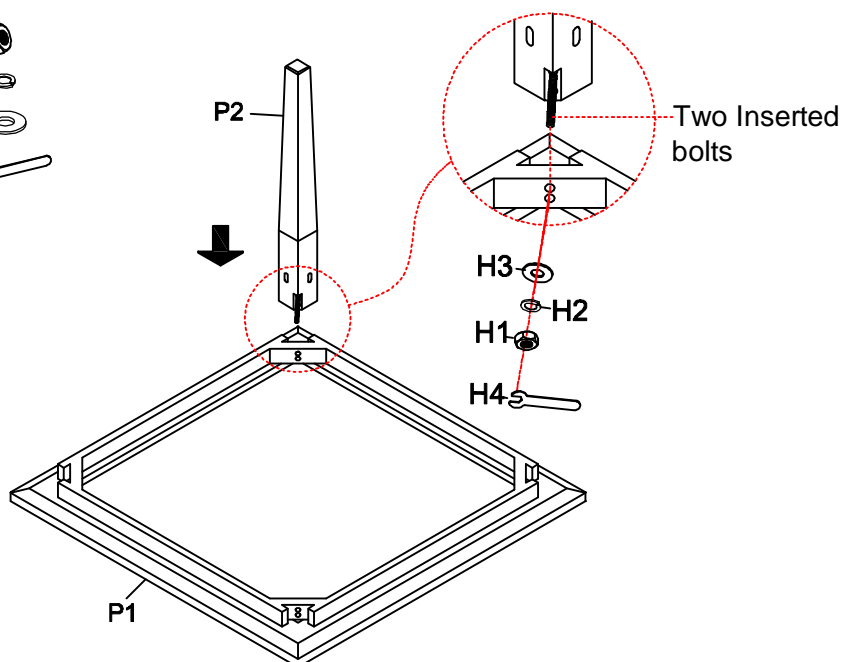


Step 2. Insert the stretchers (P3) to the assembled leg(P2), then attach other two legs (P2) to the bottom of table top (P1) and stretchers (P3) as shown below.

(H1)x4 Nuts Ø5/16"

(H2)x4 Lock Washers 5/16"

(H3)x4 Flat Washers 5/16"

(H4)x1 Open Wrench 5/16"

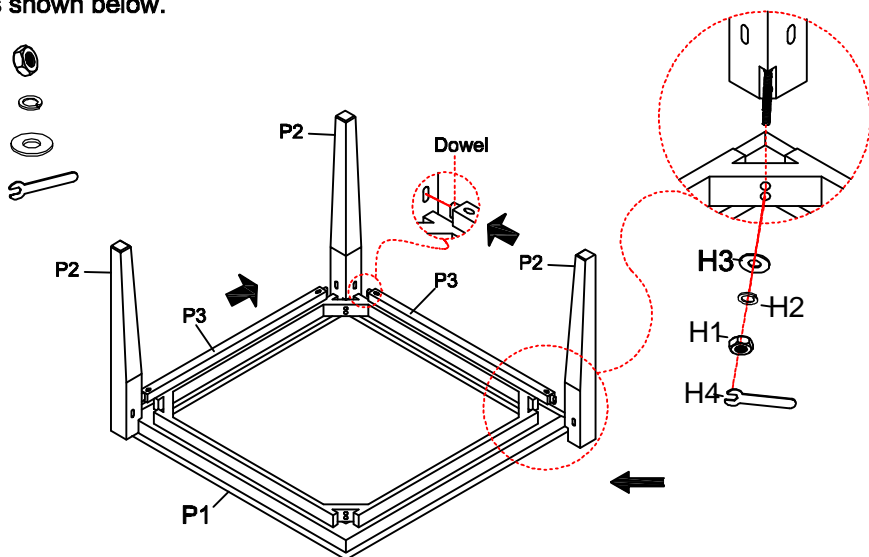

Step 3. Attach the stretchers (P3) and the fourth leg (P2) to the assembled legs (P2) and the bottom of table top (P1) as shown below.


(H1)x2 Nuts Ø5/16"

(H2)x2 Lock Washers 5/16"


(H3)x2 Flat Washers 5/16"

(H4)x1 Open Wrench 5/16"

(H5)x8 Wood Screw 8*1-1/2"

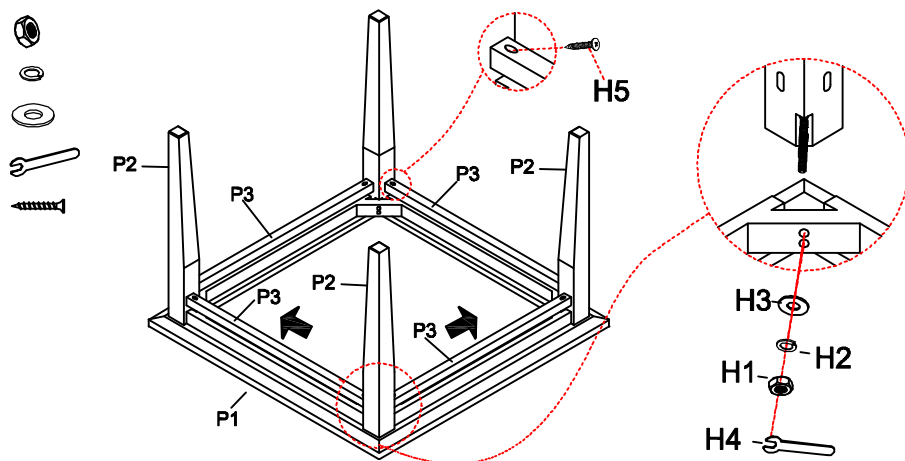

Step 4. Securely tighten all bolts with open wrench(H5), turn the assembled table to an upright position, make sure the table is level, aligned properly. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

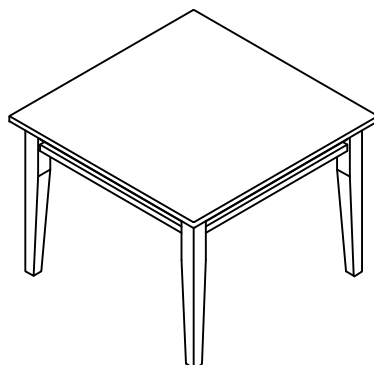

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase

ASSEMBLY INSTRUCTIONS

Description: Wren Dining Side Chair






Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.








Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description		QTY
P1	Chair Back		1
P2	Seat Cushion		1
P3	Left Front Leg	 (P3)	1
P4	Right Front Leg	 (P4)	1
P5	Front Stretcher		1



Hardware List

Item	Description		QTY
H1	Long Bolts $\phi 5/16"$ x 3-1/4"L		4
H2	Medium Bolts $\phi 5/16"$ x 1-3/4"L		2
H3	Short Bolts $\phi 5/16"$ x 1-1/2"L		4
H4	Lock Washers 5/16"		10
H5	Flat Washers 5/16"		10
H6	Allen Wrench 5/16"		1
H7	Wood Screw 8*1-1/2"		2

Assembly Procedures:


Step 1: Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the seat cushion (P2) to the chair back (P1) as shown below.

- (H2)x2 Medium Bolts $\phi 5/16"$ x 1-3/4"L 
- (H4)x2 Lock Washers 5/16" 
- (H5)x2 Flat Washers 5/16" 
- (H6)x1 Allen Wrench 5/16" 

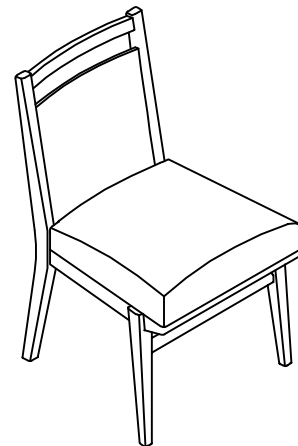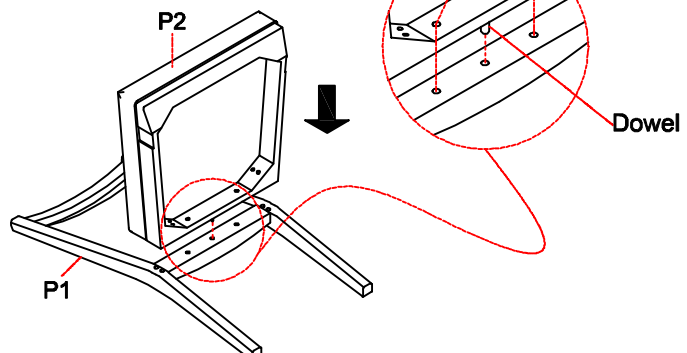

Step 2. Attach the seat cushion (P2) to the leg of chair back (P1) as shown below.


- (H1)x4 Long Bolts $\phi 5/16$ "x 3-1/4"L
- (H4)x4 Lock Washers 5/16"
- (H5)x4 Flat Washers 5/16"
- (H6)x1 Allen Wrench 5/16"

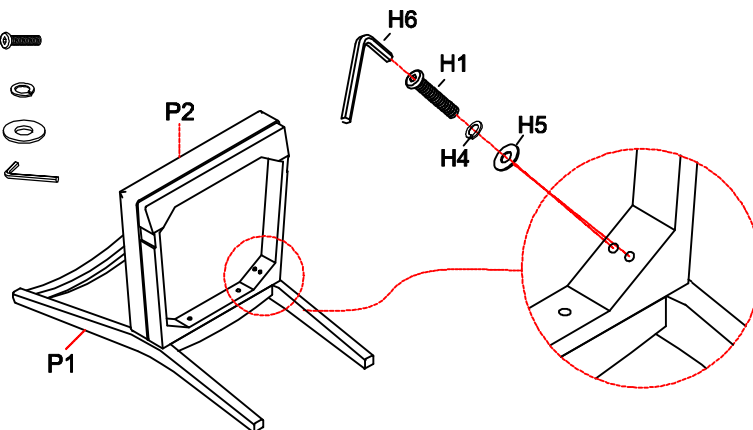

Step 3.


- a. Attach the left front leg (P3) to the bottom of seat cushion (P2).
- b. Insert the front stretcher (P5) to the left front leg (P3), then attach the right front leg (P4) to the bottom of seat cushion (P2) and front stretcher (P5) as shown below.

- (H3)x4 Short Bolts $\phi 5/16$ "x 1-1/2"L
- (H4)x4 Lock Washers 5/16"
- (H5)x4 Flat Washers 5/16"
- (H6)x1 Allen Wrench 5/16"

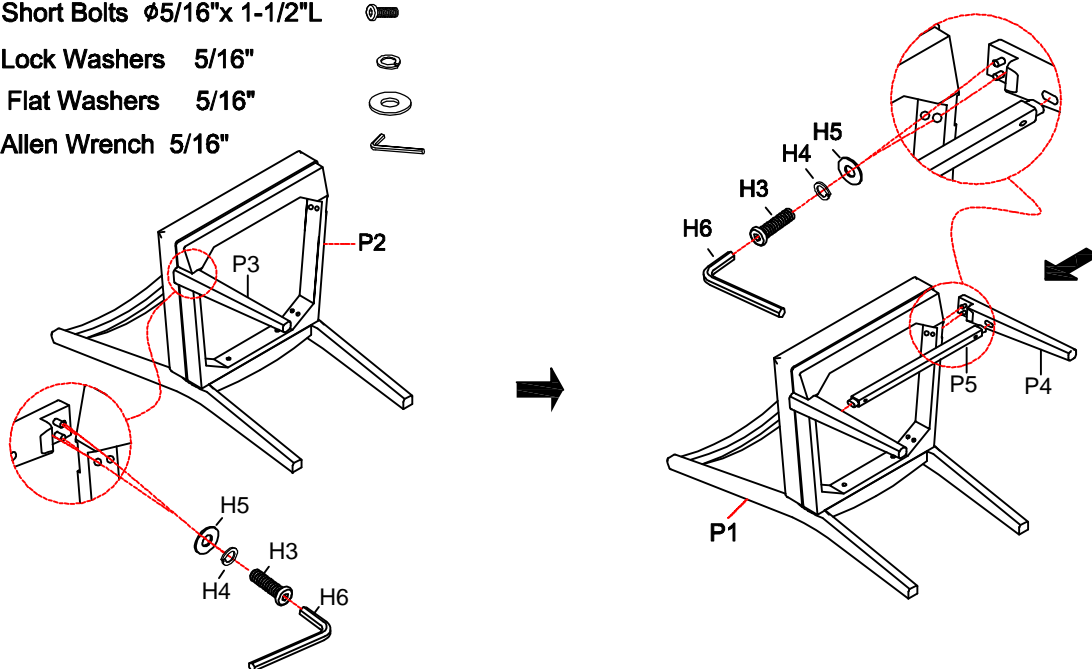

Step 4. Securely tighten all bolts with Allen wrench (H6). Tighten screws (H7) through the stretcher (P5) to the front legs (P3&P4), turn the assembled chair to an upright position, make sure the chair is level, aligned properly. Assembly is complete. Failure to follow these instructions may cause the bolts to misalign during assembly.

- (H7)x2 Wood Screw 8*1-1/2"

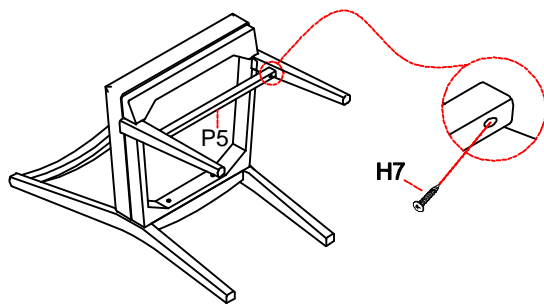

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase