



**Important safety instructions:**


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.


**Pre-assembly:**

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

**Parts List**

Item	Description	QTY
P1	Top Panel	 1
P2	Cabinet Body	 1
P3	Bottom Panel	 1
P4	Legs	 4
P5	Shelf	 1

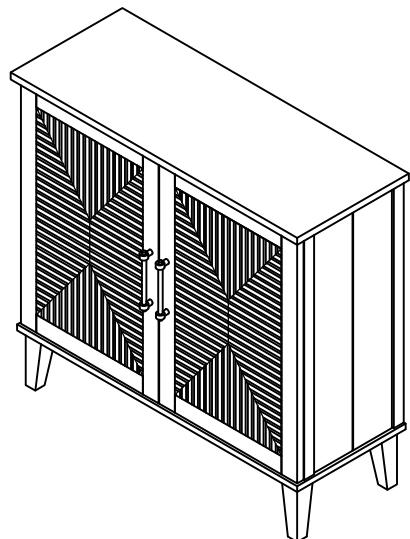**Hardware List**

Item	Description	QTY
H1	Bolts M6 X 35mm	 12
H2	Bolts M6 X 20mm	 12
H3	Lock Washer Ø6 x Ø11 x 2mm	 24
H4	Flat Washer Ø6 x Ø13 x 1mm	 24
H5	Allen Wrench 4 mm	 1
H6	Shelf Pin	 4
H7	Screw JP 6 x 1/2"	 4
H8	 Screw Driver ( Not Include )	
H9	Anti Tip Kit	 1 SET


**DISCLAIMER:**

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

**Assembly Procedures:**


Step1.

- 1) Assemble the chest on a flat, soft surface such as a carpet or cloth to prevent scratching the finishing.

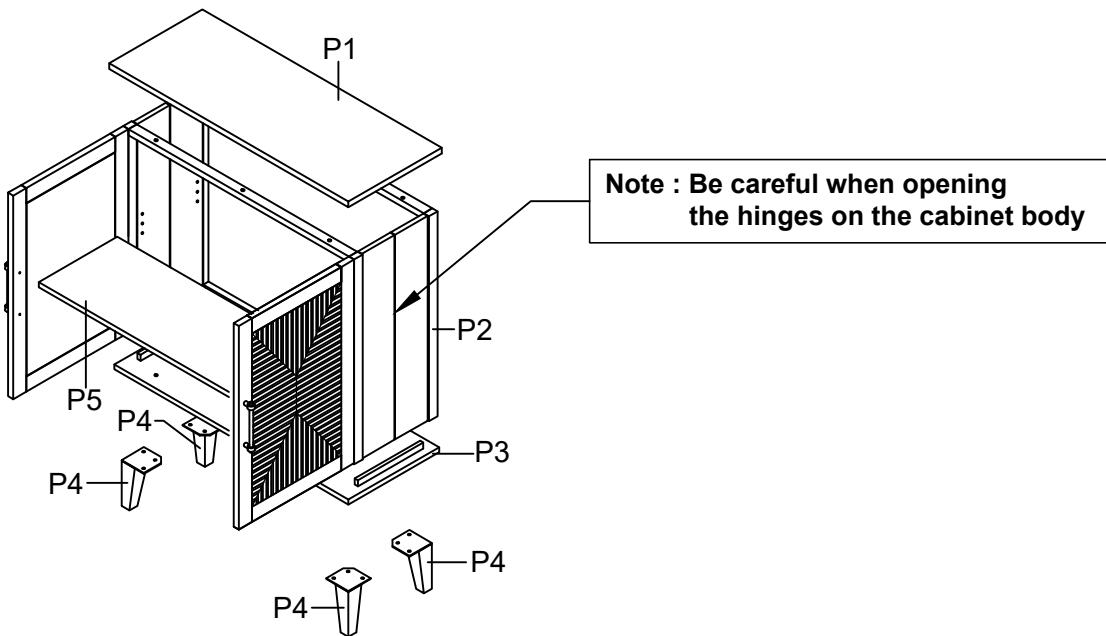

- 2) Open the assembled cabinet body (P2) and doors. Next attach the Top Panel (P1) to the assembled cabinet body (P2) as show below.

(H1)x6 Bolts M6 X 35mm




(H3)x6 Lock Washer Ø6 x Ø11 x 2mm



(H4)x6 Flat Washer Ø6 x Ø13 x 1mm



(H5)x1 Allen Wrench 4 mm

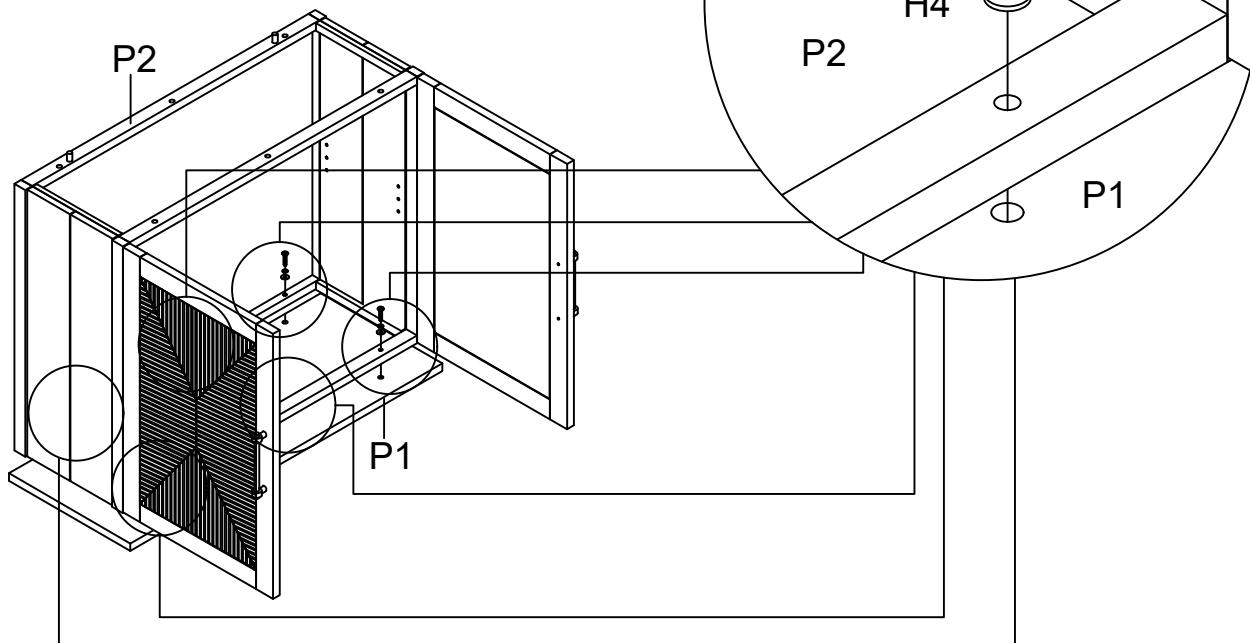

Step 2. Attach the Bottom Panel (P3) to the assembled Cabinet Body (P2) as shown below.

(H1)x6 Bolts M6 X 35mm





(H3)x6 Lock Washer Ø6 x Ø11 x 2mm



(H4)x6 Flat Washer Ø6 x Ø13 x 1mm



(H5)x1 Allen Wrench 4 mm

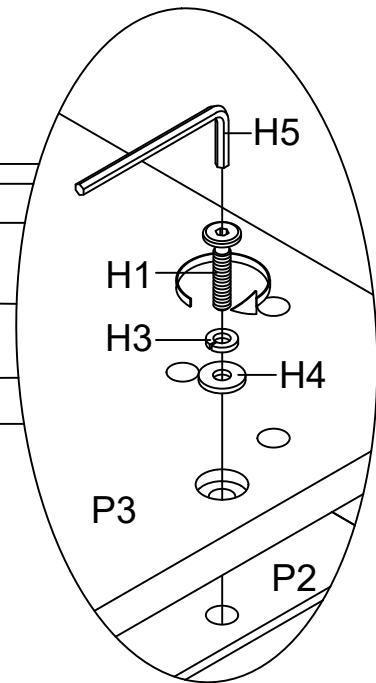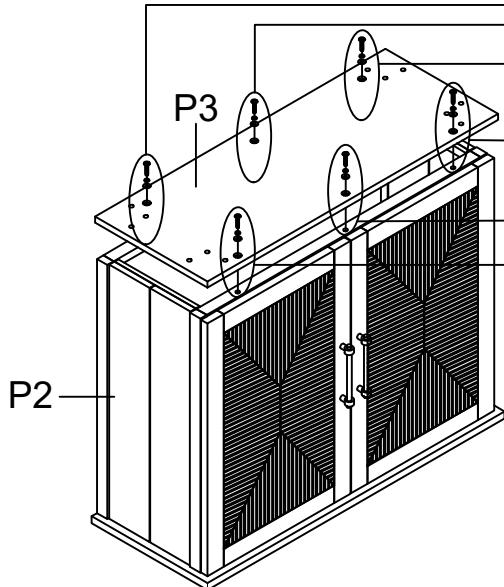

Step 3.

1) Attach the Legs (P4) to the assembled Bottom Panel (P3) as shown below.

2) Securely tighten all the bolts with Allen wrench (H5).

(H2)x12 Bolts M6 X 20mm





(H3)x12 Lock Washer Ø6 x Ø11 x 2mm



(H4)x12 Flat Washer Ø6 x Ø13 x 1mm



(H5)x1 Allen Wrench 4 mm

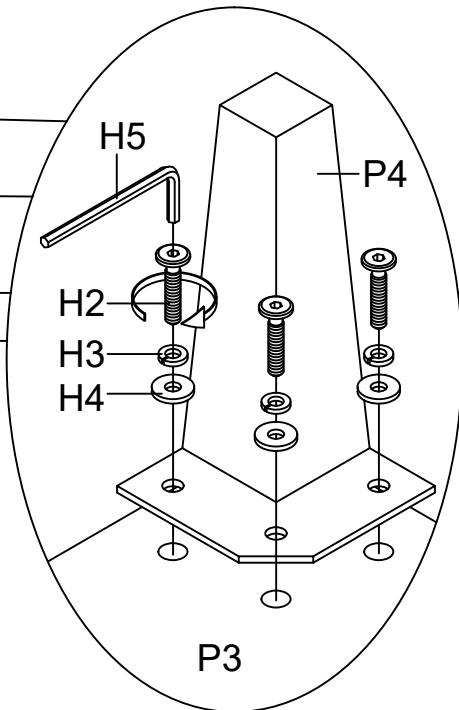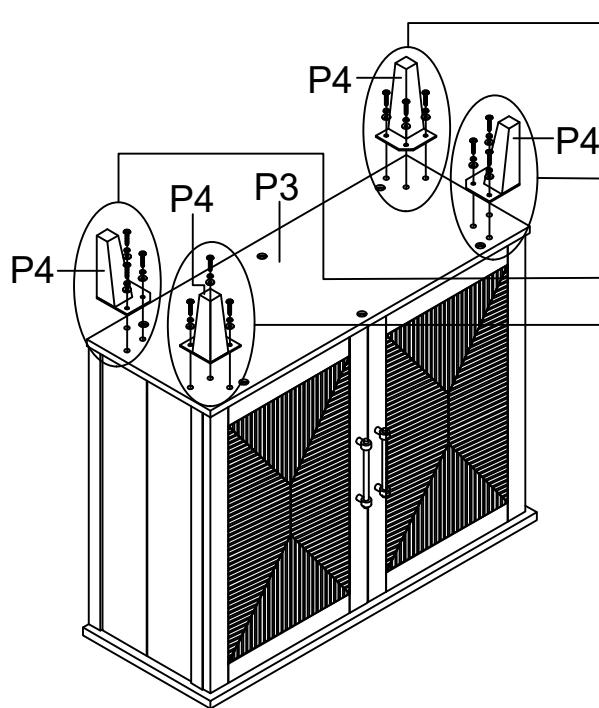

## Step 4.

- 1) Turn the assembled cabinet to an upright position.
- 2) Open the doors. Inside shelf pin (H6) to cabinet body (P2), the attach shelf (P5) to the shelf pin (H6) and Screw pin Shelf (H7) to shelf (P5) as shown below.



(H6)x4 Shelf Pin



(H7)x4 Screw JP 6 x 1/2"





(H8) Screw Driver ( Not Include )

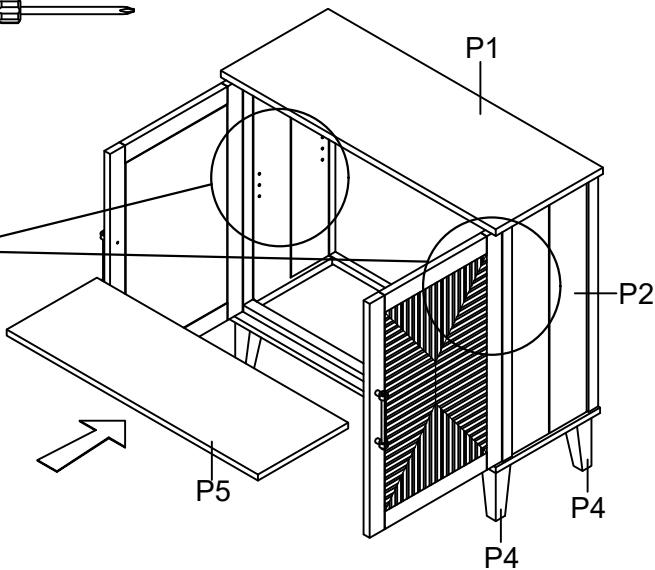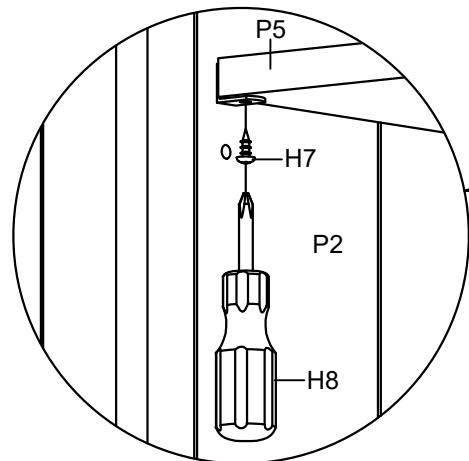

## Step 5.

- 1) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**
- 2) **Recommend that you attach the products to a wall as a safety precaution.** Please see the other instructions "Furniture Safety Bracket Tip Resistant".

(H9)x1 Anti Tip Kit

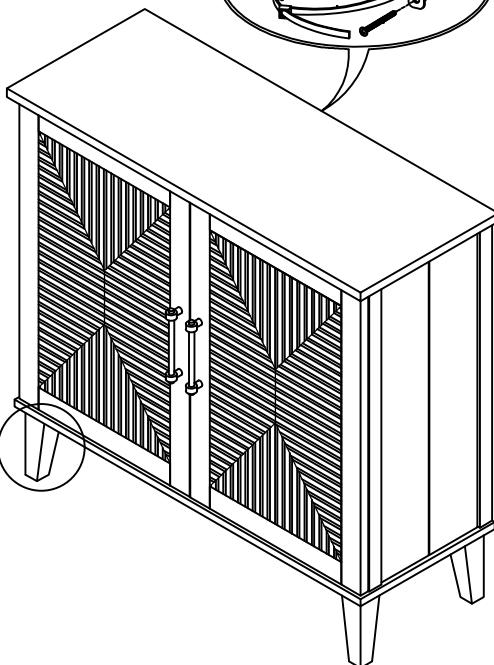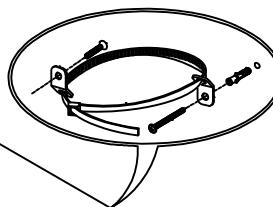

Note: Legs can be adjusted with adjustable levelers.

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.**

Thank you for your purchase

# Furniture Safety Bracket Tip Resistant

- Designed to help prevent furniture tipover.
- Detachable strap allows for easy moving of furniture for cleaning.
- Also helps prevent furniture from tipping during minor tremors.

## Short Screw (1pc)



## Long Screw (1pc)



## Strap (1pc)



## Bracket (2pcs)



## Plastic Anchor (1pc)




## Installation:

1. Locate a wall stud behind your furniture. Position a bracket on the stud approximately 1" below the top frame of the furniture. Mark and drill pilot hole into the center of the stud with a 5/16" drill bit. Attach a bracket to the stud with the long screws provided.



2. On the back of the furniture, a bracket will need to be attached to the furniture frame at the top. To do this, temporarily move the furniture into its final position and mark the location of the wall bracket on the furniture frame. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for screws with a 5/16" drill bit. Attach the bracket to the furniture with the short screws provided.

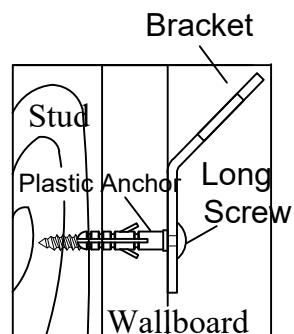


3. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug. Do not overtighten.

## Important:

Check to be sure the wall bracket is firmly screwed into wall stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

## Caution:

This product is not to be a substitute for proper parental supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws brackets or straps.

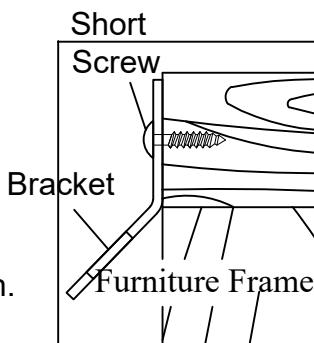

## Warning:

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label.

Do not remove!

