










OLIVER BUFFET

Assembly instructions:

PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	TOP FRAME		1
P2	BODY		1
P3	LEGS FRAME		2


HARDWARE LIST

No.	DESCRIPTION	IMAGE	QTY
H1	BOLT (Ø1/4" X 60 MM)		8
H2	BOLT (Ø1/4" X 40 MM)		4
H3	SPRING WASHER (Ø1/4")		12
H4	FLAT WASHER (Ø1/4")		12
H5	ALLEN KEY		1
H6	ANTI TIP KIT		1 SET

NOTE: PO # is located underneath/ at the back side of each item. Please be prepared to provide this # should any claim be necessary.


CAUTION: Item is heavy. Assembly should be performed by two people.

1

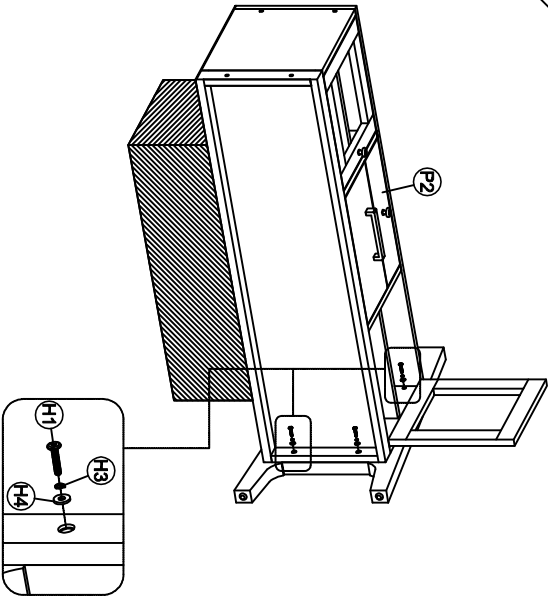


* Don't tighten bolts until step 3

2

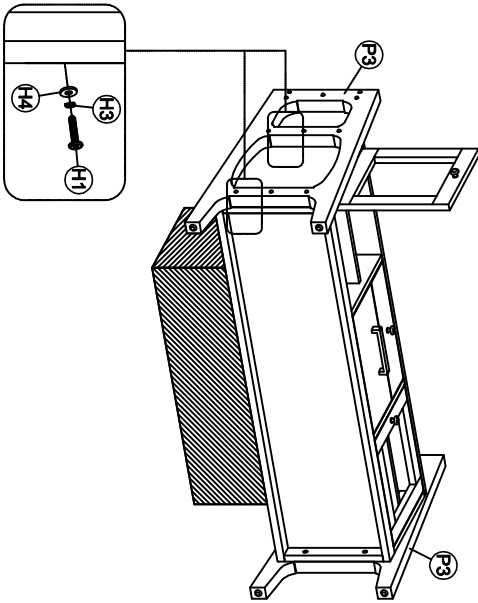


3

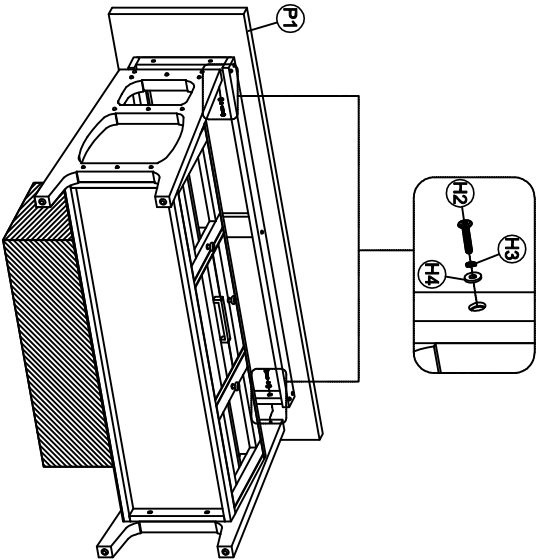

* Note: P1s, place right back side of top frame (P1) as marked by sticker

4

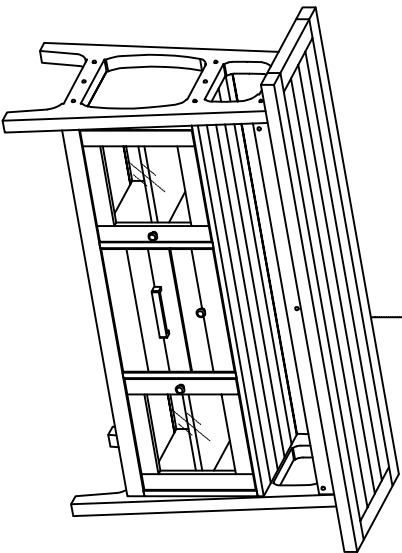

Anti Tip Kit has been attached to the product. Please, read guideline thoroughly and then install immediately to prevent product from tipping.