



PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	ARMREST		2
P2	SEAT		1
P3	BACK		1
P4	FOOT REST		1
P5	LEG		2
P6	STUDDLE		1
P7	CUSHION		1


HARDWARE LIST

No.	DESCRIPTION	IMAGE	QTY
H1	Bolts		4
H2	Bolts		12
H3	Bolts		2
H4	PE Washers		2
H5	Metal Washers		18
H6	Allen Wrench		1

Step 1. Turn the foot rest (P4) over and attach the legs (P5) to the foot rest bottom frame by using bolts (H2) and metal washers (H5), securely tighten all bolts with Allen Wrench (H6).

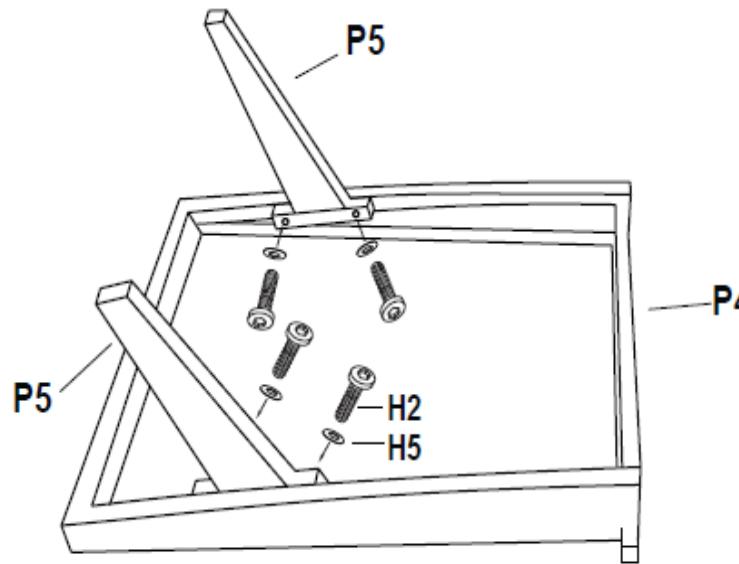

Step 2. Turn the seat (P2) over, and lock the armrest (P1) onto it with bolts(H2) and metal washers(H5).

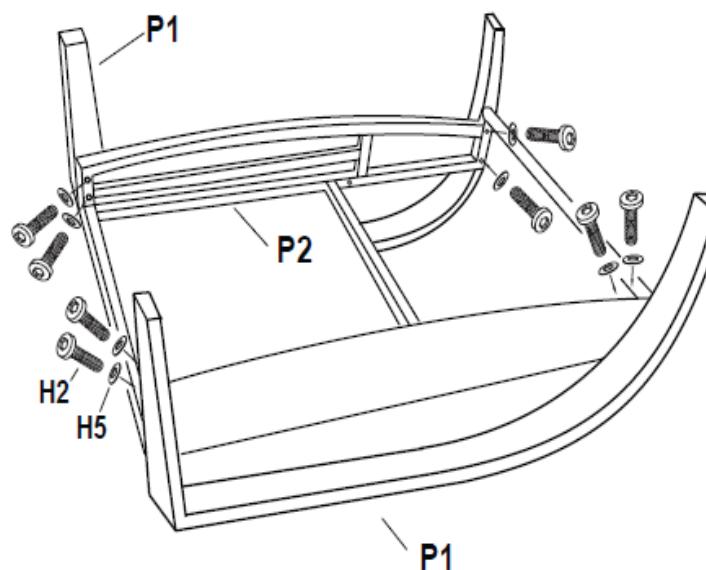


NOTE:PO# is located underneath/inside of each item. Please be prepare to provide this # should any claim be necessary.


CAUTION: Item is heavy assembly should be performed by two people.

Estimate assembly time: 5 minutes

Step 3. At first push foot rest(P4) into A place from (P2) seat back hold, and push to the front, then screwing studdle (P6) by using metal washers(H5) and bolts (H1).

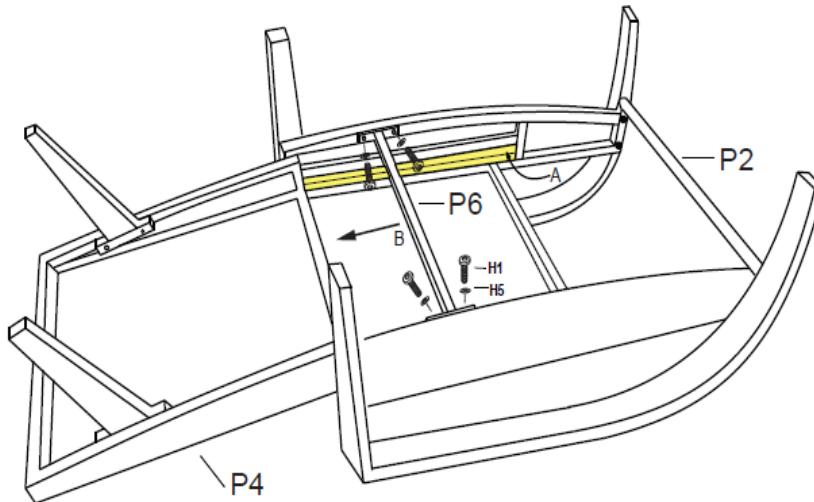

Step 4. Fix the back(P3) to the seat (P2) by using metal washers(H5) and bolts (H3) , then place the cushion(P7) on and the chaise upright on a level surface.

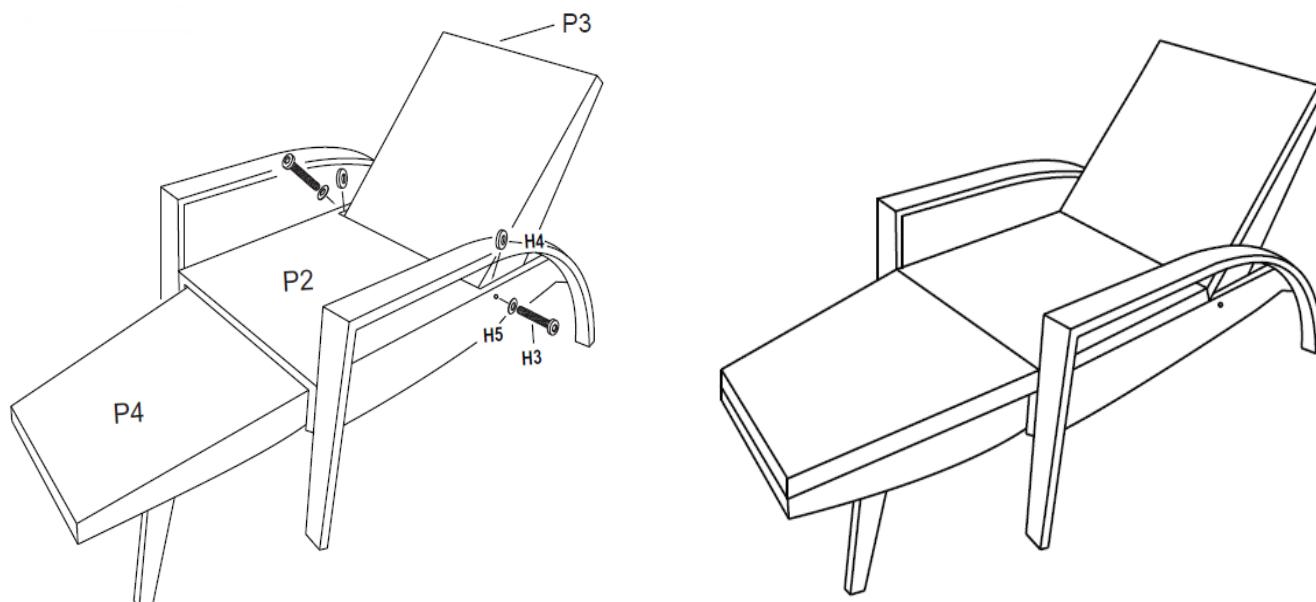

ASSEMBLY COMPLETED