

# ASSEMBLY INSTRUCTIONS

## Description: Lounge







### Important safety instructions:

- Please carefully read all instructions before assembling the lounge.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.










### Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

### Parts List

Item	Description		QTY
A	Right Metal Arm		1
B	Left Metal Arm		1
C	Stretcher		1
D	Back Cushion		1
E	Seat Cushion		1
F	Wood Arm Rests		2


### Hardware List

Item	Description		QTY
a	Bolts Ø1/4"×3/4"		4
b	Bolts Ø1/4"×1-1/2"		4
c	Bolts Ø1/4"×1-1/2"		4
d	Bolts Ø1/4"×2"		5
e	Bolts Ø1/4"×2-3/8"		2
f	Lock Washers 1/4"		6
g	Big flat washers 1/4" (22mm)		2
h	Small flat washers 1/4" (10mm)		4
i	Allen Wrench 1/4"		1

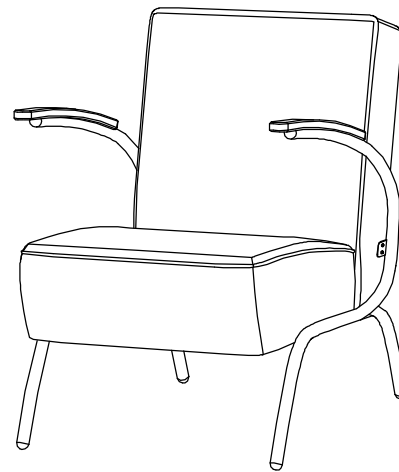


### Assembly Procedures:


Step 1. Assemble the lounge on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the tube stretcher (C) between the right metal frame (B) and the left metal frame (A) according to the label "R" and "L" on the right metal frame (B), the left metal frame (A) and the ends of tube stretcher (C).

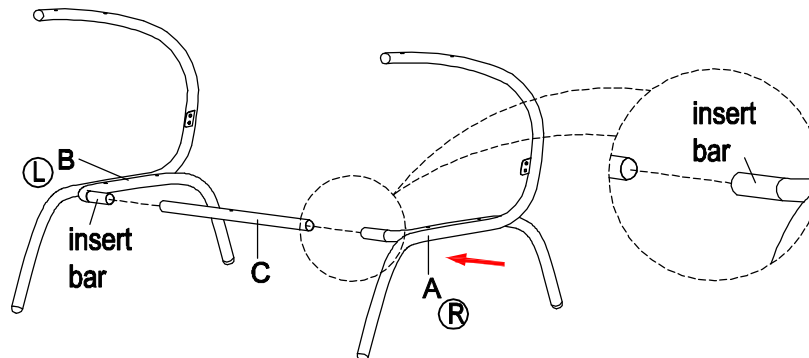


Step 2. Loosely tighten the bolts (a) to the stretcher and side metal frame (A & B) with Allen wrench (i).

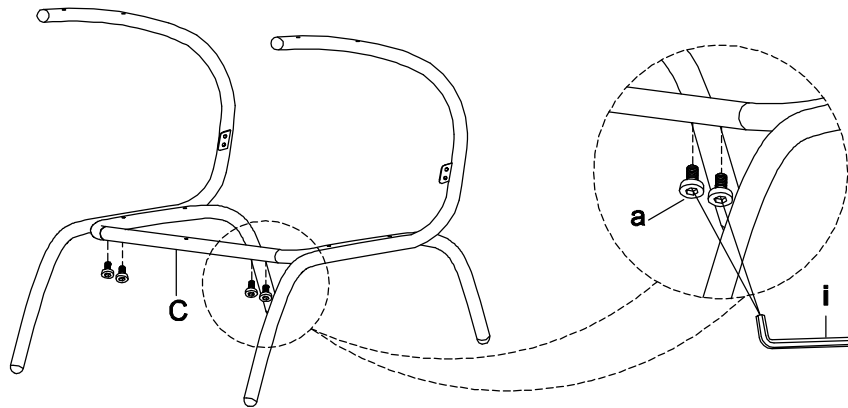

Step 3. Open the bottom covering of seat cushion (E), then attach the seat cushion (E) to the back cushion (D) using bolts (e), lock washers (f) and flat washers (g). Loosely tighten the bolts (e) with Allen wrench (i).

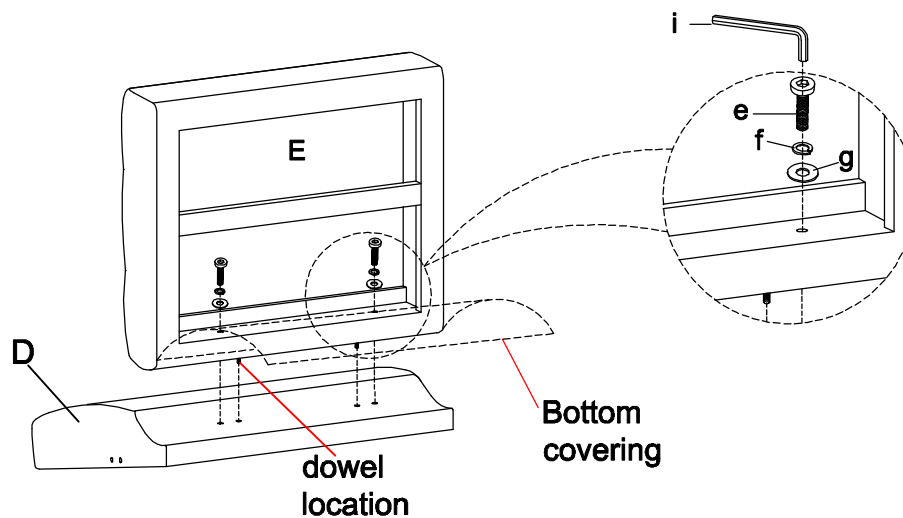


Step 4. Attach the assembled lounge (D, E) to the assembled frame (A, B, C) using bolts (d). Loosely tighten the bolts (d) with Allen wrench (i).

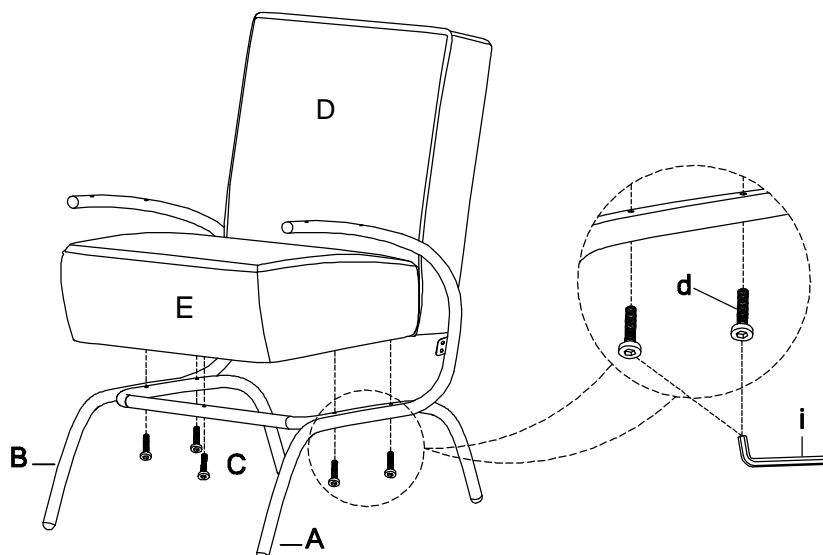

**Step 4**

**Step 5.**

- 1) Attach the metal arm to the side of back cushion using bolts (c), lock washers (f) and flat washers (h). Loosely tighten with Allen wrench (i) as shown below.
- 2) Attach the wood arm rests (F) to the metal arm (A, B) using bolts (b). Loosely tighten all bolts with Allen wrench (i).
- 3) Securely tighten all bolts, but do not over tighten the bolts.
4. Assembly are complete. Failure to follow these instructions may cause the bolts to misalign during assembly.

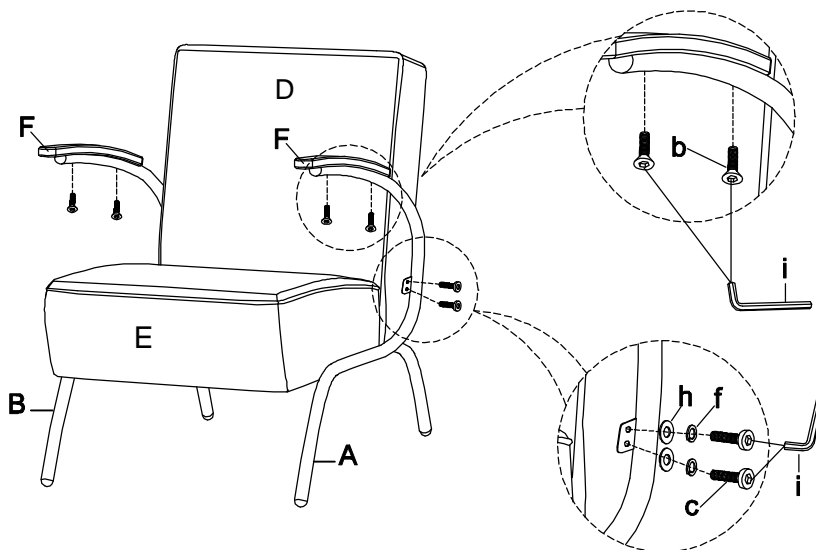

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

**Thank you for you purchase**