

ASSEMBLY INSTRUCTIONS

Description: Bar Stool








Important safety instructions:

- Please carefully read all instructions before assembling the bar stool.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.








Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
A	Bar Stool Top		1
B	Left Leg		1
C	Right Leg		1
D	Front Top Rail	 D	1
E	Front stretcher	 E	1
F	Back Top Rail	 F	1
G	Back stretcher	 G	1


Hardware List

Item	Description		QTY
a	Bolts Ø1/4"×1-1/4"		8
b	Bolts Ø1/4"×2"		4
c	Lock Washers 1/4"		12
d	Flat Washers 1/4"(12mm)		8
e	Flat Washers 1/4"(19mm)		4
f	Allen Wrench 1/4"		1
g	Wooden Plugs		8

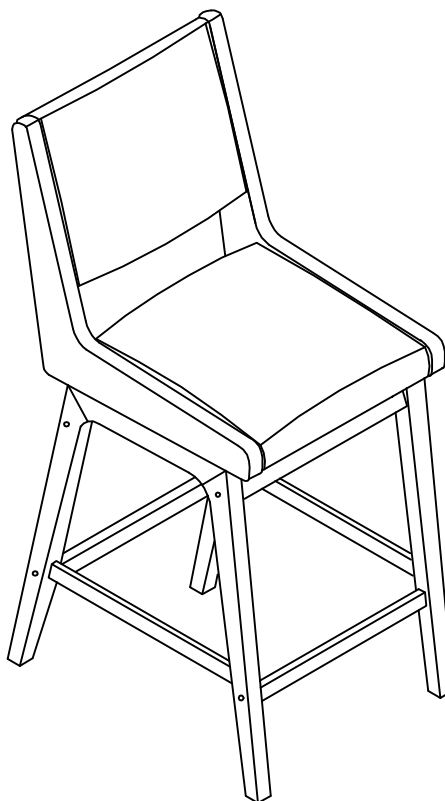


Assembly Procedures:


Step 1. Assemble the bar stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the top rails (D, F) and stretchers (E, G) to the right leg (C) according the labels (D, F, E, G) on each rail, each stretcher and the holes of right leg (C) and using bolts (a), lock washers (c) and flat washers (d). Loosely tighten with Allen wrench (f) . Do not tighten screws at this time.

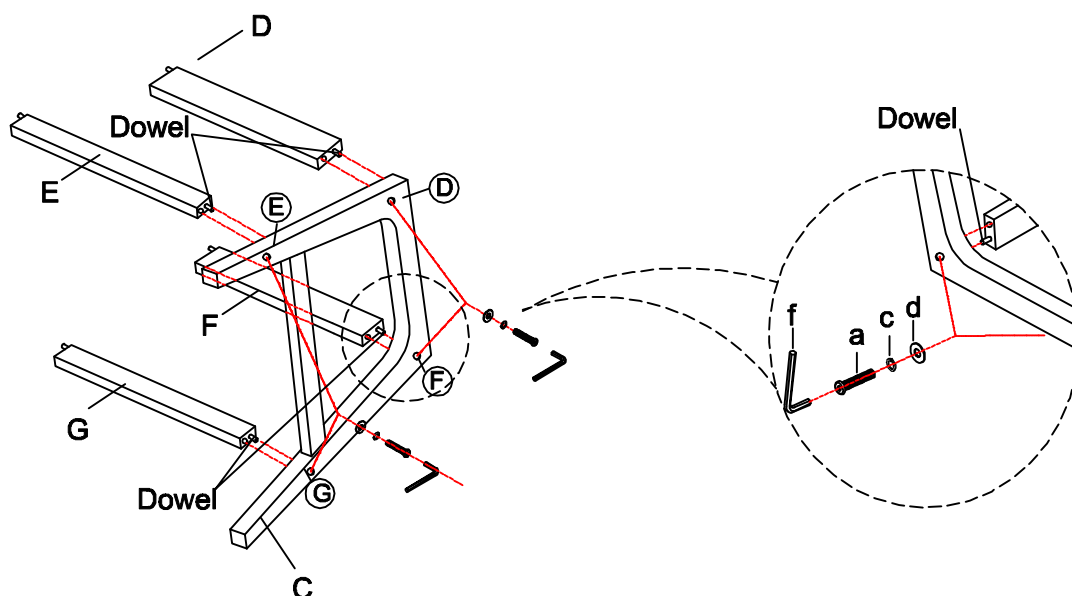


Step 2. Repeat the step 1 to attach left legs (B) to the rails and stretchers (D,E,F,G) using bolts (a), lock washers (c) and flat washers (d). Securely tighten all bolts by Allen wrench (f), but do not over tighten the bolts.

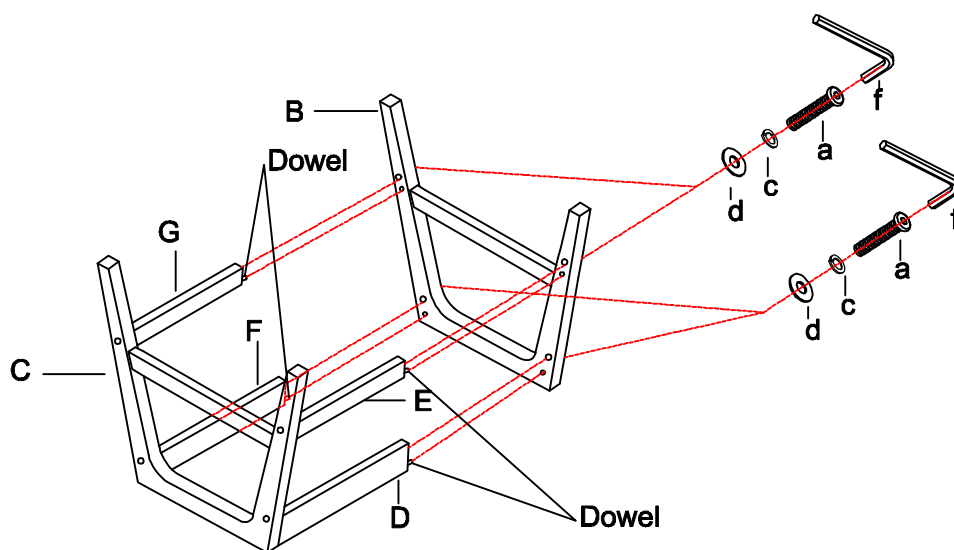

Step 3. Attach the assembled base to the bottom of the chair top (A) to using bolts (b), lock washers (c) and flat washers (e). Securely tighten all bolts by Allen wrench (f), but do not over tighten the bolts.

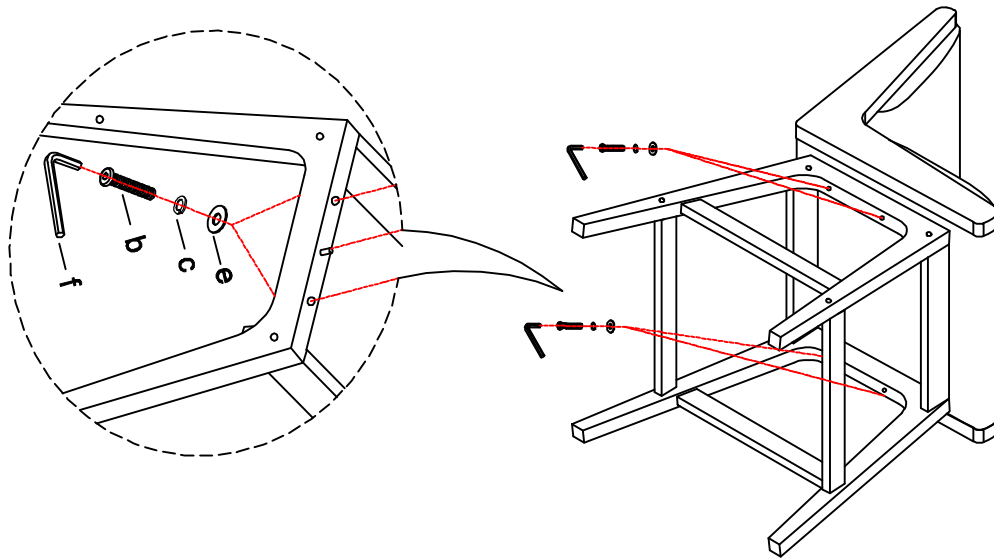

Step 3. Insert wood plugs (g) over exposed screw holes, cover with cloth and strike softly with hammer until plug is flush with wood surface. Assembly is complete.

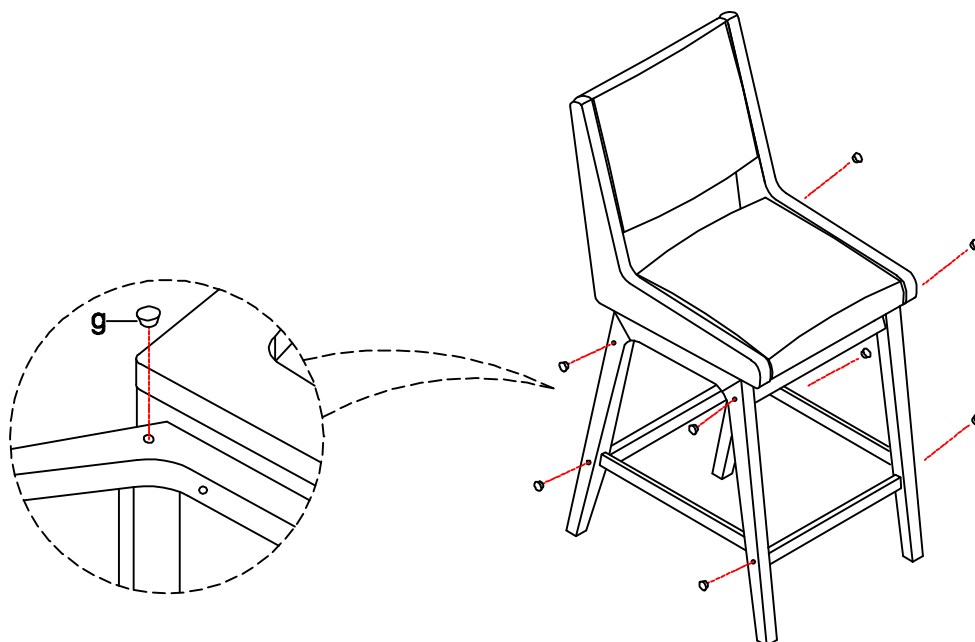

Thank you for your purchase