

**Description: Buffet****Important safety instructions:**


- Please carefully read all instructions before assembling the buffet.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

**Pre-assembly:**

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

**Parts List**

Item	Description	QTY
A	Top Panel 1	1
B	Top Panel 2 with rail	1
C	Bottom Panel	1
D	Side Panels	2
E	Medium Upright Panel	1
F	Back Panel	1
G	Shelf	2
H	Sliding Doors	2
I	Leg Frames	2
J	Middle Support	1

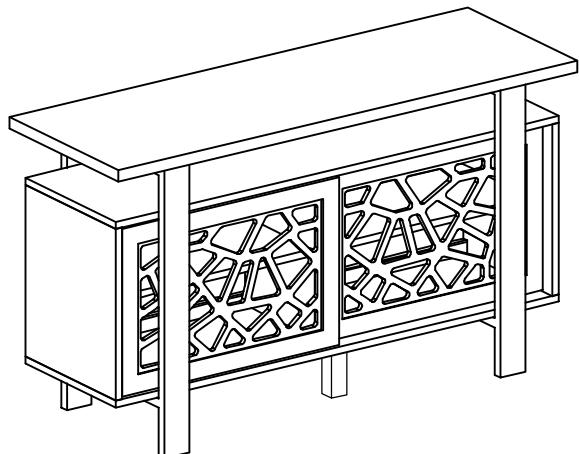**Hardware List**

Item	Description	QTY
a	Bolts Ø1/4"**1-1/4"	22
b	Flat Washers Ø1/4"	22
c	Lock Washers Ø1/4"	22
d	Allen Wrench Ø1/4"	1
e	Round Head Screws(#7*16mm)	26
f	Shelf Supports	8
g	Screws(#7*16mm)	8

### Assembly Procedures:

Step 1. Turn the top panel 2 on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the side panels (D) and medium upright panel (E) to the top panel 2 (B) with rail. Loosely tighten all bolts with Allen wrench (d).

(a)x6      **Bolts**




(b)x6      **Flat Washers**



(c)x6      **Lock Washers**



(d)x1      **Allen Wrench**

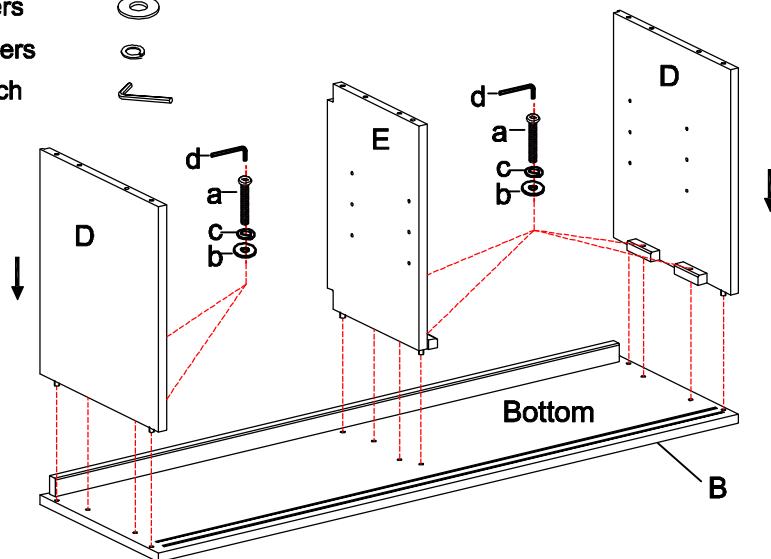

Step 3. Attach the bottom panel (C) to the side panels (D) and medium upright panel (E). Loosely tighten all bolts with Allen wrench (d).


(a)x6      **Bolts**



(b)x6      **Flat Washers**




(c)x6      **Lock Washers**

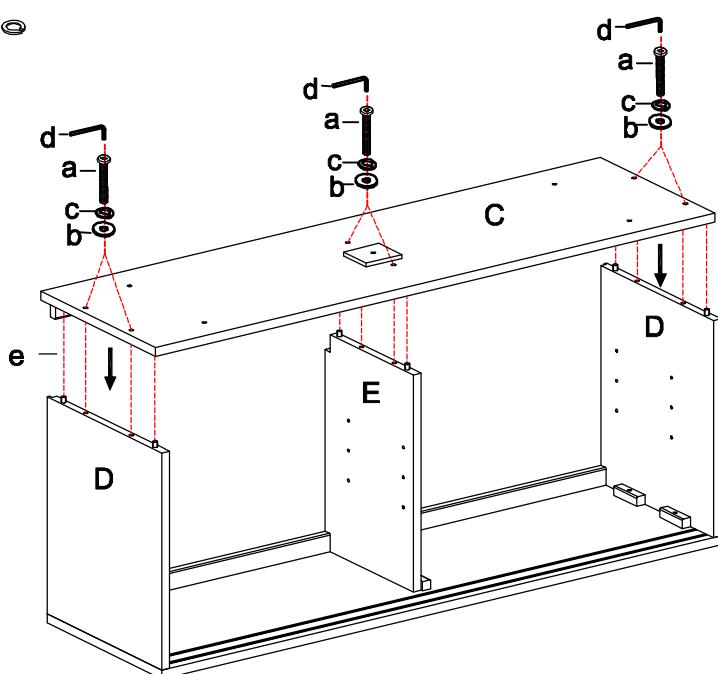


Step 3. Insert shelf supports (f) to the hole on the side panels (D) and medium panel (E). Then attach the shelf (G) to the side panels (D) and medium upright panel (E) using screws (g) through the hole of shelf support (f) to the shelf (G) with screw driver(not provided).

(f)x8 Shelf Supports   
(g)x8 Screws 

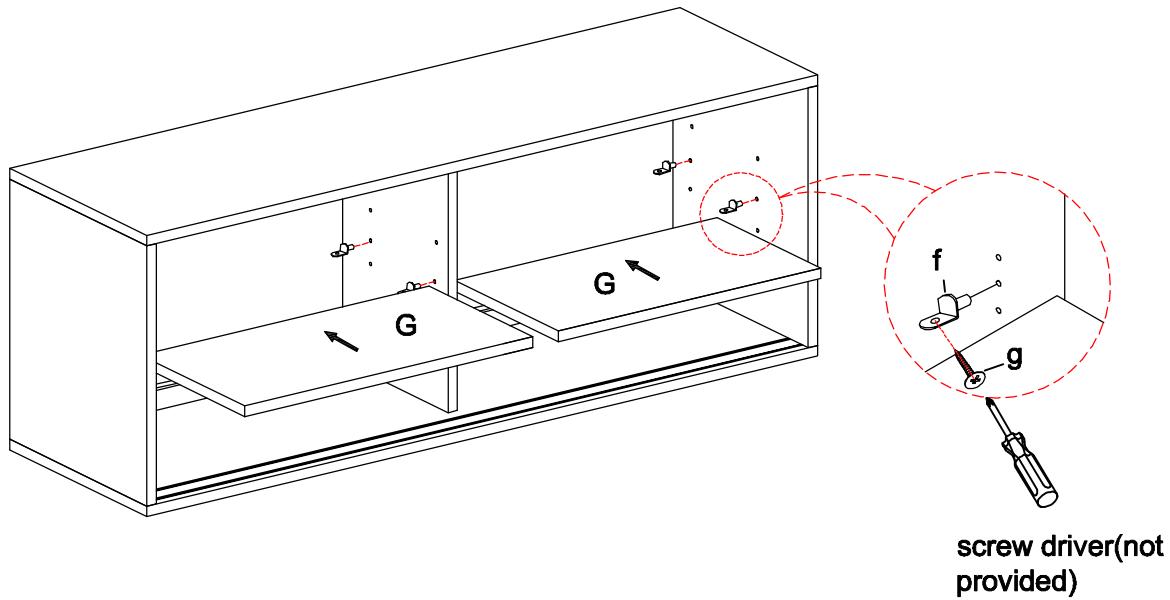


Step 4. Attach back panel (F) to back of the assembled top panel 2 (B), bottom panel (C), side panels (D) and medium panel (E) using round head screw (e) . Loosely tighten all the screw with screw driver(not provided).

(g)x26 Round Head Screws 

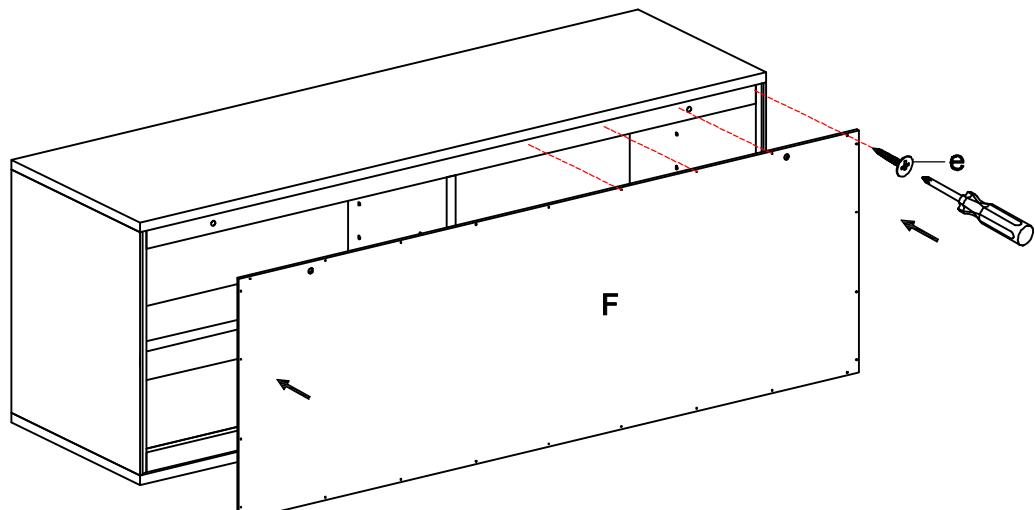


Step 5. Install the sliding doors (H).

- In order to install the sliding doors, the top guide pins must be locked in the fully retracted position. If they are not already, push them down until they click lock.(Illustration #1)
- Place the rear door bottom rollers in the back bottom track. Pivot the top of the door to align the top guide pins with the back upper track on the buffet. Push the button on the back of the top guide pins to release the lock allowing repeat with the other door in the front set of tracks.

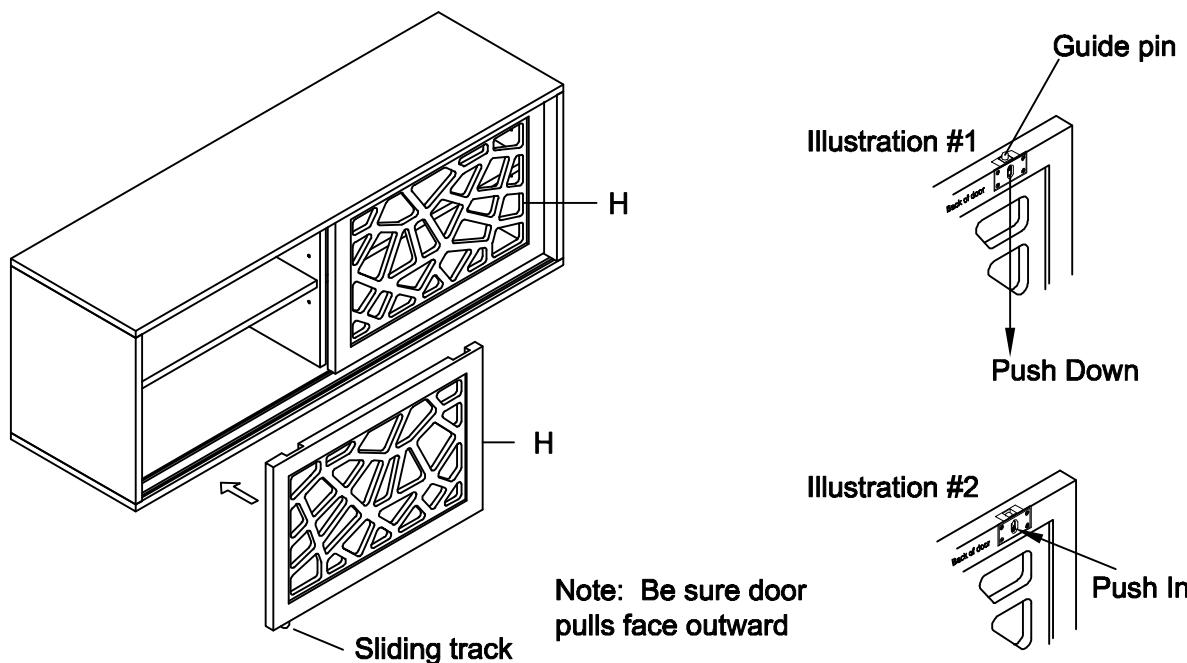

Step 6.

- Attach the leg frames (I) to the assembled top panel 2 (B), bottom panel (C), side panels (D), back panel (F) and sliding doors (H). Loosely tighten all bolts with Allen wrench (d).
- Attach middle support (J) to the bottom of bottom panel (C). Securely tighten the middle support as shown.

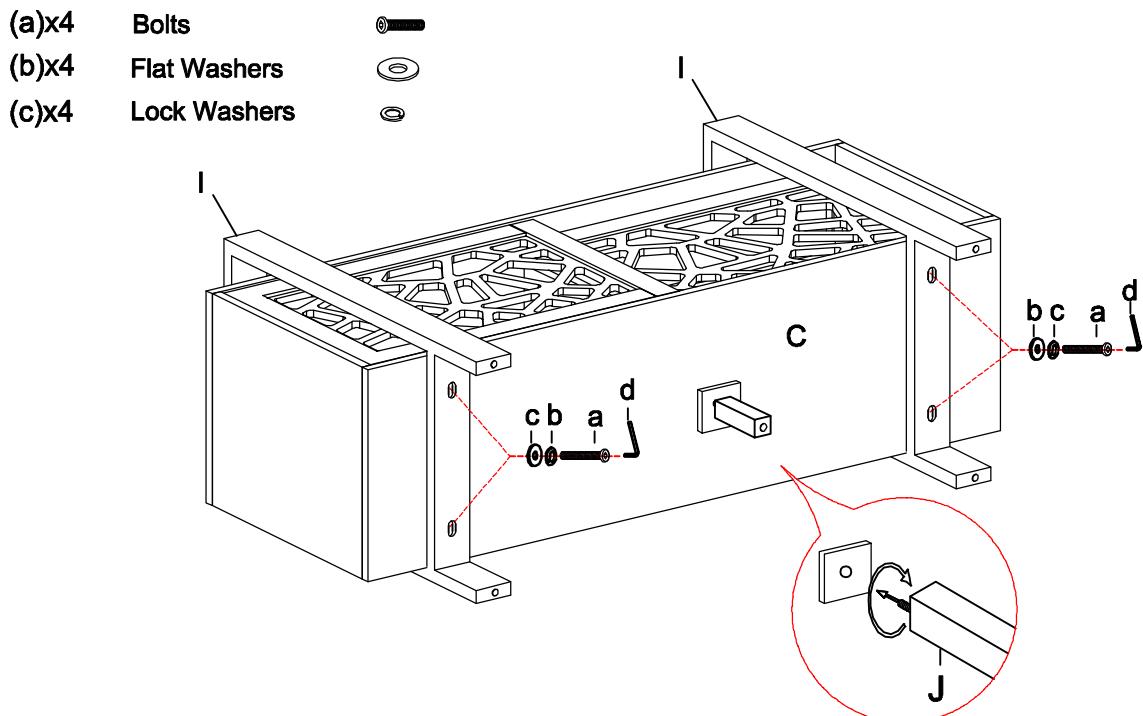


Step 7. Attach the two leg frames (I) to the back panel (F) . Loosely tighten all bolts with Allen wrench (d).

(a)x2 **Bolts** 

(b)x2 **Flat Washers** 

(c)x2 **Lock Washers** 

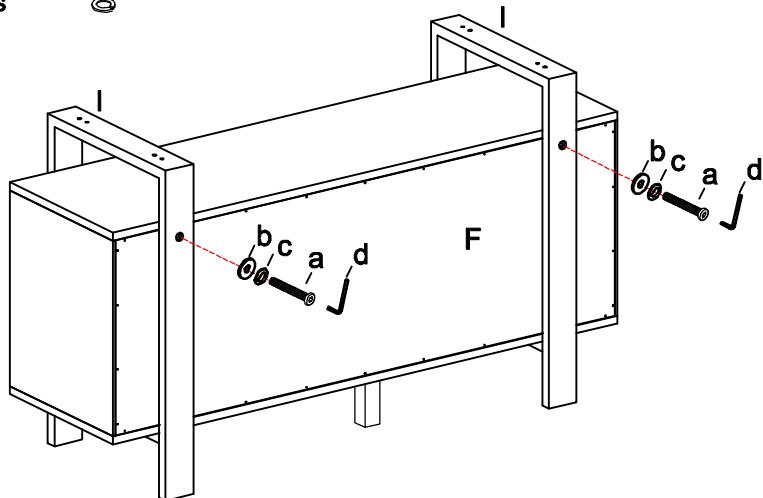


**Step 8.**

- 1) Attach the top panel 1 (A) to the leg frame (I). Loosely tighten all bolts with Allen wrench (d).
- 2) Assembly is complete.
- 3) Following "Furniture Safety Bracket Tip Resistant" assembly instructions to prevent a furniture from tipover.

(a)x4 **Bolts** 

(b)x4 **Flat Washers** 

(c)x4 **Lock Washers** 

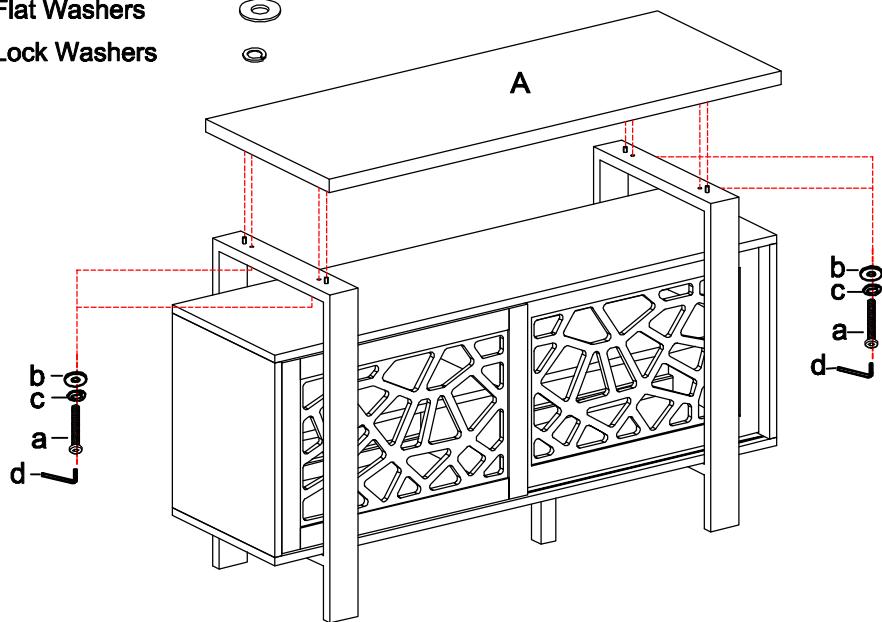

**ADDITIONAL NOTE ABOUT SAFETY:** BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

**Thank you for your purchase**

# Furniture Safety Bracket Tip Resistant

- Designed to help prevent furniture tipover.
- Detachable strap allows for easy moving of furniture for cleaning.
- Also helps prevent furniture tipover during minor tremore.

## Installation:

### Short Screw (1pcs)




### Long Screw (1pcs)



### Strap (1pcs)




### Bracket (2pcs)

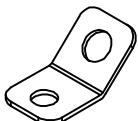


1. Locate a wall stud behind your furniture. Position a bracket on the stud approximately 1" below the top frame of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Attach a bracket to the stud with the long screws provided.



2. On the back of the furniture, a bracket will need to be attached to the furniture frame at the top. To do this, temporarily move the furniture into its final position and mark the location of the wall bracket on the furniture frame. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for screws with a 3/32" drill bit. Attach the bracket to the furniture with the short screws provided.

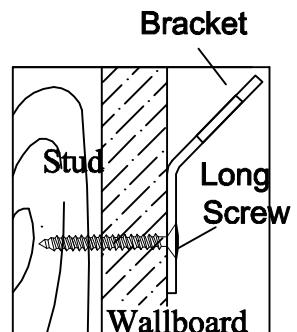

3. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug. Do not overtighten.

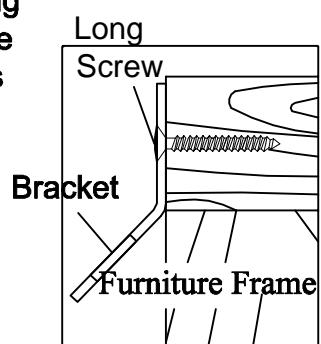

## Important:

Check to be sure the wall bracket is firmly screwed into wall stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

## Caution:

This product is not to be a substitute for proper parental supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws brackets or straps.

