

Important safety instructions:


- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description	QTY
P1	Chair Back	1
P2	Front legs	2
P3	Left Arm	1
P4	Right Arm	1
P5	Seat Frame	1
P6	Seat Cushion	1

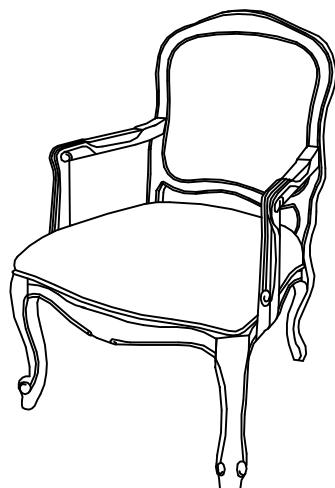**Hardware List**

Item	Description	QTY
H1	Big Long Bolts Ø5/16"**2-1/2"	8
H2	Big Short Bolts Ø5/16"**1-3/4"	3
H3	Big Lock Washers 5/16"	11
H4	Big Flat Washers 5/16"	11
H5	Big Allen Wrench 5/16"	1
H6	Small Short Bolts Ø1/4"**1-3/4" L	2
H7	Small Long Bolts Ø1/4"**1-1/2" L	2
H8	Small Lock Washers 1/4"	4
H9	Small Flat Washers 1/4"**5/8"	4
H10	Small Allen Wrench 1/4 "	1
H11	Screw	5
H12	Wooden Plugs	2

Assembly Procedures:

Step 1: Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.

Attach the seat frame(P5) to the legs of chair back (P1) as shown below.


(H1)x4 Big Long Bolts Ø5/16"**2-1/2" L

(H2)x3 Big Short Bolts Ø5/16"**1-3/4" L

(H3)x7 Big Lock Washers 5/16" Ø


(H4)x7 Big Flat Washers 5/16" Ø

(H5)x1 Big Allen Wrench 5/16" L

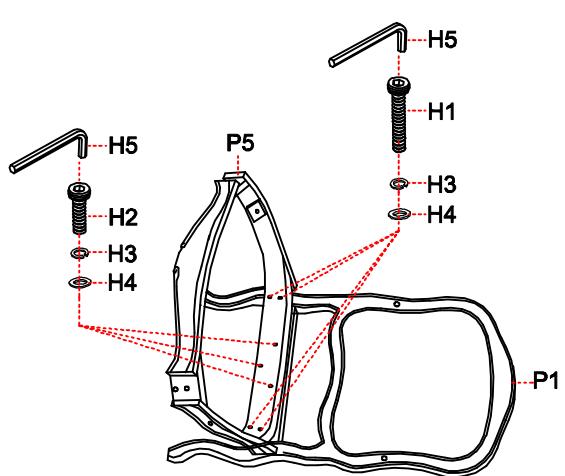

Step 2: Attach the front legs (P2) to the seat frame (P5) as shown below.


(H1)x4 Big Long Bolts Ø5/16" *2-1/2" L 
 (H3)x4 Big Lock Washers 5/16" 
 (H4)x4 Big Flat Washers 5/16" 
 (H5)x1 Big Allen Wrench 5/16" 

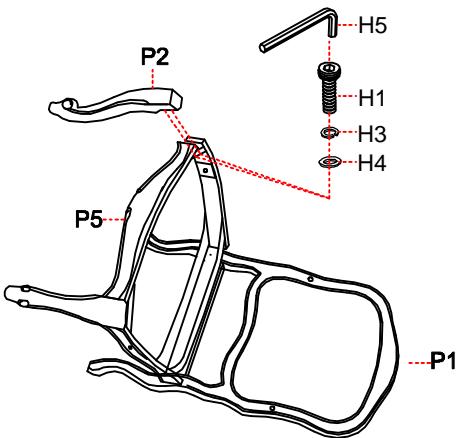

Step 3: Turn the assembled chair to an upright position.

Attach the left arm (P3) and right arm (P4) to the seat frame (P5) and chair back (P1) as shown below.



(H6)x2 Small Short Bolts Ø1/4" *1-3/4" L 
 (H7)x2 Small Long Bolts Ø1/4" *1-1/2" L 
 (H8)x4 Small Lock Washers 1/4" 
 (H9)x4 Small Flat Washers 1/4" *5/8" 
 (H10)x1 Small Allen Wrench 1/4" 

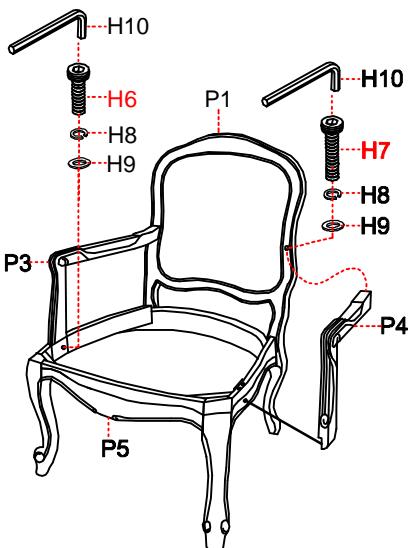

Step 4: Make sure the chair is level and securely tighten all bolts with Allen wrench (H6 & H10).

- Attach the seat cushion (P6) to the seat frame (P5) as shown below.
- Attach wooden plugs (H12) to each exposed bolt holes, tighten with rubber hammer to knock the wooden plug till its tighten. **Note:** use a soft cloth between the wooden plug and hammer to prevent damage to wooden plug finish.
- Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(H11)x5 Screw 
 (H12)x2 Wooden Plugs 

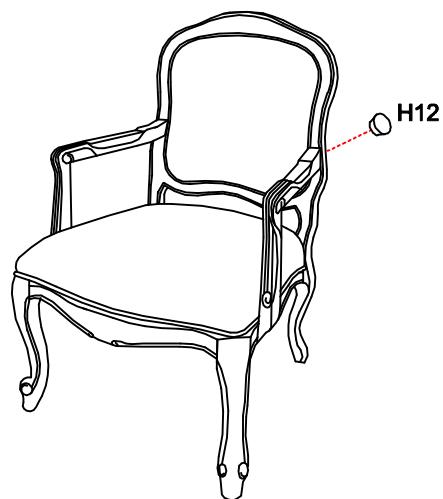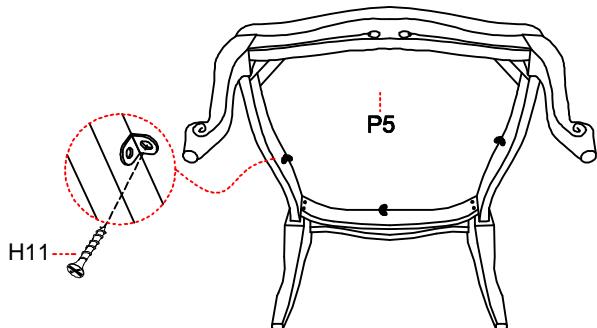

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase