


Step 2. Attach the front leg (B) to chair top (A) using bolts (a), lock washers (c) and flat washers (d). Securely tighten all bolts with Allen wrench (e), but do not over tighten the bolts.

Step 2

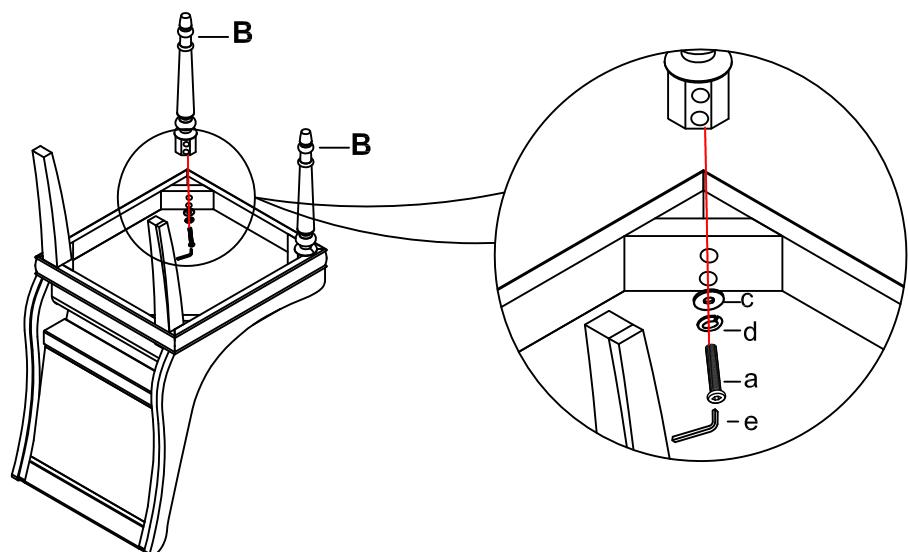

Step 3. Assembly is complete. Failure to follow these instructions may cause the bolts to misalign during assembly.

