

MADISON **PARK** ASSEMBLY INSTRUCTIONS

Description: Maverick Accent Chair









Important safety instructions:

- Please carefully read all instructions before assembling the chair.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.







Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Back Cushion		1
P2	Seat Cushion		1
P3	Left Leg		1
P4	Right Leg		1
P5	Rail-1 with "L" Bracket	 (P5)	1
P6	Rail-2	 (P6)	1
P7	Rail-3	 (P7)	1
P8	Rail-4 with "L" Bracket	 (P8)	1

Hardware List

Item	Description		QTY
H1	Lock Washers Ø5/16"		8
H2	Flat Washers Ø5/16" *16mm		8
H3	Bolts Ø5/16*1-3/4"L		8
H4	Half-round Washer Ø5/16"		8
H5	Open Wrench 5/16"		1
H6	Screws #8*5/8"		6

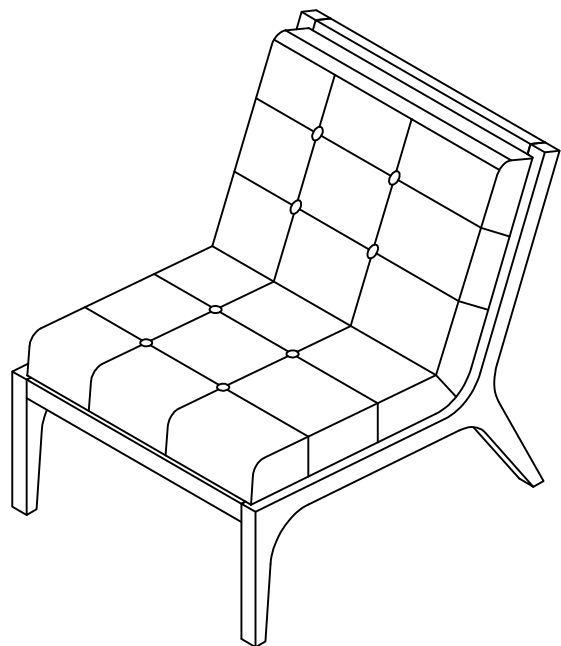

Assembly Procedures:

Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Loosely attach the left/right leg (P3/P4) to the each rail (P5,P6,P7,P8) following the labels "P5", "P6", "P7", "P8" on the rails as shown below. Securely tighten all bolts with open wrench (H5).


(H1)x8 Lock Washers Ø5/16"

(H2)x8 Flat Washers Ø5/16" *16mm

(H3)x8 Bolts Ø5/16*1-3/4"L

(H4)x8 Half-round Washer Ø5/16"

(H5)x1 Open Wrench 5/16"

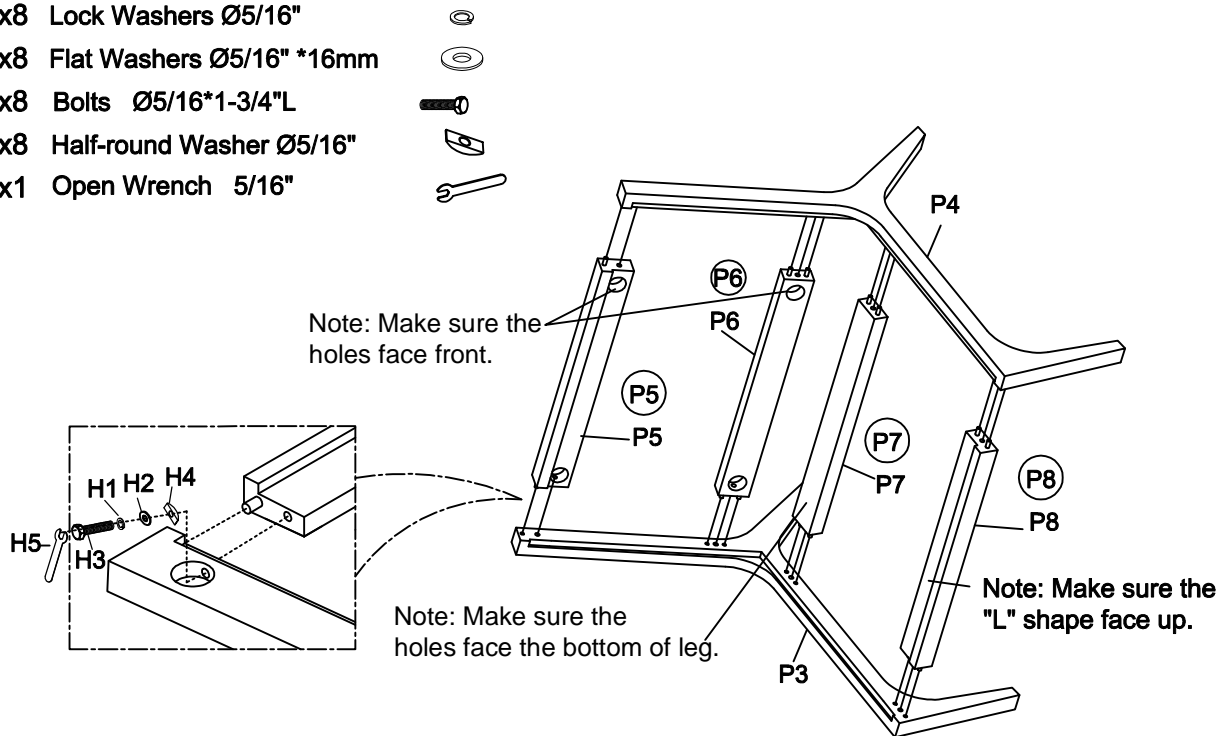


Step 2. Securely tighten all the bolts with open wrench (H5), but do not over tighten the bolts.

1) Insert the back cushion (P1) and seat cushion (P2) to the assembled frame, then attach seat cushion (P2) and back cushion (P1) to the assembled frame using the screws (H6) through the "L" bracket with screw driver(not provided) as shown below.

2) Turn the assembled chair to an upright position.

3) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(H6)x6 Screws #8*5/8"

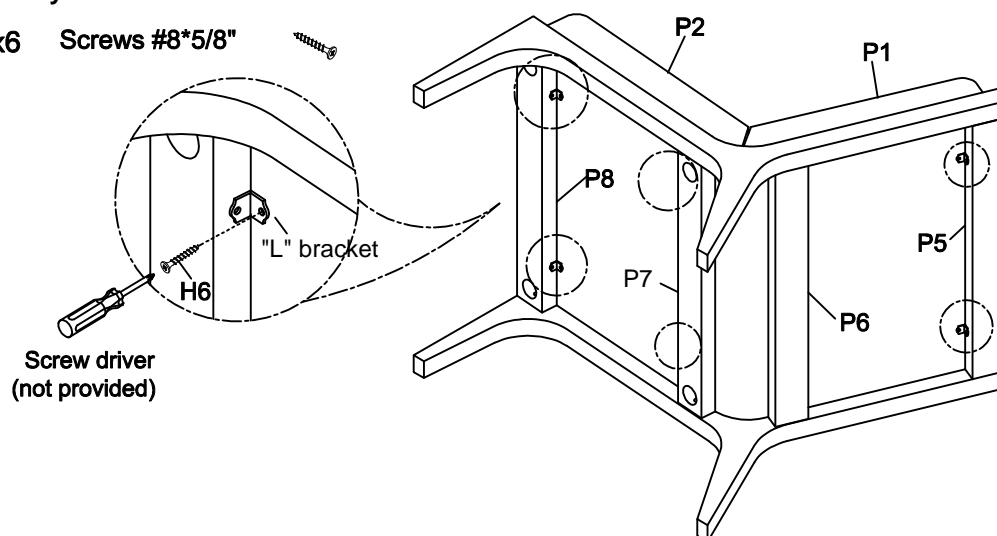

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase