








MADISON **PARK**

Assembly Instruction---Accent Chair


PARTS #	PARTS NAME	DRAWING	QTY
P1	Legs		4
P2	Chair		1

Hardware#	PARTS NAME	DRAWING	QTY
H1	Bolts $\phi 5/16 \times 1-8/16$ "		12
H2	Lock Washers $\phi 5/16$ "		12
H3	Flat Washers $\phi 5/16$ "		12
H4	Allen Wrench $\phi 5/16$ "		1

1. Turn the chair upside down and lay on protective carpet, Open the black fabric of the bottom, and take out the legs underneath the seat.

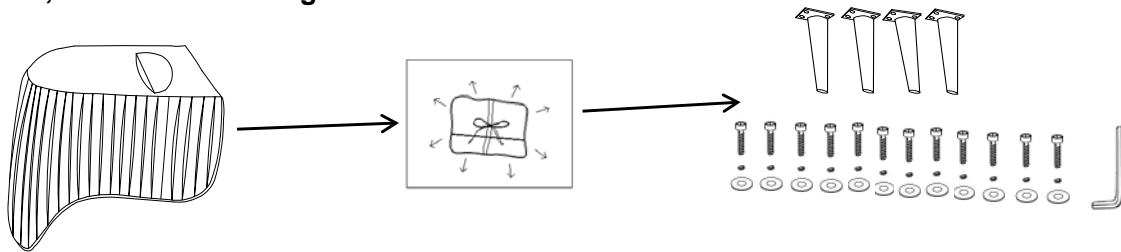

2. Attached the Legs to the seat frame by using Flat Washers (H3), Lock Washers (H2) and Bolts (H1). Securely tighten all bolts with Allen Wrench (H4).

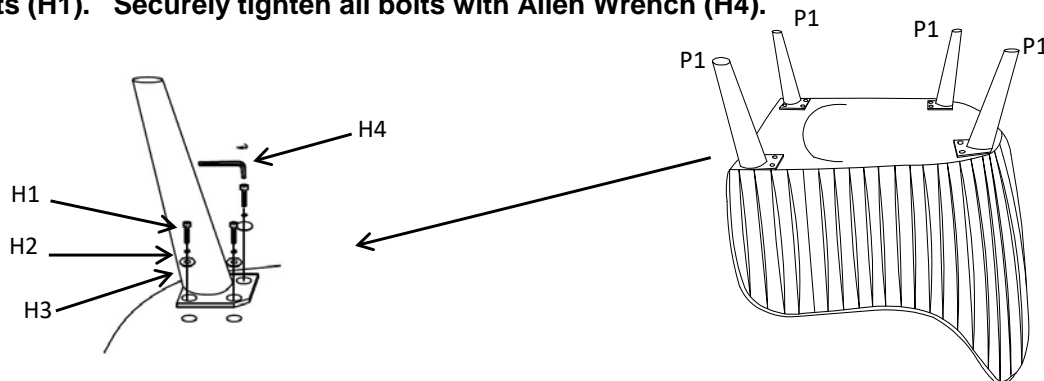

3. Turn the chair over and place it upright on a level surface.

