







**ASSEMBLY INSTRUCTIONS****Description:** Warren Accent Chair**Important safety instructions:**


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.







**Pre-assembly:**

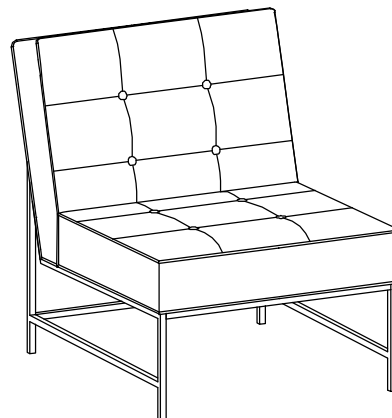- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

**Parts List**

| Item | Description         |   | QTY |
|------|---------------------|---|-----|
| P1   | Back Cushion        |    | 1   |
| P2   | Seat Cushion        |    | 1   |
| P3   | Left Leg Frame      |    | 1   |
| P4   | Right Leg Frame     |  | 1   |
| P5   | Chair Back Top Rail |  | 1   |
| P6   | Bottom Rail         |  | 3   |

**Hardware List**

| Item | Description               |   | QTY |
|------|---------------------------|---|-----|
| H1   | Short Bolts Ø1/4"*1/2"    |  | 16  |
| H2   | Medium Bolts Ø1/4"*1-1/8" |  | 6   |
| H3   | Long Bolts Ø1/4"*2-3/8"   |  | 2   |
| H4   | Lock Washers 1/4"         |  | 2   |
| H5   | Flat washers 1/4"         |  | 2   |
| H6   | Allen Wrench 1/4"         |  | 1   |


### Assembly Procedures:

**Step 1.** Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach chair back top rail (P5) and bottom rails (P6) to left leg frame (P3) and right leg frame (P4) as shown below. Securely tighten the bolts with Allen wrench (H6).

(H1)x16 Short Bolts  $\varnothing 1/4 \times 1/2$ "



(H6)x1 Allen Wrench 1/4"

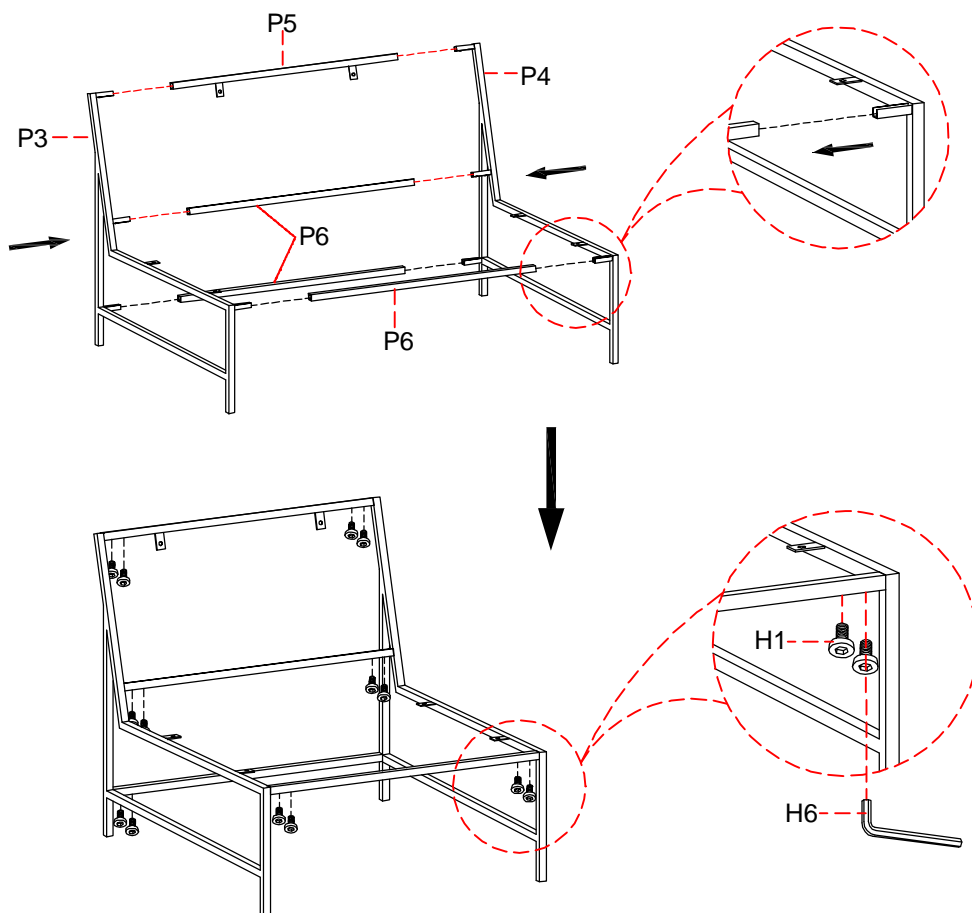

**Step 2.** Open the bottom covering, then attach seat cushion (P2) to back cushion (P1) as shown below, tighten with Allen wrench (H6) .

(H3)x2 Long Bolts  $\varnothing 1/4 \times 2-3/8$ "




(H4)x2 Lock Washers 1/4"



(H5)x2 Flat washers 1/4"



(H6)x1 Allen Wrench 1/4"

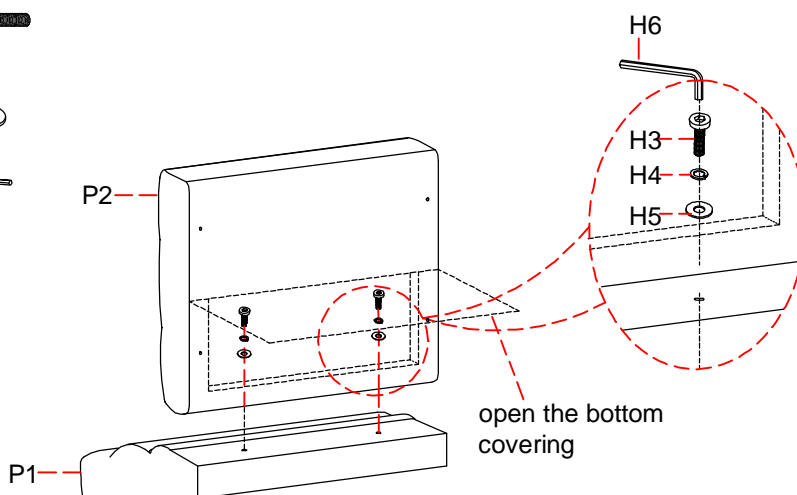


**Step 3. Loosely attach the assembled chair frame to the seat cushion (P2).**

(H2)x4 Medium Bolts  $\varnothing 1/4" \times 1-1/8"$



(H6)x1 Allen Wrench 1/4"

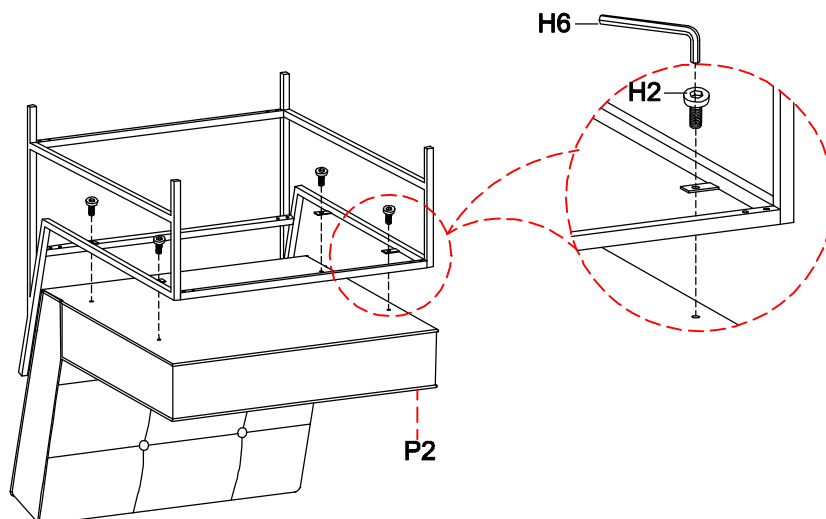


**Step 4.**

- 1) Turn the assembled lounge to an upright position. Attach the back cushion (P1) to the assembled frame as show below.
- 2) Securely tighten all bolts with Allen wrench(H6). Make sure the assembled lounge is level.
- 3) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(H2)x2 Medium Bolts  $\varnothing 1/4" \times 1-1/8"$



(H6)x1 Allen Wrench 1/4"

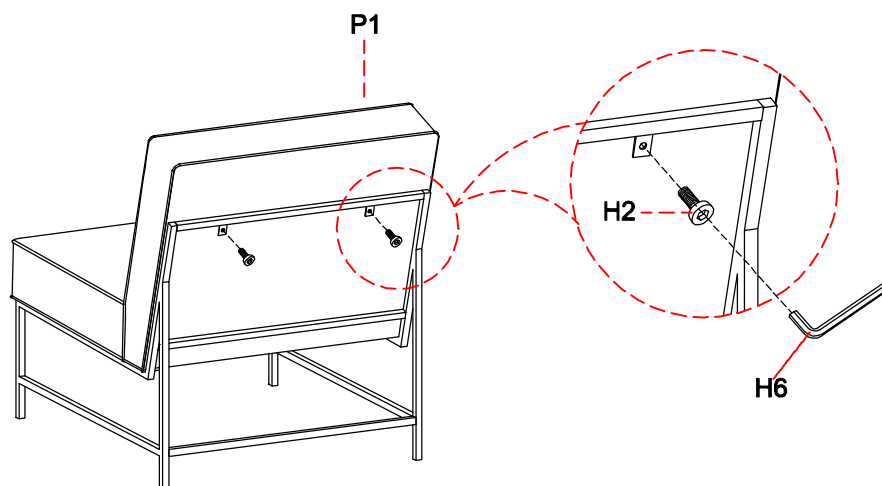

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

**Thank you for your purchase**