


MADISON PARK

Assembly Instruction--Settee


PARTS #	PARTS NAME	DRAWING	QTY
P1	FRONT LEGS		2
P2	BACK LEGS		2
P3	SEAT		1
P4	BACKREST		1

Hardware#	PARTS NAME	DRAWING	QTY
H1	Bolts φ5/16*1"		12
H2	Bolts φ5/16*2-1/8"		6
H3	Lock Washers φ5/16"		18
H4	Flat Washers φ5/16"		18
H5	Allen Wrench φ5/16"		1


1. Turn the seat frame (P3) upside down and lay on protective carpet, take out the legs and hardware from the bottom.

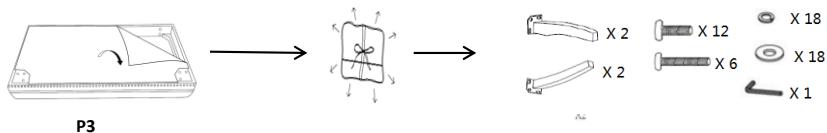

2. Using bolts (H2), lock washers (H3), flat washers (H4), connect backrest(P4) to seat frame(P3). Tighten bolts (H2) with Allen Wrench (H5).Affix the black cloth on bottom.

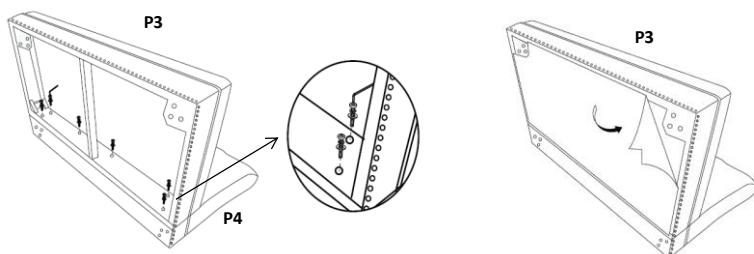

3.Using bolts (H1), lock washers (H3), flat washers (H4), connect legs(P1,P2) to seat frame (P3). Tighten bolts (H1) with Allen Wrench (H5).

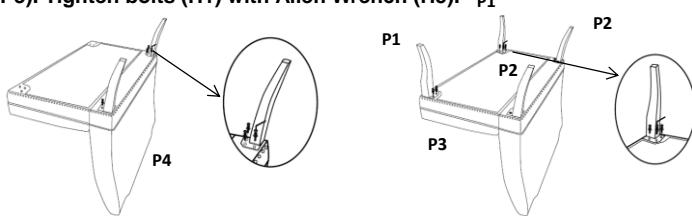

4. Place chair upright on a level surface. Assembly is complete.

