

## Description: Stanwell Accent Chair

**Important safety instructions:**


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

**Pre-assembly:**

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

**Parts List**

Item	Description	QTY
P1	Chair Seat	1
P2	Seat Cushion	1
P3	Chair Back	1
P4	Pillow	1
P5	Left Arm Frame	1
P6	Right Arm Frame	1
P7	Stretchers	2

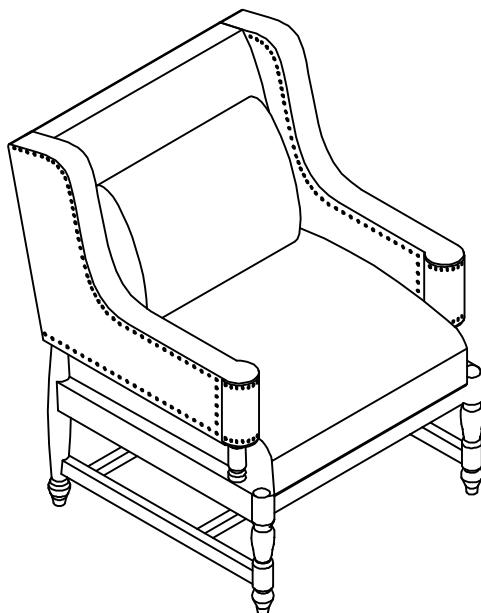**Hardware List**

Item	Description	QTY
H1	Bolts Ø5/16" x 2" L	8
H2	Lock Washers Ø5/16"	8
H3	Flat Washers Ø5/16"	8
H4	Allen Wrench Ø5/16"	1
H5	Screws #8*1-1/2"	4
H6	Screw Driver	Not included


## Assembly Procedures:

**Step 1.** Assembly the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.

- 1) Open the bottom covering at the bottom of chair seat (P1) and chair back (P3).
- 2) Loosely attach chair seat (P1), chair back (P3) and stretchers (P7) to right arm frame (P6) using bolts (H1), lock washers (H2) and flat washers (H3) as shown below. **Do not use screw to fix the stretchers at this time.**

(H1)x4	Bolts	
(H2)x4	Lock Washers	
(H3)x4	Flat Washers	
(H4)x1	Allen Wrench	


Note: 1) make sure the arrow on the label direct to the chair front.

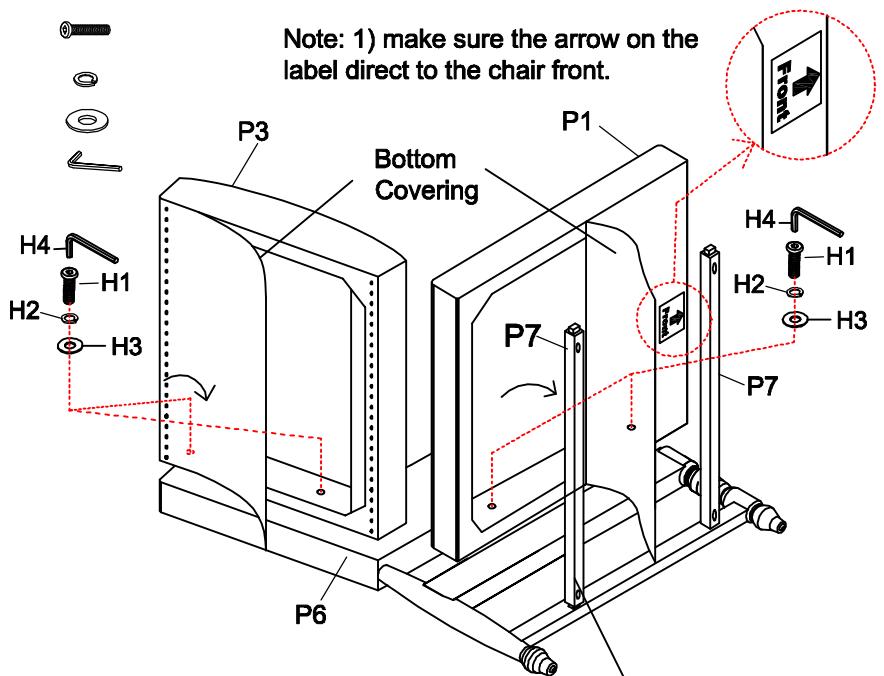

2) make sure the holes on the stretcher (P7) face to the bottom of leg.


**Step 2.** Attach chair seat (P1), chair back (P3) and stretchers (P7) to the left arm frame (P5) using bolts (H1), lock washers (H2) and flat washers (H3) as shown below.

(H1)x4	Bolts	
(H2)x4	Lock Washers	
(H3)x4	Flat Washers	

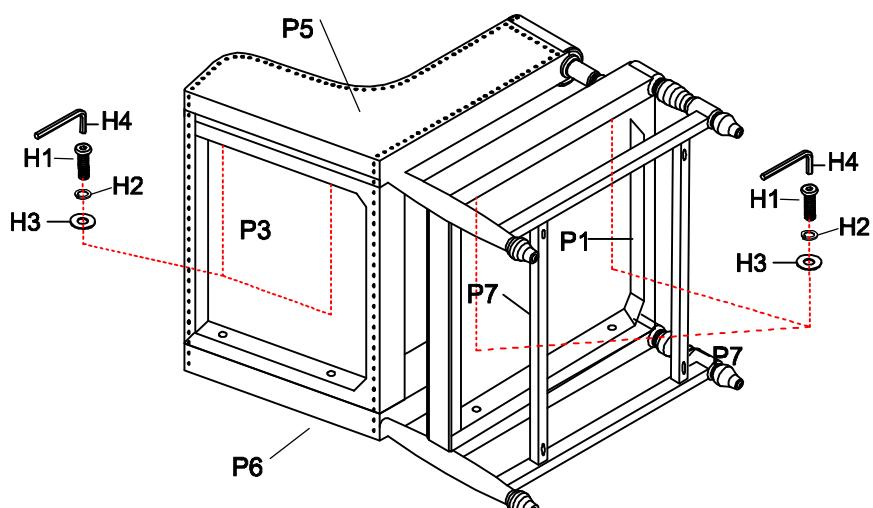


**Step 3.** Tighten all screws (H5) through stretchers (P7) to the left arm frame (P5) and right arm frame (P6) with screw driver (not provided).

(H5)x4 Screws 

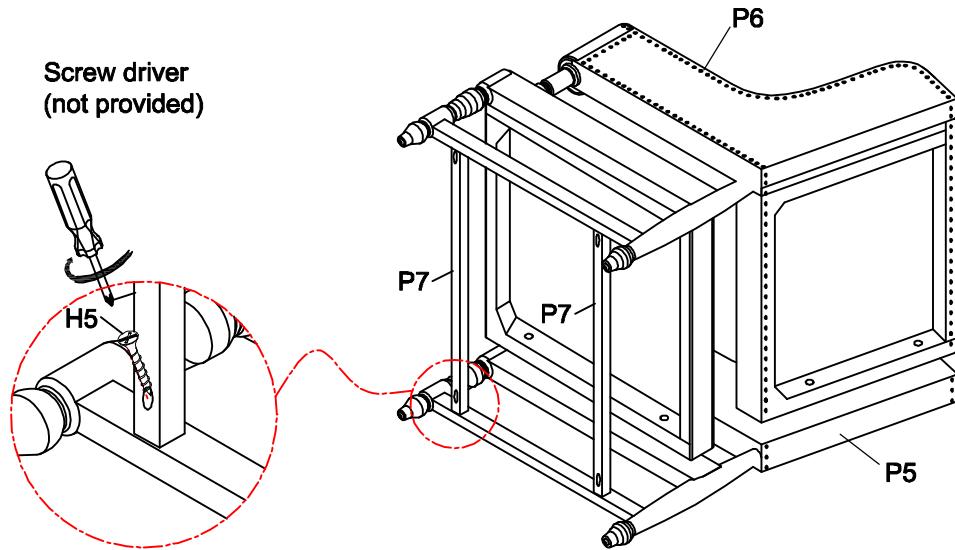

**Step 4.**

- 1) Turn the assembled chair to an upright position and make sure the chair is level and securely tighten all the bolts with Allen wrench (H4). Close the bottom covering at the bottom of chair seat (P1) and chair back (P3).
- 2) Put the seat cushion (P2) and Pillow (P4) on the assembled chair.
- 3) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

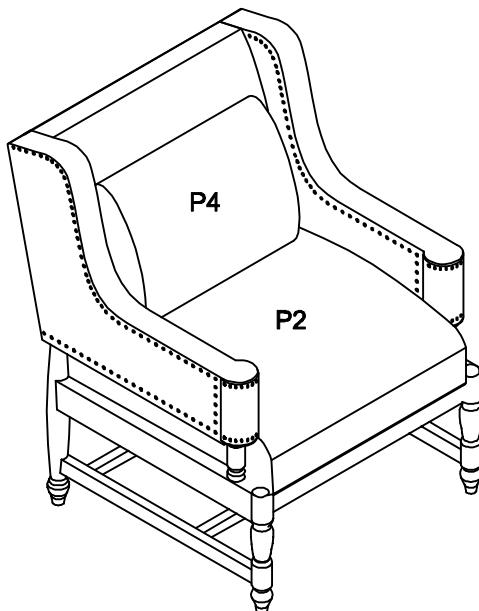

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.**

Thank you for your purchase