

ASSEMBLY INSTRUCTIONS

Description: Arm Counter & Bar Stool












Important safety instructions:

- Please carefully read all instructions before assembling the stool.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.












Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
A	Chair Back Top 	1
B	Front Legs 	2
C	Back Right Leg  ③	1
D	Back Left Leg  ④	1
E	Seat Cushion 	1
F	Right Arm Post  ⑥	1
G	Left Arm Post  ⑦	1
H	Front Stretcher 	1
I	Left Stretcher 	1
J	Right Stretcher 	1
K	Back Stretcher 	1


Hardware List

Item	Description	QTY
a	Big Long Bolts Ø5/16"x2-3/4"L 	4
b	Big Medium Bolts Ø5/16"x2"L 	4
c	Big Short Bolts Ø5/16"x1-3/4"L 	4
d	Small Bolts Ø1/4"x1"L 	6
e	Lock Washers 5/16" 	12
f	Flat Washers 5/16" *22mm 	12
g	Lock Washers 1/4" 	6
h	Flat Washers 1/4" *19mm 	6
i	Allen Wrench 1/4" 	1
j	Allen Wrench 5/16" 	1
k	Screw #8*1-1/2" 	8

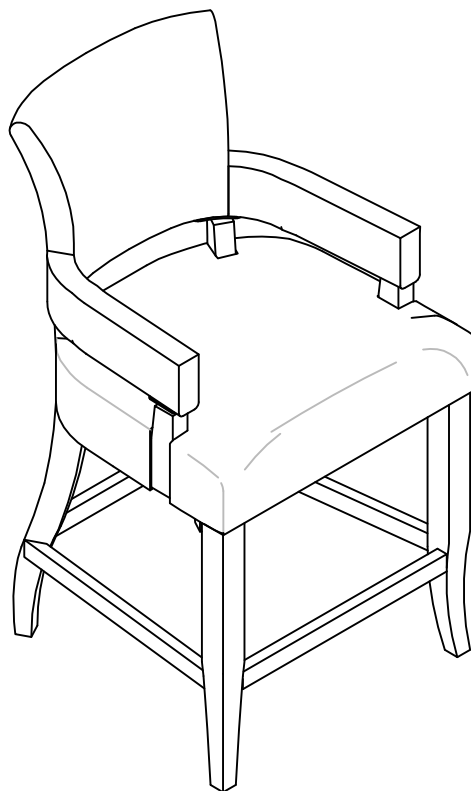

Assembly Procedures:

Step 1. Assemble the arm stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Remove the fixed plate from the bottom of top chair back (A) by unscrewing out of the screws with screw driver(not provided).

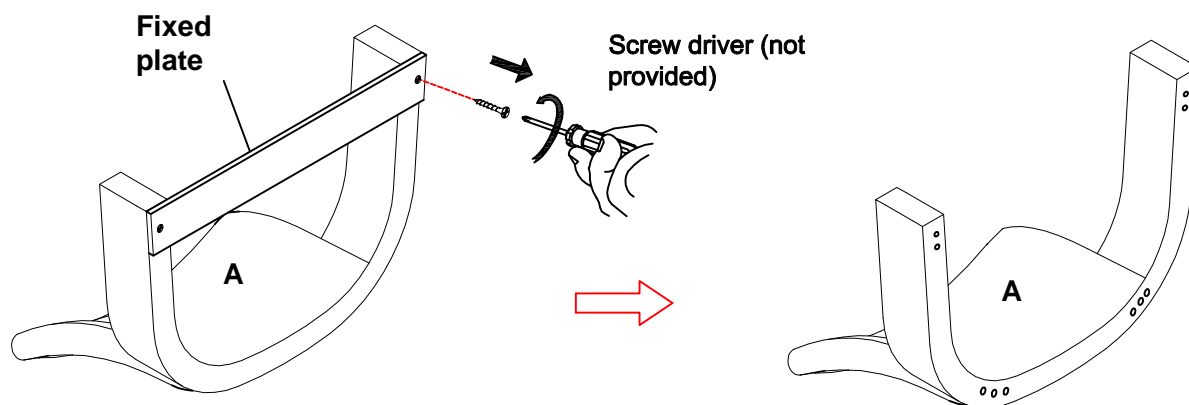

Step 2.

- 1) Attach the back left leg (D) to chair back top (A) according to the label "D" as shown below. securely tighten all bolts with Allen wrench (j).
- 2) Insert the back stretcher (K) to back left leg (D). Loosely attach the back right leg (C) to the bottom of chair back top (A) and the back stretcher (K) as shown below. Securely tighten all bolts with Allen wrench (i).

(d)x4 Small Bolts $\varnothing 1/4$ "x1"L




(g)x4 Lock Washers 1/4"



(h)x4 Flat Washers 1/4"



(i)x1 Allen Wrench 5/16"

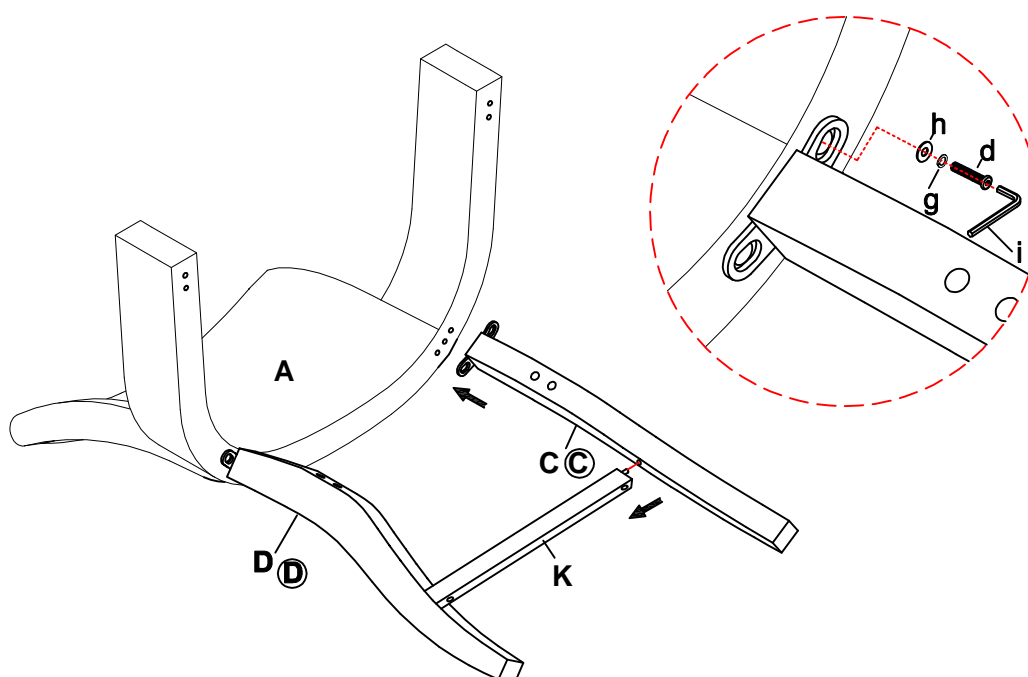


Step 3. Attach the right arm post (F) and left arm post (G) to seat cushion (E) according to the labels (F, G) as shown below.

(c)x4 Big Short Bolts $\varnothing 5/16"$ x1-3/4"L

(e)x4 Lock Washers 5/16"

(f)x4 Flat Washers 5/16"

Note: Do not tighten the bolts.

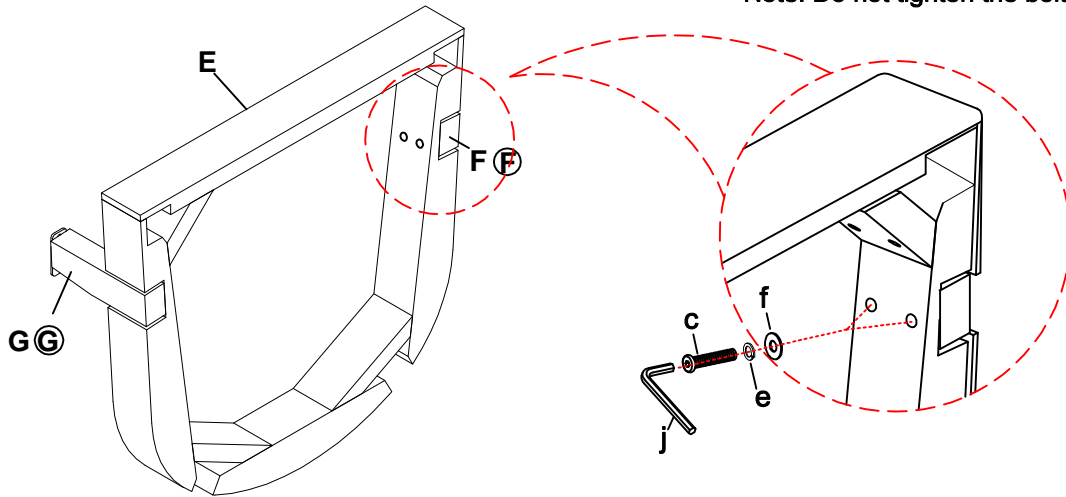

Step 4. Loosely attach the assembled arm posts (G, F) and seat cushion (E) to the bottom of chair back top and back legs (C, D) according labels "C", "D" on the back legs as shown below. Securely tighten the bolts with Allen wrench (i & j).

(b)x4 Big Medium Bolts $\varnothing 5/16"$ x2"L

(e)x4 Lock Washers 5/16"


(f)x4 Flat Washers 5/16"

(j)x1 Allen Wrench 5/16"

(d)x2 Small Bolts $\varnothing 1/4"$ x1"L

(g)x2 Lock Washers 1/4"

(h)x2 Flat Washers 1/4"

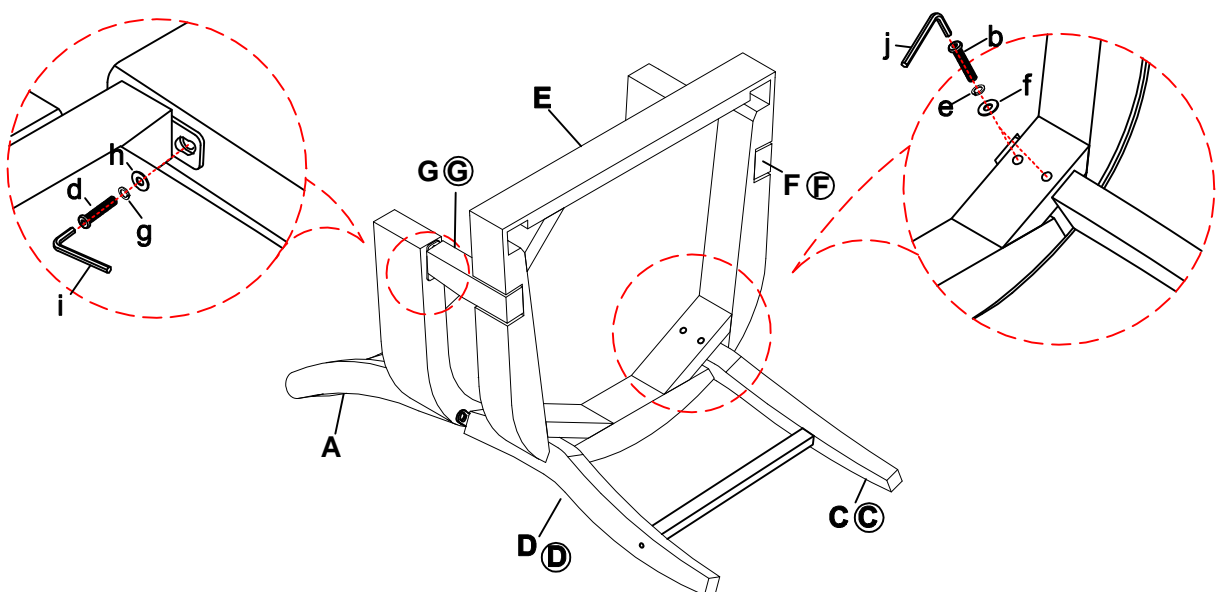


Step 5. Insert the left stretcher (I) to the back left leg (D) according to the label "I" at the hole in the back left leg (D). Loosely attach a front leg (B) to the bottom of seat cushion (E) and the left stretcher (I) as shown below. Securely tighten all bolts with Allen wrench (j). Do not tighten the bolts at this time.

(a)x2 Big Long Bolts Ø5/16"x2-3/4"L

(e)x2 Lock Washers 5/16"

(f)x2 Flat Washers 5/16"

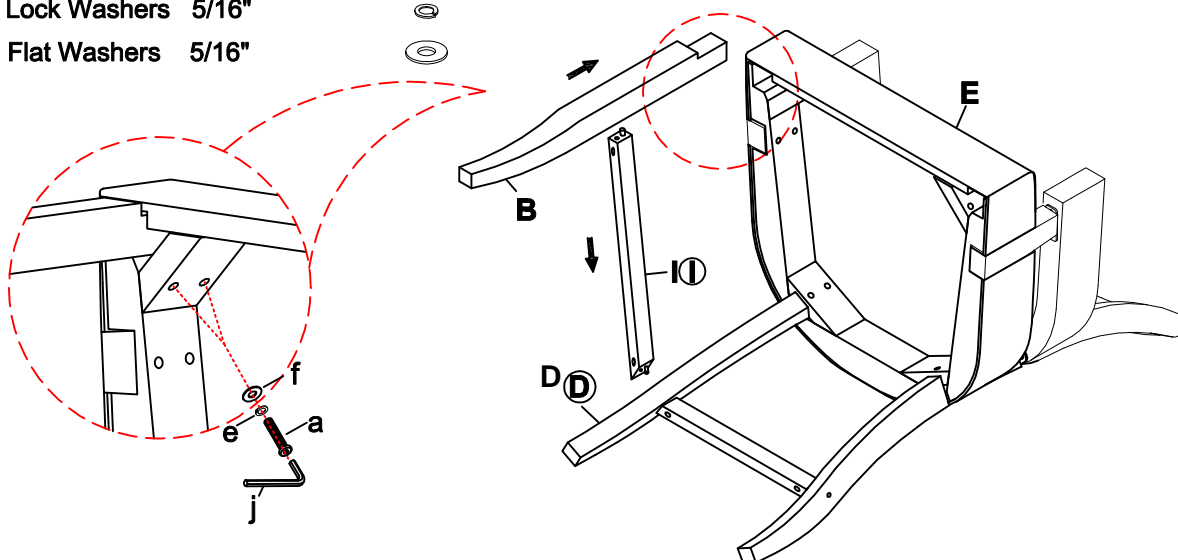

Step 6.


- 1) Insert the right stretcher (J) to the back right leg (C) according to the label "J" at the hole in the back right leg (C). Loosely attach the other front leg (B) to the seat cushion (E) and the right stretcher (J) as shown below.
- 2) Insert the front stretcher (H) between the front legs.
- 3) Securely tighten all bolts with Allen wrench (k).
- 4) Tighten all screws (k) through the stretchers (H, I, J, K) to the front legs and back legs with screw driver(not provided).
- 5) Make sure the arm stool is level and securely tighten all bolts by Allen wrench (i, j). Turn the assembled arm stool to an upright position
- 6) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(a)x2 Big Long Bolts Ø5/16"x2-3/4"L

(e)x2 Lock Washers 5/16"

(f)x2 Flat Washers 5/16"

(k)x8 Screw #8*1-1/2"

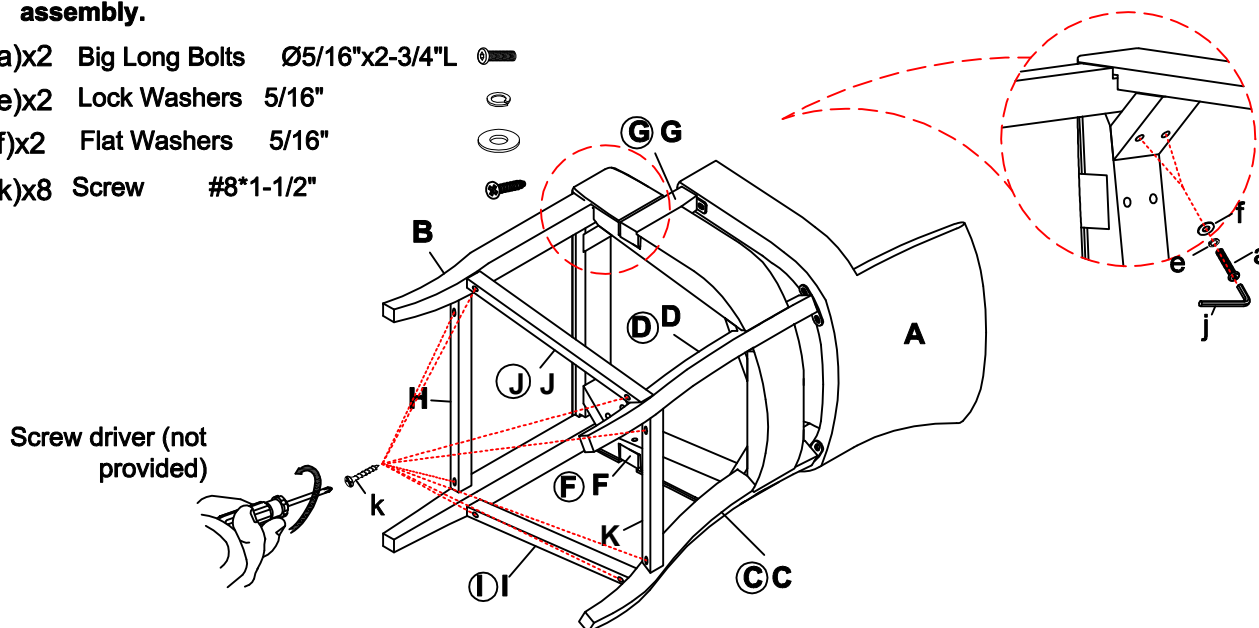

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase