

MADISON PARK**ASSEMBLY INSTRUCTIONS****Description: Rory Counter stool & Bar stool****Important safety instructions:**

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

| Item | Description | QTY |
|------|------------------|-----|
| P1 | Chair Top | 1 |
| P2 | Front Left Leg | 1 |
| P3 | Front Right Leg | 1 |
| P4 | Back Legs | 2 |
| P5 | Back Stretcher | 1 |
| P6 | Front Stretchers | 1 |

Hardware List


| Item | Description | QTY |
|------|----------------------------|-----|
| H1 | Long Bolts Ø5/16"x2" L | 8 |
| H2 | Lock Washers 5/16" | 8 |
| H3 | Flat Washers 5/16" | 8 |
| H4 | Allen Wrench 5/16" | 1 |
| H5 | Short Bolts Ø1/4"x1-1/4" L | 2 |
| H6 | Lock Washers 1/4" | 2 |
| H7 | Flat Washers 1/4" | 2 |
| H8 | Allen Wrench 1/4" | 1 |
| H9 | Screws #8*1-1/2" | 4 |

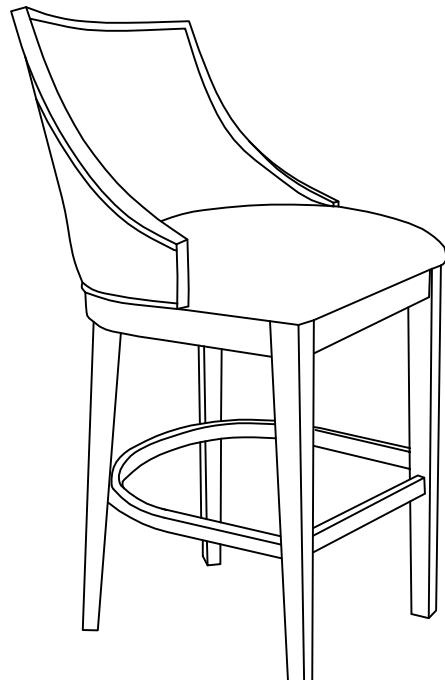

Assembly Procedures:


Step 1. Assemble the stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Loosely attach each back leg (P4) to the bottom of chair top (P1) following the label "P4" on the legs accordingly and using long bolts (H1), lock washers (H2) and flat washers (H3) as shown below.

(H1)x4 Long Bolts $\varnothing 5/16" \times 2" L$ 
(H2)x4 Lock Washers $5/16"$ 
(H3)x4 Flat Washers $5/16"$ 
(H4)x4 Allen Wrench $5/16"$ 

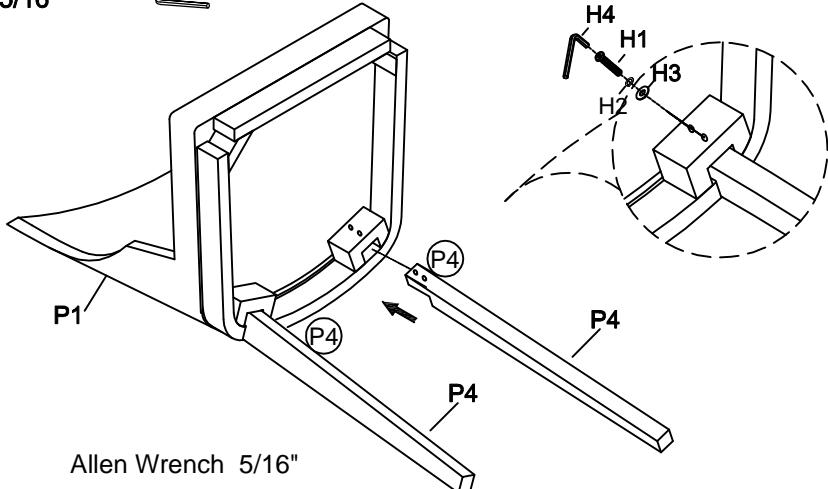

Step 2. Loosely attach back stretcher (P5) to back legs (P4) using short bolts (H5), lock washers (H6) and flat washers (H7) as shown below.

(H5)x2 Short Bolts $\varnothing 1/4" \times 1-1/4" L$ 
(H6)x2 Lock Washers $1/4"$ 
(H7)x2 Flat Washers $1/4"$ 
(H8)x1 Allen Wrench $1/4"$ 

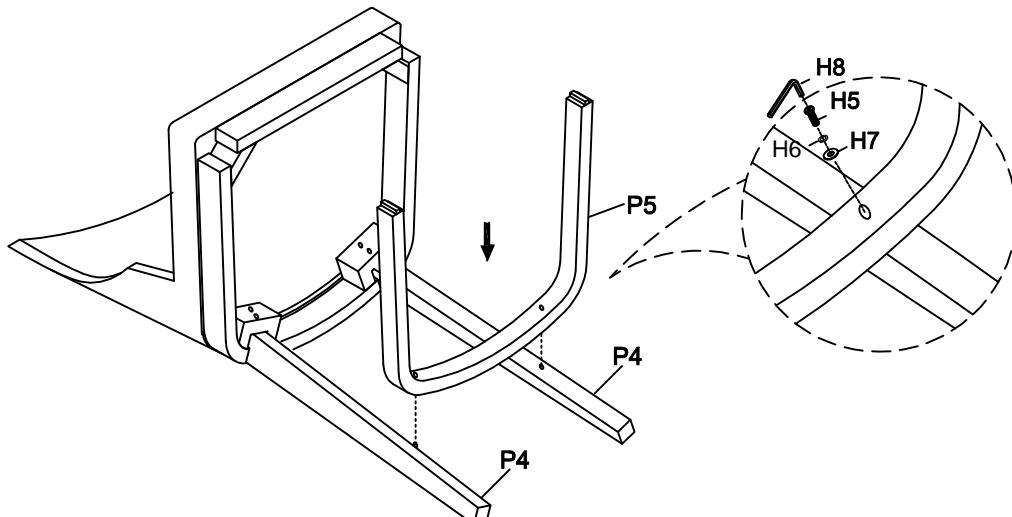


Step 3. Attach front left leg (P2) to the chair top (P1) and back stretcher (P5) following the label "P2" on the front left leg (P2) accordingly and using long bolts (H1), lock washers (H2) and flat washers (H3) as shown below.

(H1)x2 Long Bolts Ø5/16"x2" L

(H2)x2 Lock Washers 5/16"

(H3)x2 Flat Washers 5/16"

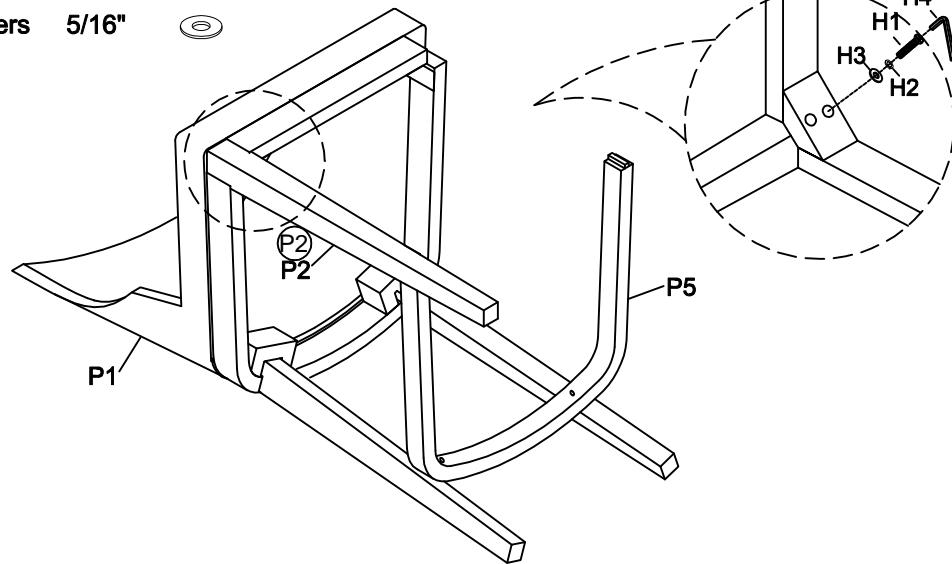

Step 4.


- 1) Insert front stretcher (P6) to the front left/right leg (P2, P3), then attach the other front right leg (P3) to the bottom of chair top (P1) and back stretcher (P5) using bolt (H1), lock washer (H2) and flat washer (H3) as shown below.
- 2) Tighten screws (H9) through the stretchers (P5,P6) to the front legs (P2) with screw driver (not provided).
- 3) Make sure the stool is level on the floor and securely tighten all bolts by Allen wrench (H4 & H8).
- 4) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(H1)x2 Long Bolts Ø5/16"x2" L

(H2)x2 Lock Washers 5/16"

(H3)x2 Flat Washers 5/16"

(H9)x4 Screws #8*1-1/2"

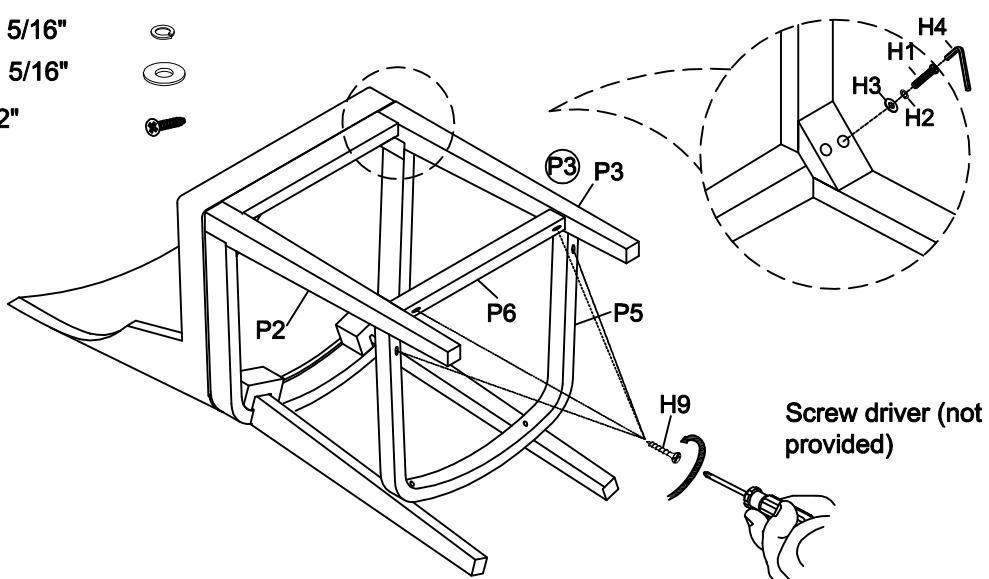

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase