

**MADISON PARK****ASSEMBLY INSTRUCTIONS****Description: Corinne Counter & Bar stool****Important safety instructions:**

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

**Pre-assembly:**


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

**Parts List**

Item	Description	QTY
P1	Chair Top	1
P2	Seat Cushion	1
P3	Left Stretcher	1
P4	Right Stretcher	1
P5	Front Stretcher	1
P6	Front Legs	2

**Hardware List**

Item	Description	QTY
H1	Long Bolts Ø5/16"**2-1/2" L	5
H2	Short Bolts Ø5/16"**2" L	4
H3	Lock Washers 5/16"	9
H4	Flat Washers 5/16"	9
H5	Allen Wrench 5/16"	1
H6	Screws #8*1-1/2"	6

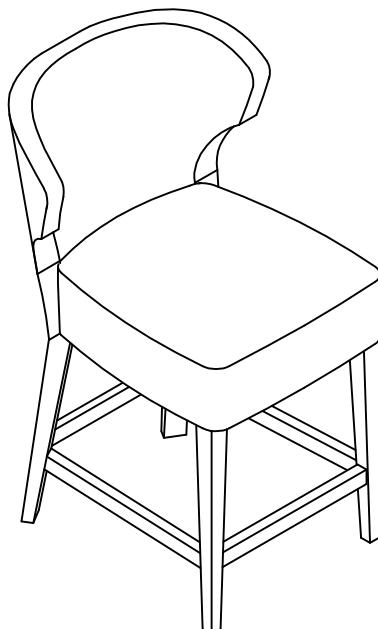

### Assembly Procedures:

Step 1. Assemble the stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the seat cushion (P2) to chair back (P1) using long bolts (H1), lock washers (H3) and flat washers (H4) as shown below.

(H1)x5 Long Bolts Ø5/16"\*\*2-1/2"L




(H3)x5 Lock Washers 5/16"



(H4)x5 Flat Washers 5/16"



(H5)x1 Allen Wrench 5/16"

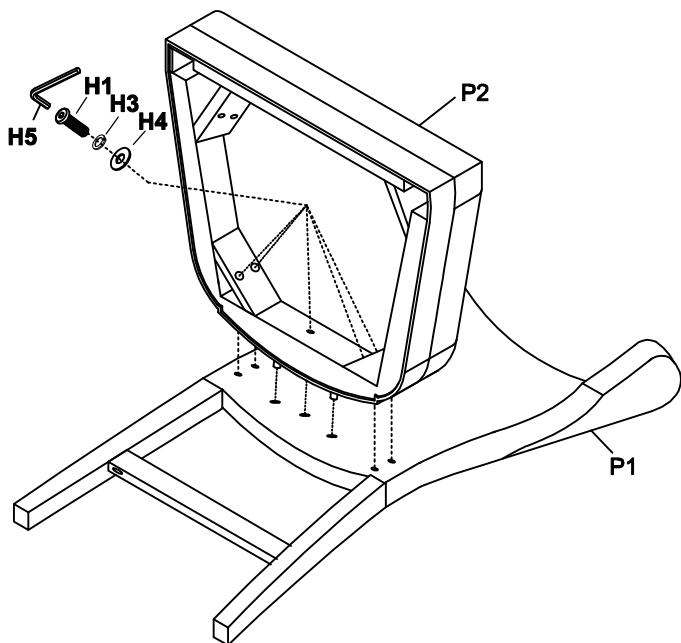

Step 2. Insert left stretcher (P3) between the two legs following the label "P3" on the left stretcher accordingly, then attach leg (P6) to the bottom of seat cushion (P2) using short bolts (H2), lock washers (H3) and flat washers (H4) as shown below.


(H2)x2 Short Bolts Ø5/16"x2"L



(H3)x2 Lock Washers 5/16"



(H4)x2 Flat Washers 5/16"

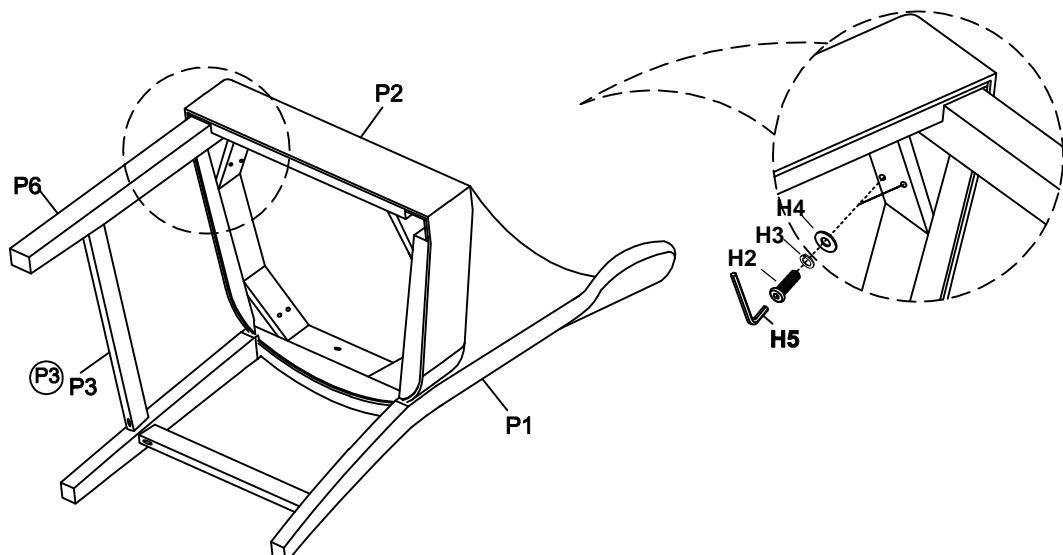

Step 3. Insert front stretcher (P5) and right stretcher (P4) to the front legs (P6) following the label "P4" on the right stretcher accordingly, then attach last leg (P6) to bottom of seat cushion (P2) using short bolt (H2), lock washer (H3) and flat washer (H4) as shown below.


(H2)x2 Short Bolts Ø5/16"x2" L



(H3)x2 Lock Washers 5/16"




(H4)x2 Flat Washers 5/16"

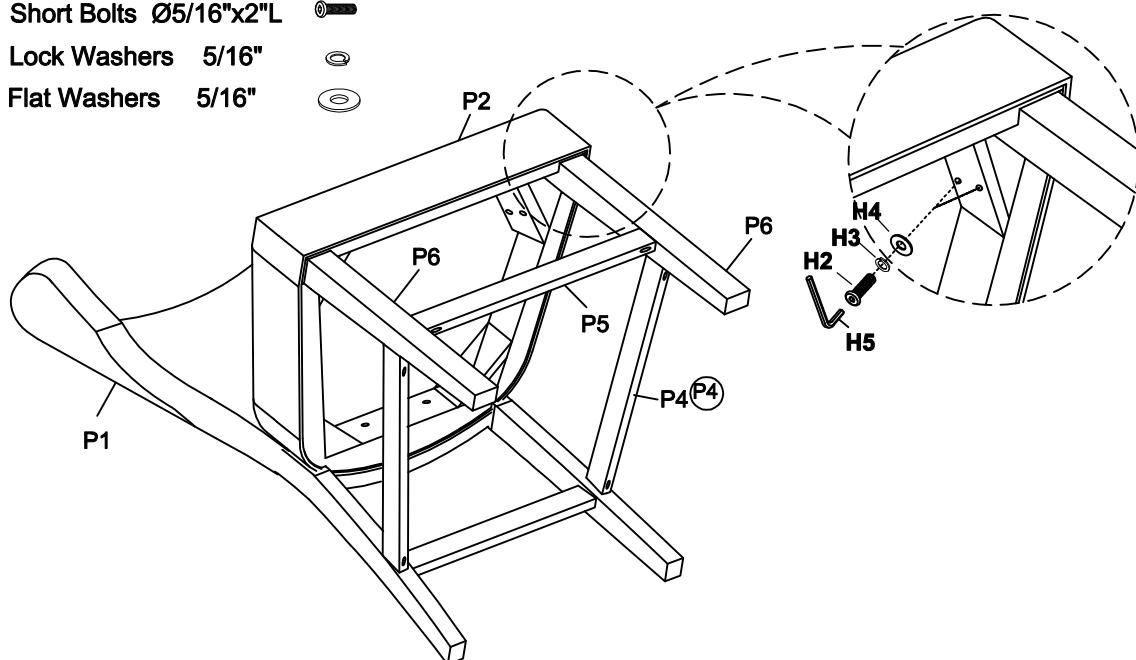

#### Step 4.

- 1) Securely tighten all bolts with Allen wrench (H5).
- 2) Tighten screws (H6) through the stretchers (P3,P4,P5) to each legs with screw driver (not provided).
- 3) Make sure the stool is level and securely tighten all bolts by Allen wrench (H5). Turn the assembled stool to an upright position
- 4) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(H6)x6 Screws #8\*1-1/2"

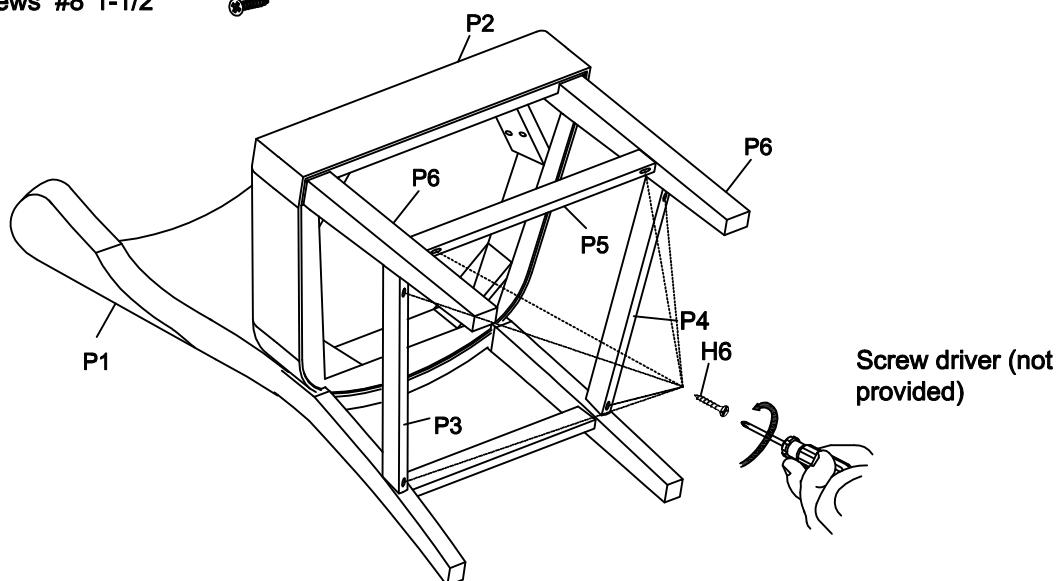

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase