

Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Chair Back	1
P2	Seat Cushion	1
P3	Seat Frame	1
P4	Front Legs	2
P5	Front Stretcher	1
P6	Left Side Stretcher	1
P7	Right Side Stretcher	1

Hardware List

Item	Description	QTY
H1	Long Bolts Ø5/16" *3" L	4
H2	Medium Bolts Ø5/16" *2-1/4" L	4
H3	Short Bolts Ø5/16" *2" L	1
H4	Lock Washers 5/16"	9
H5	Flat Washers 5/16"	9
H6	Allen Wrench 5/16"	1
H7	Long Wood Screws 8# *1-3/4" L	6
H8	Short Wood Screws 8# * 5/8" L	4

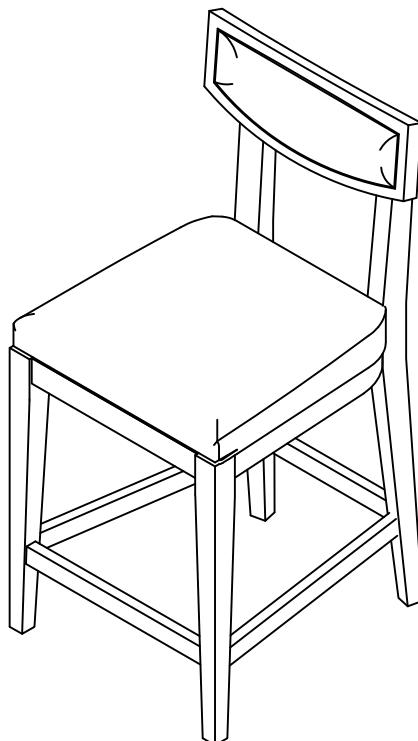


Assembly Procedures:

Step 1.

1). Assemble the stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach seat frame (P3) to the chair back (P1) using bolts (H1), bolts (H3), lock washers (H4) and flat washers (H5) as shown below.


2). Loosely tighten all bolts with Allen wrench (H6).

(H1)x4	Long Bolts	
(H3)x1	Short Bolts	
(H4)x5	Lock Washers	
(H5)x5	Flat Washers	
(H6)x1	Allen Wrench	

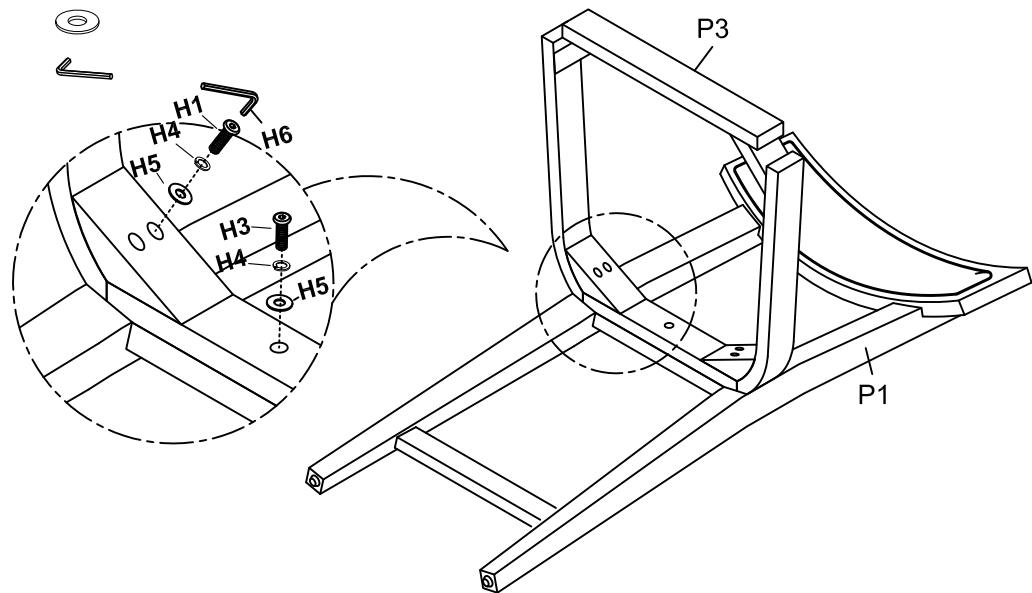


Step 2. Pushing the seat cushion (P2) from front to the back to the chair back leg tightly, then attach the the seat cushion (P2) to the seat frame (P3) using short wood screws (H8) with screwdriver (not provided).

(H8)x4	Short Wood Screws	
--------	-------------------	---

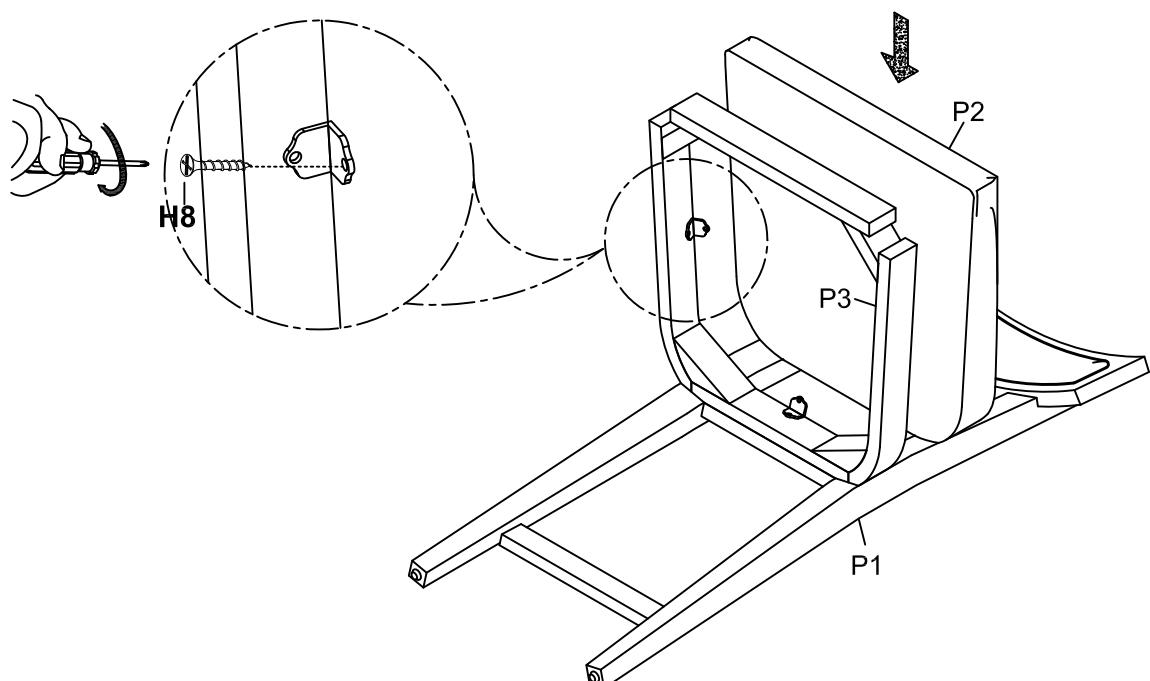


Step 3. Insert the side stretchers (P6, P7) into the hole on legs of chair back (P1) following the labels "P6" "P7" on the left/right side stretcher accordingly as shown below.

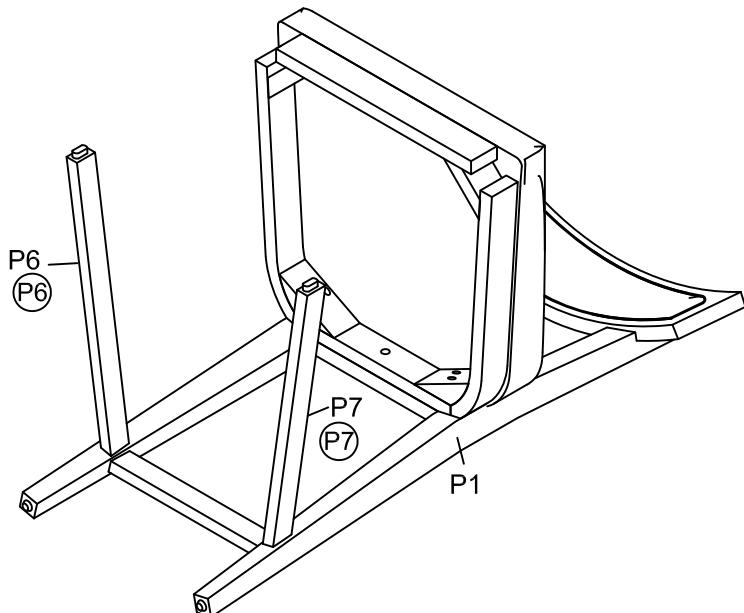

Step 4. Attach one of front leg (P4) to the seat frame (P3) and the left side stretcher (P6) using medium bolts (H2), lock washers (H4) and flat washers (H5). Loosely tighten with Allen wrench (H6).

(H2)x2	Medium Bolts	
(H4)x2	Lock Washers	
(H5)x2	Flat Washers	

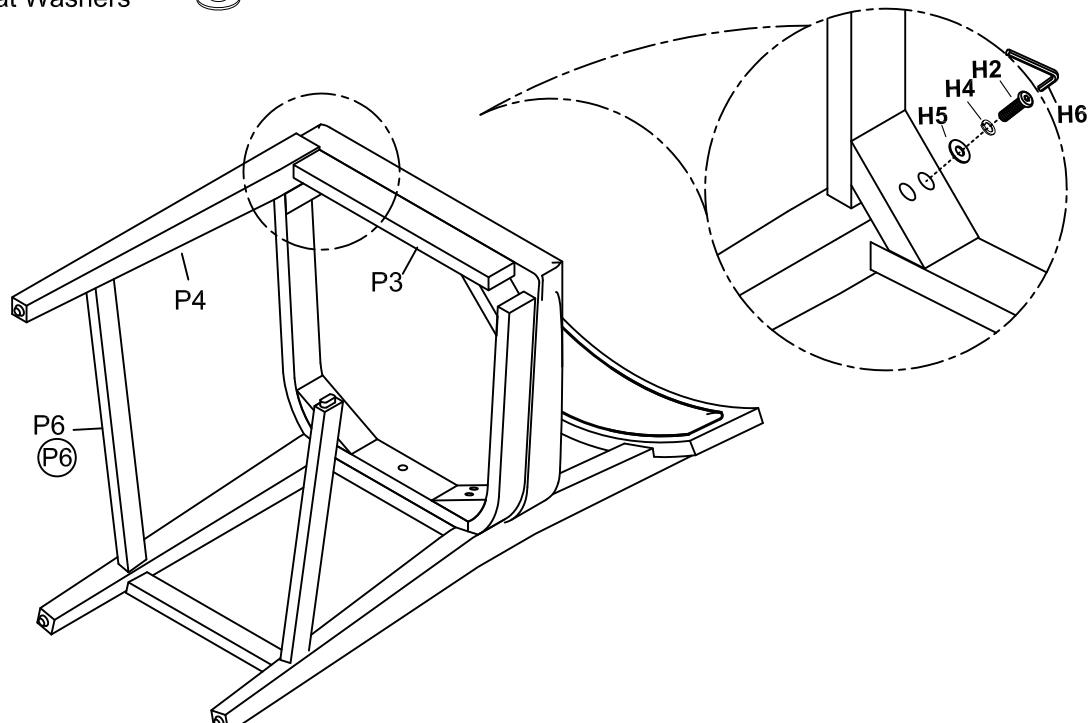

Step 5.


- 1). Insert front stretcher (P5) between the two legs (P4). then repeat the step 4 to attach another front leg (P4) using medium bolts (H2), lock washers (H4) and flat washers (H5).
- 2). Make sure all screw holes on all stretchers face down, tighten screws (H7) through the stretchers (P5, P6, P7) to the legs (P4) and chair back legs with screwdriver (not provided).

(H2)x2 Medium Bolts

(H4)x2 Lock Washers


(H5)x2 Flat Washers

(H7)x6 Screws

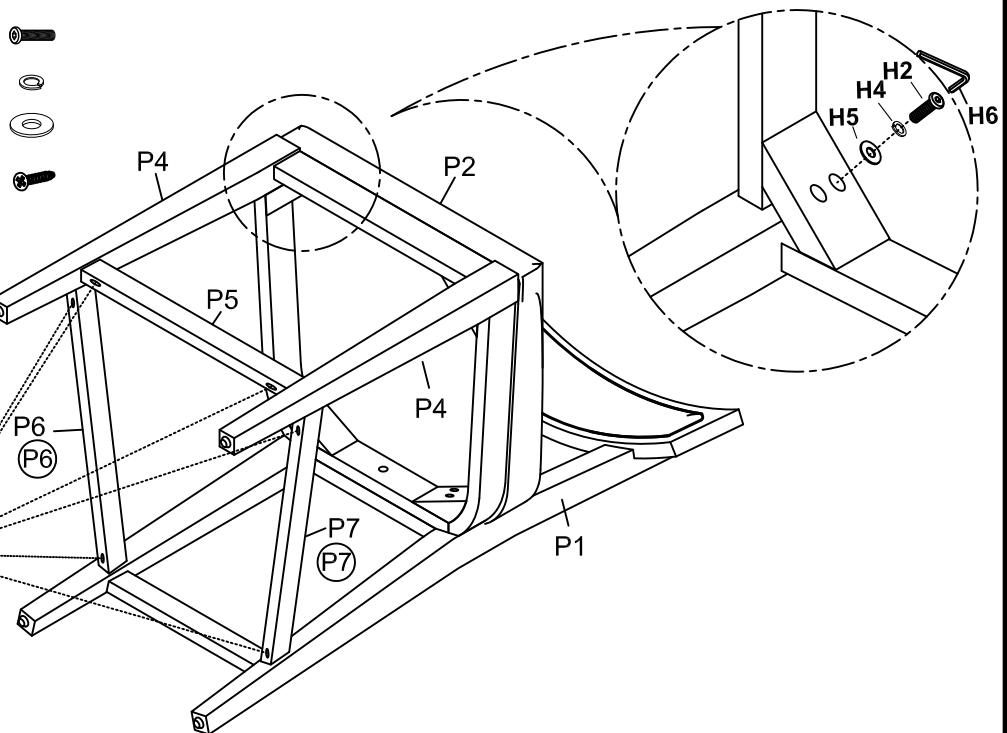

Step 6.

- 3) 1) Turn assembled the stool to an upright position. Make sure the chair is level and securely tighten all bolts with Allen wrench (H6), but do not over tighten the bolts.
- 2) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

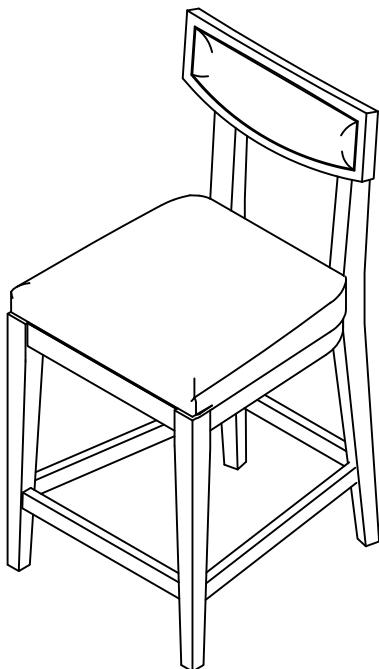

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase