

MADISON PARK

ASSEMBLY INSTRUCTIONS

Description: Penrose Counterstool

Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Chair Top	1
P2	Left Leg frame	1
P3	Right Leg frame	1
P4	Front Stretcher	1
P5	Side Stretcher (Long)	2
P6	Back Stretcher (Short)	1


Hardware List

Item	Description	QTY
H1	Bolts Ø5/16"**2" L	4
H2	Lock Washers 5/16"	4
H3	Flat Washers 5/16"	4
H4	Allen Wrench 5/16"	1
H5	Bolts Ø1/4"**1-1/4" L	4
H6	Lock Washers 1/4"	4
H7	Flat Washers 1/4"	4
H8	Allen Wrench 1/4"	1
H9	Screws #8*1-1/2"	8
H10	Mending Plate	1
H11	Screw Driver	Not included

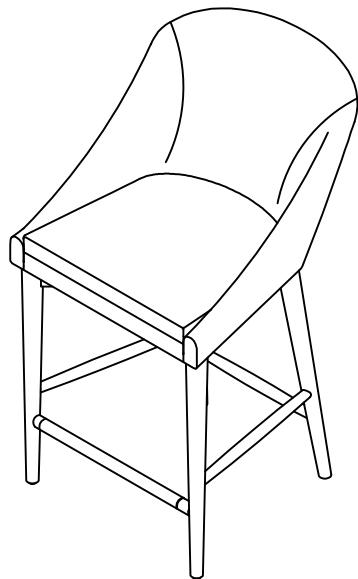


Assembly Procedures:

Step 1. Assemble the stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach left leg frame (P2) to the right leg frame (P3) as shown below.

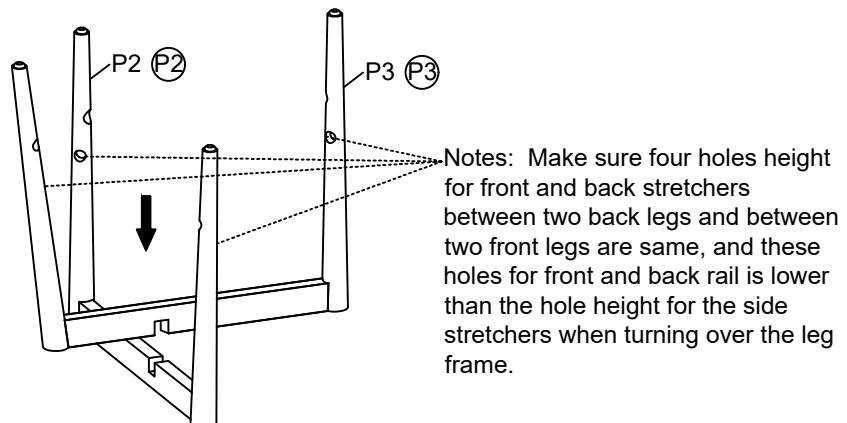


Step 2. Insert each stretcher (P4, P5, P6) between legs as shown below.

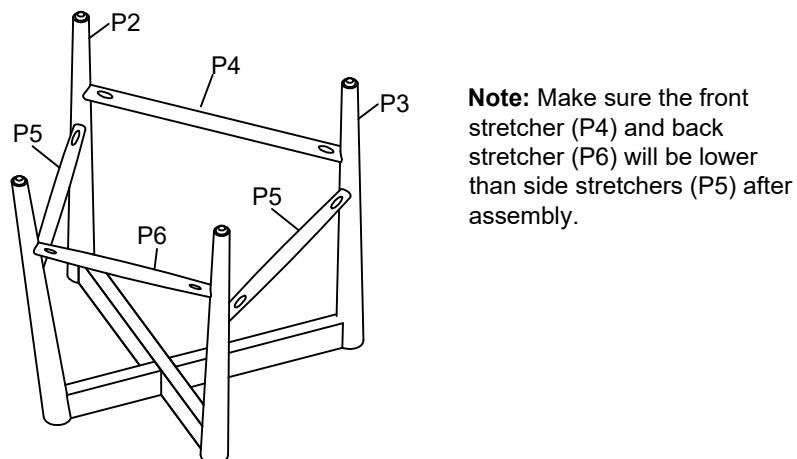

Step 3. Attach the mending plate (H10) to the bottom of left frame (P2) and right frame (P3) using bolts (H5), lock washers (H6) and flat washers (H7) as shown below.


(H5)x4	Bolts
(H6)x4	Lock Washers
(H7)x4	Flat Washers
(H8)x1	Allen Wrench
(H10)x1	Mending Plate

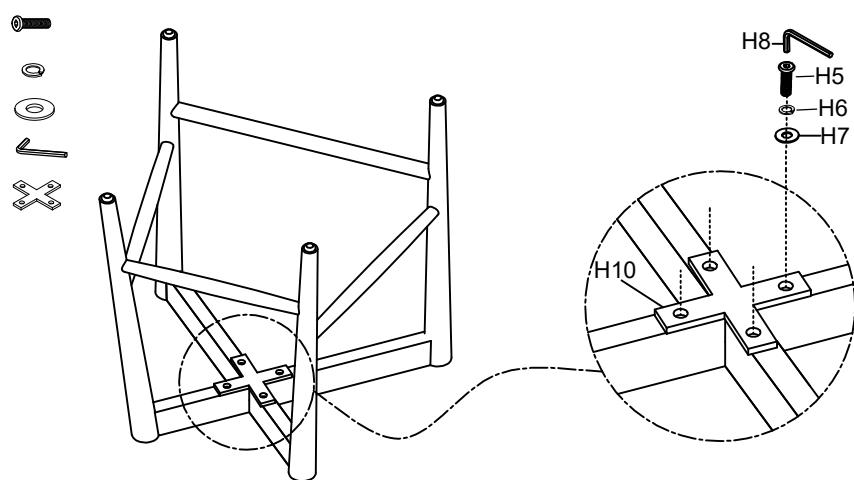

Step 4.

1) Attach the assembled base to the bottom of chair top (P1) using bolts (H1), lock washers (H2) and flat washers (H3) as shown below.


(H1)x4	Bolts	
(H2)x4	Lock Washers	
(H3)x4	Flat Washers	
(H4)x1	Allen Wrench	

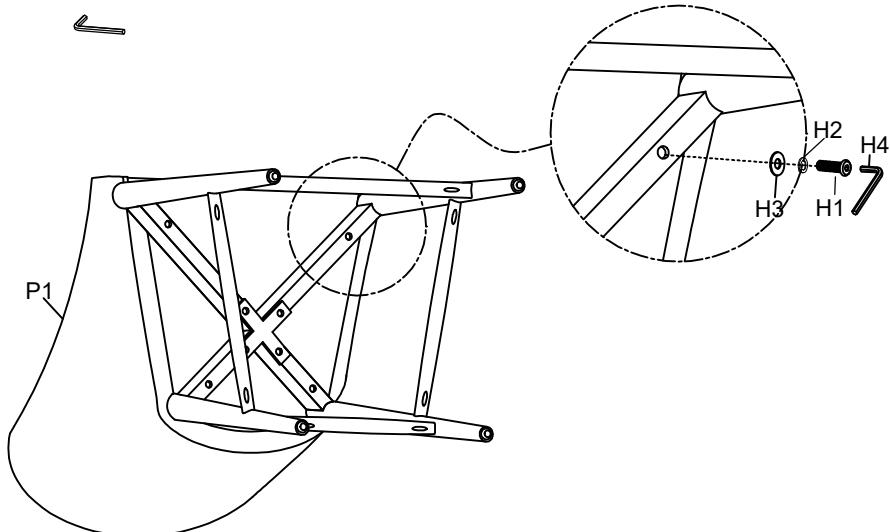

Step 5.

1) Make sure the screw holes on each stretcher is facing to the bottom of leg, then tighten all screws (H9) with screw driver (not provided).

(H9)x8	Screws	
--------	--------	---

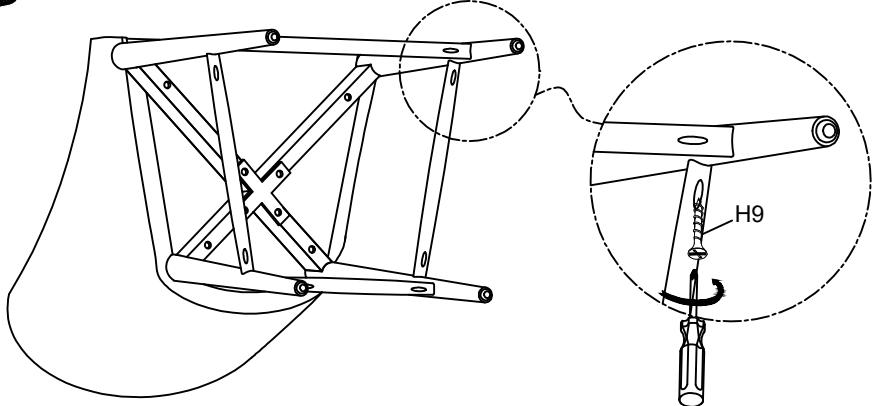

2) Make sure the stool is level and securely tighten all bolts by Allen wrench (H4, H8). Turn the assembled stool to an upright position
3) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase