

MADISONPARK® ASSEMBLY INSTRUCTIONS

Description: Carson Counter stool



Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.






Pre-assembly:


- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description	QTY
P1	Chair Top 	1
P2	Chair Base 	1

Hardware List

Item	Description	QTY
H1	Short Bolts Ø1/4"*1"L 	8
H2	Lock Washers 1/4" 	8
H3	Flat Washers 1/4" 	8
H4	Allen Wrench 1/4" 	1
H5	Swivel 	1

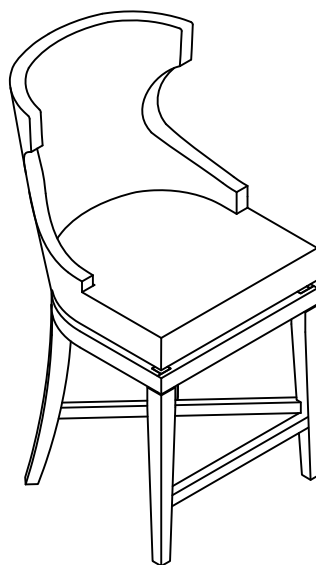


Assembly Procedures:


Step 1. Assemble the stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the swivel (H5) to the top of chair base (P2) as shown below.



(H1)x4 Bolts Ø1/4"*1"L 

(H2)x4 Lock Washers 1/4" 

(H3)x4 Flat Washers 1/4" 

(H4)x1 Allen Wrench 1/4" 

(H5)x1 Swivel 

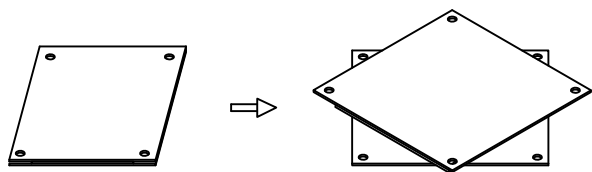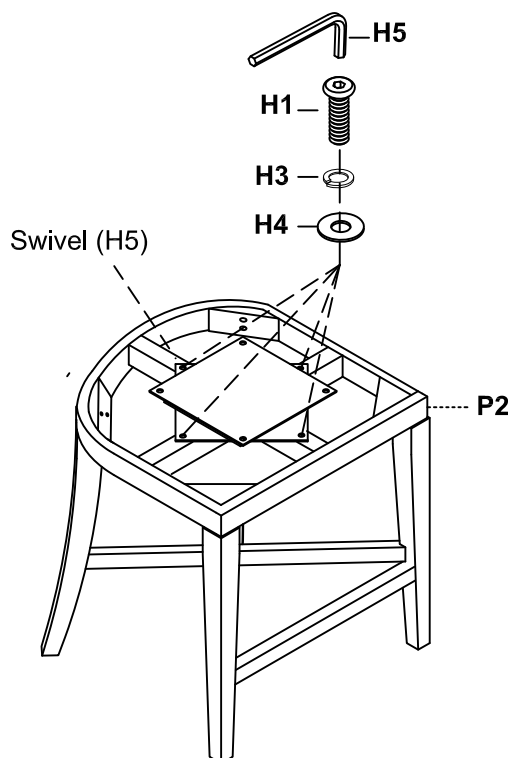

Step 2. Attach the chair base (P2) to the chair top (P1) as shown below.

(H1)x4 Bolts $\varnothing 1/4"$ *1"L




(H2)x4 Lock Washers 1/4"




(H3)x4 Flat Washers 1/4"



(H4)x1 Allen Wrench 1/4"

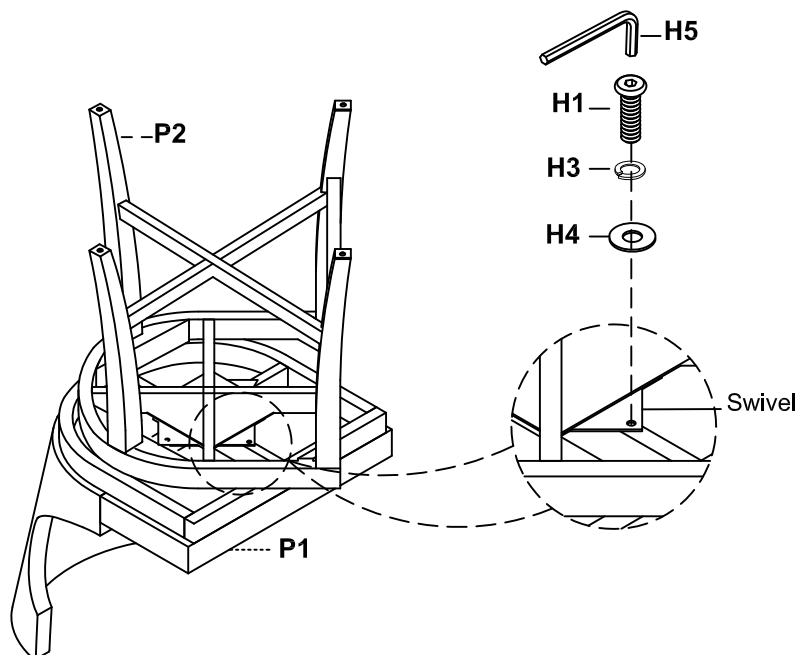

Step 2. Turn the assembled stool to an upright position. Make sure the stool is level and securely tighten all bolts with Allen wrench (H4). Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

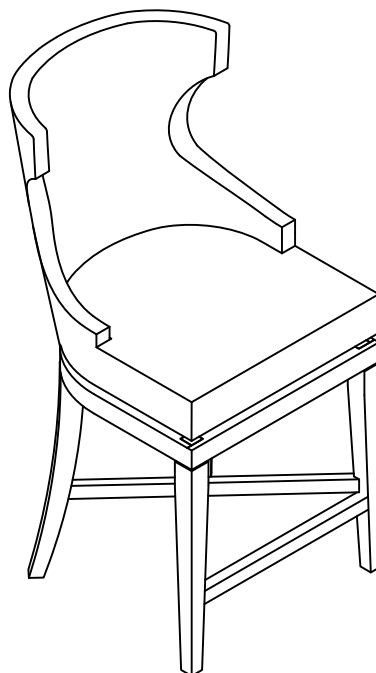

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase