

ASSEMBLY INSTRUCTIONS

Nova Accent Bench


Important safety instructions:


- Please read carefully all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any protective packaging.

Parts List

Item	Description		QTY
P1	Seat Cushion		1
P2	Legs 1	 (P2)	2
P3	Legs 2	 (P3)	2
P4	Side Rails		2
P5	Stretchers		2

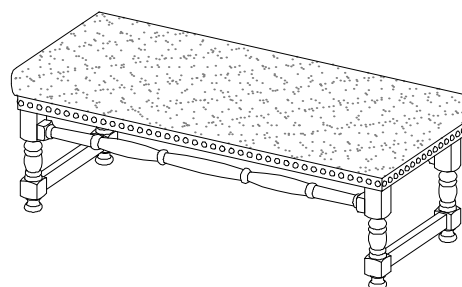


Hardware List

Item	Description		QTY
H1	Bolts Ø5/16"*2"L		8
H2	Lock Washers 5/16"		8
H3	Flat Washers 5/16"		8
H4	Allen Wrench 5/16"		1
H5	Screw #8*1-1/4		8
H6	Screwdriver(not provide)		1

Assembly Procedures:


Step 1. Assemble the bench on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Insert two legs (P2 & P3) to the bottom of seat cushion (P1) and insert the side rail (P4) between the legs, then loosely attach legs (P2 & P3) as shown below image1(do not tighten the screw on the side rail this step).

- (H1)x4 Bolt Ø5/16"*2"L 
- (H2)x4 Lock Washers 5/16" 
- (H3)x4 Flat washers 5/16" 
- (H4)x1 Allen Wrench 5/16" 

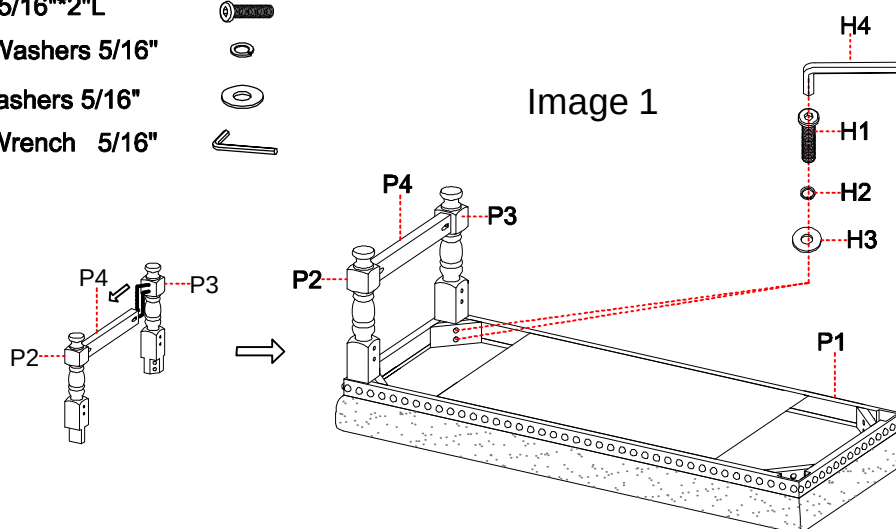


Step 2. Insert the leg 1 (P2) to the bottom of seat cushion (P1), and insert the stretcher (P5) between the legs(P2 & P3), then loosely attach leg1 (P2) as shown below image 2. (do not tighten the screw too).

- | | | |
|--------|---------------------------|---|
| (H1)x2 | Bolt Ø5/16**2"L |  |
| (H2)x2 | Lock Washers 5/16" |  |
| (H3)x2 | Flat washers 5/16" |  |
| (H4)x1 | Allen Wrench 5/16" |  |

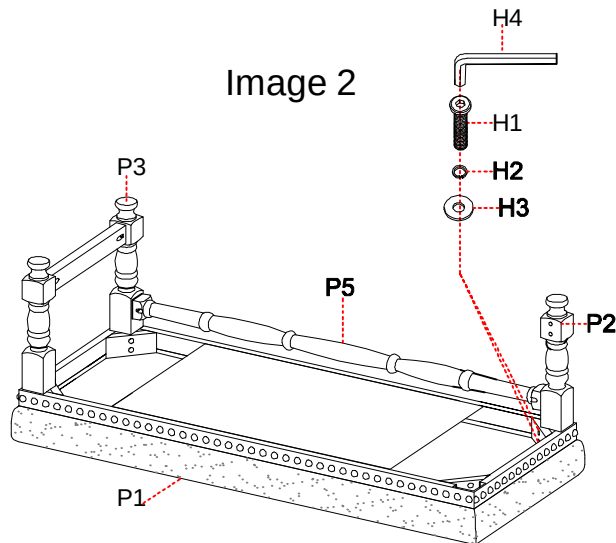


Step 3. Insert the leg2 (P3) to the bottom of seat cushion(P1), and then insert the other stretcher (P5) and side rail (P4) to the assembled legs, then attach the leg as shown below image 3, tighten all bolts and screws.

- | | | |
|--------|---------------------------|---|
| (H1)x2 | Bolt Ø5/16**2"L |  |
| (H2)x2 | Lock Washers 5/16" |  |
| (H3)x2 | Flat washers 5/16" |  |
| (H4)x1 | Allen Wrench 5/16" |  |
| (H5)x8 | Screw #8*1-1/4 |  |

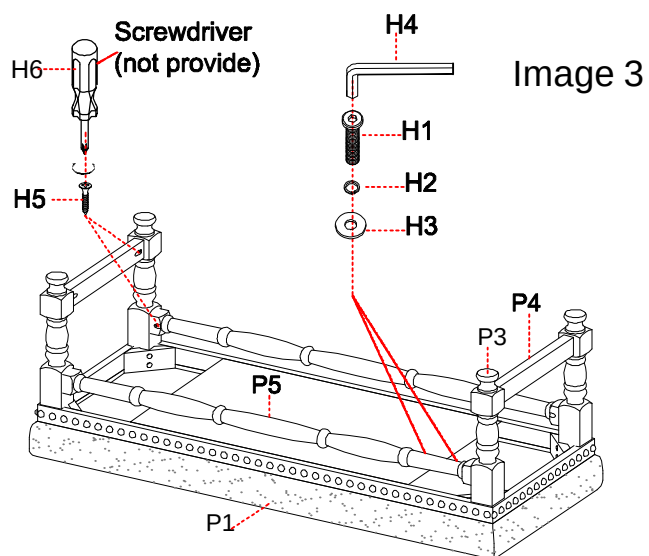

Step 4. Securely tighten all bolts and make sure the bench is leveled and aligned properly. Turn the assembled bench to an upright position. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

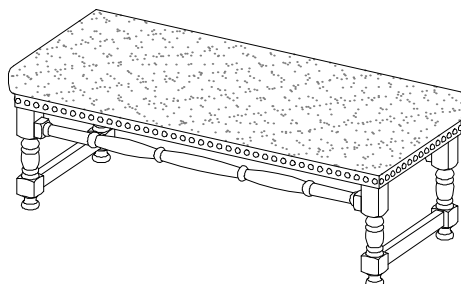

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase