














MADISON **PARK**

Assembly Instruction---Settee


PARTS #	PARTS NAME	DRAWING	QTY
P1	FRONT LEGS		2
P2	BACK LEGS		2
P3	PLASTIC WASHER		4
P4	SEAT FRAME		1
P5	BACKREST		1
P6	LEFT ARM		1
P7	RIGHT ARM		1
P8	SEAT CUSHION		1

Hardware#	PARTS NAME	DRAWING	QTY
H1	Bolts $\phi 5/16 \times 2-3/16$ "		6
H2	Lock Washers $\phi 5/16$ "		6
H3	Flat Washers $\phi 5/16$ "		6
H4	Allen Wrench $\phi 5/16$ "		1


1. Open the carton and take out all legs, hardware package, seat frame, backrest, all arms and seat cushion.

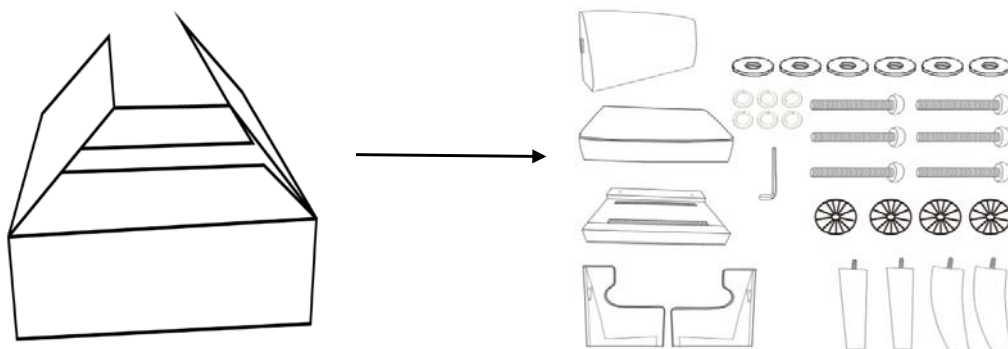


2.Open the black fabric under the seat frame.Align the holes on the seat frame(P4) and backrest(P5),by using flat washers (H3), lock washers(H2) and bolts (H1). Securely tighten all bolts with allen wrench (H4).

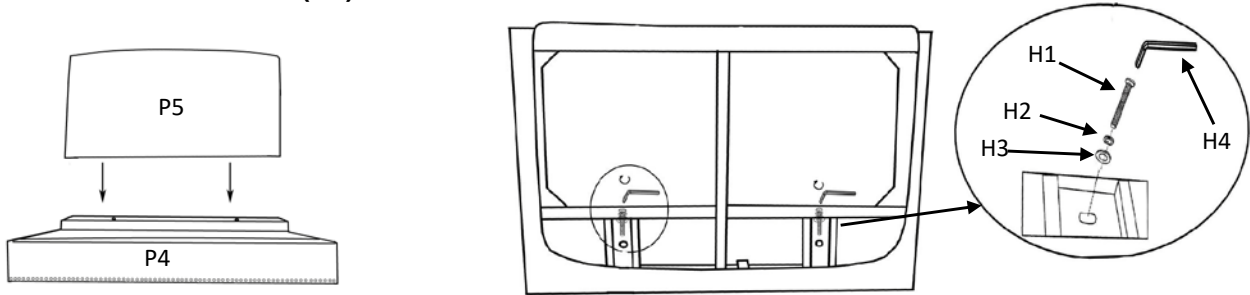


3.Align the mounting positions on the arms(P6&P7). Insert the arms (P6&P7) into the backrest(P5).

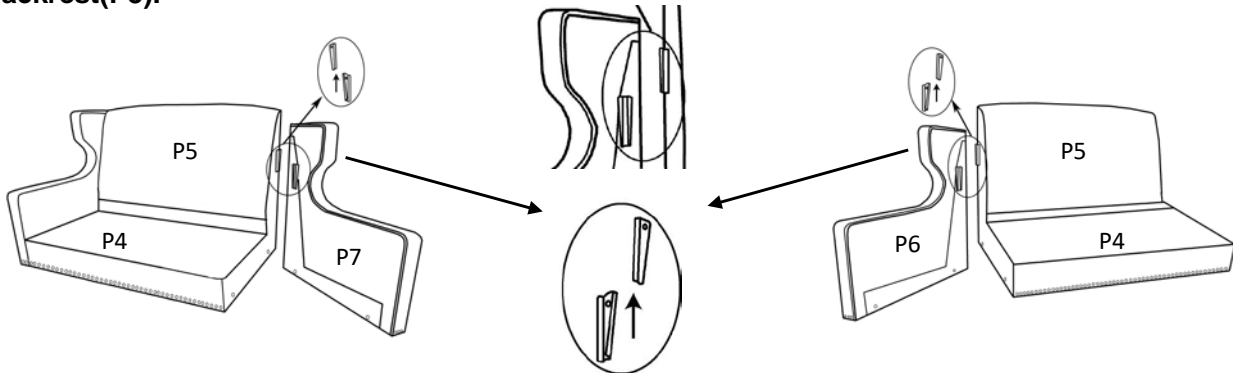

4. Align the holes on the seat frame(P4) and the arms(P6&P7),then using flat washers (H3), lock washers(H2) and bolts (H1). Securely tighten all bolts with allen wrench (H4).Close the black fabric with zipper.

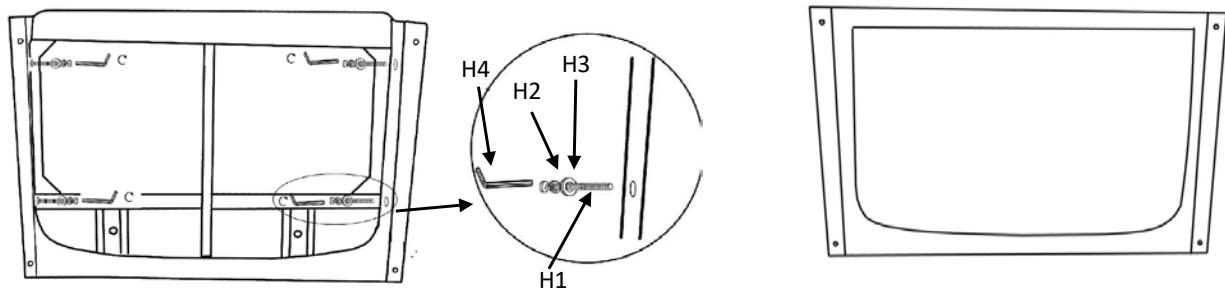

5.Screw in the front leg (P1) and back leg (P2) using Plastic Washer (P3) for each. Screw tight to the right angle.

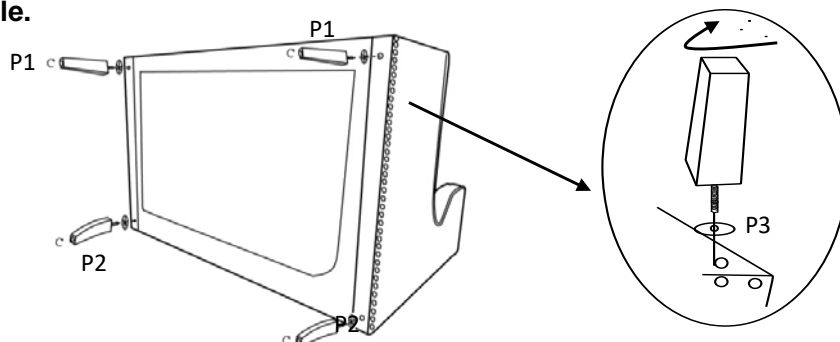

6.Turn the chair over and place it upright on a level surface,put the seat cushion(P8) on the chair.

