

ASSEMBLY INSTRUCTIONS

Description: Payton Dining Side Chair







Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.








Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Chair Top		1
P2	Left Side Frame	 (P2)	1
P3	Right Side Frame	 (P3)	1
P4	Seat Frame		1
P5	Back Top Rail (Short)		1
P6	Bottom Rail (Long)		1

Hardware List



Item	Description		QTY
H1	Long Bolts Ø5/16"×3"L		4
H2	Short Bolts Ø5/16"×1-3/4"L		4
H3	Lock Washers 5/16"		8
H4	Flat Washers 5/16"		8
H5	Allen Wrench 5/16"		1
H6	Screws #8×1-1/2"		2
H7	Screws #8×5/8"		4

Assembly Procedures:

Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.

- 1) Attach seat frame (P4) to right side frame (P3) using bolts (H1&H2), lock washers (H3) and flat washers (H4) as shown below.
- 2) Attach the Back Top Rail (Short) (P5) and bottom rail (long) (P6) to right side frame (P3), do not tighten the screws at this step.


- (H1)x2 Long Bolts
 (H2)x2 Short Bolts
 (H3)x4 Lock Washers
 (H4)x4 Flat Washers
 (H5)x1 Allen Wrench

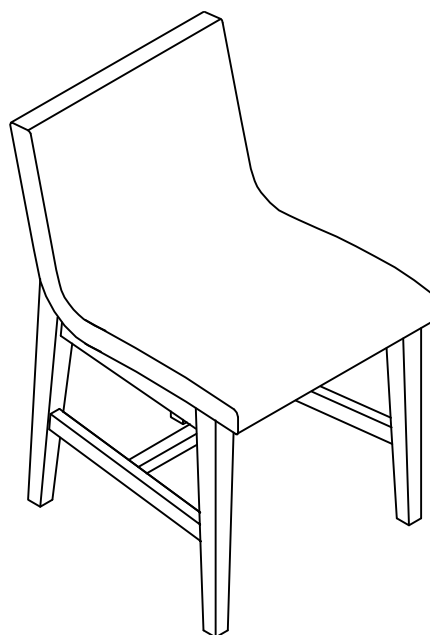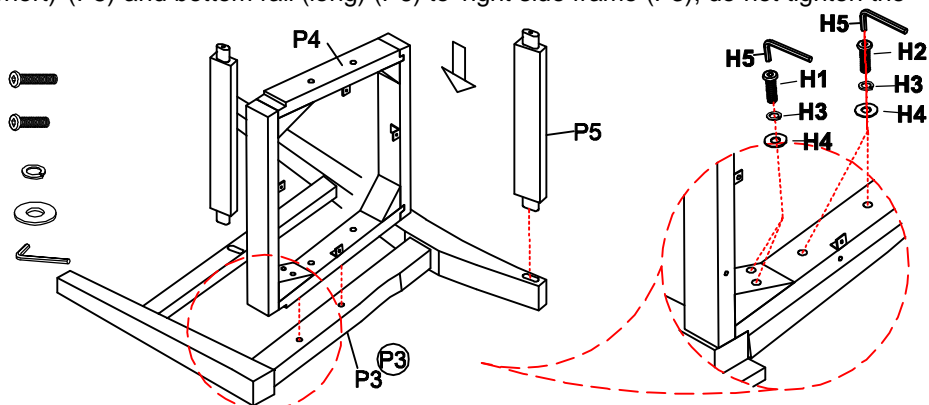

Step 2.

- 1) Loosely attach left right side frame (P2) to the back top rail(short) (P5), the bottom rail(long) (P6) and seat frame (P4) using bolts (H1&H2), lock washers (H3) and flat washers (H4) as shown below.
- 2) Tighten screws (H6) through the back top rail (short) (P5) and the bottom rail(long) (P6) to each side frame by screw driver (not provided).


- (H1)x2 Long Bolts 
- (H2)x2 Short Bolts 
- (H3)x4 Lock Washers 
- (H4)x4 Flat Washers 
- (H6)x2 Screws 

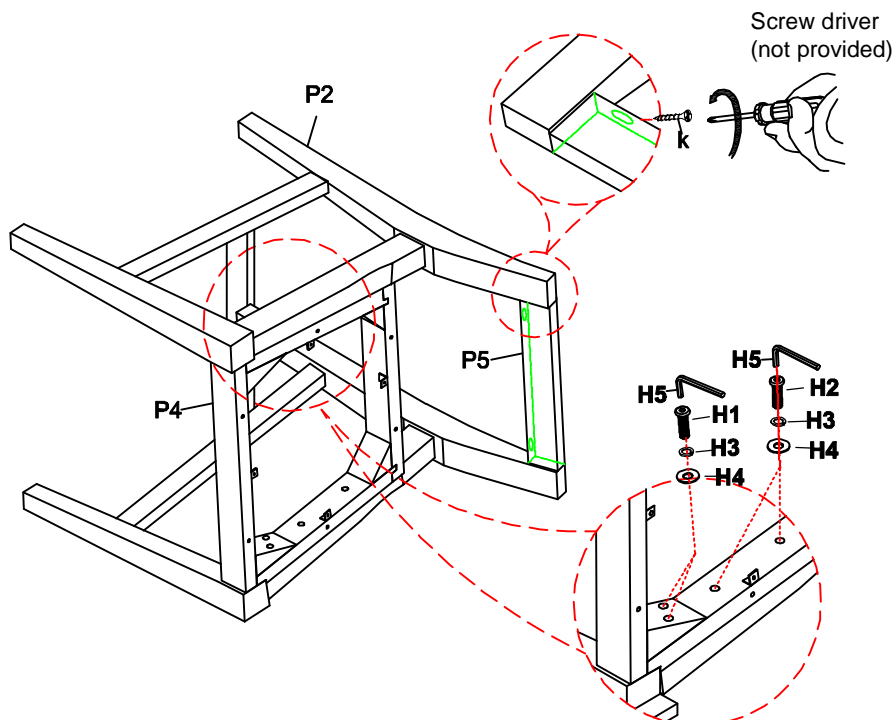

Step 3.

- 1) Attach chair top (P1) to the assembled seat frame (P4) as using screws (H7). Securely tighten with screw driver (not provided)
- 2) Make sure the chair is level and securely tighten all bolts by Allen wrench (H5).
- 3) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

- (H7)x4 Screws 

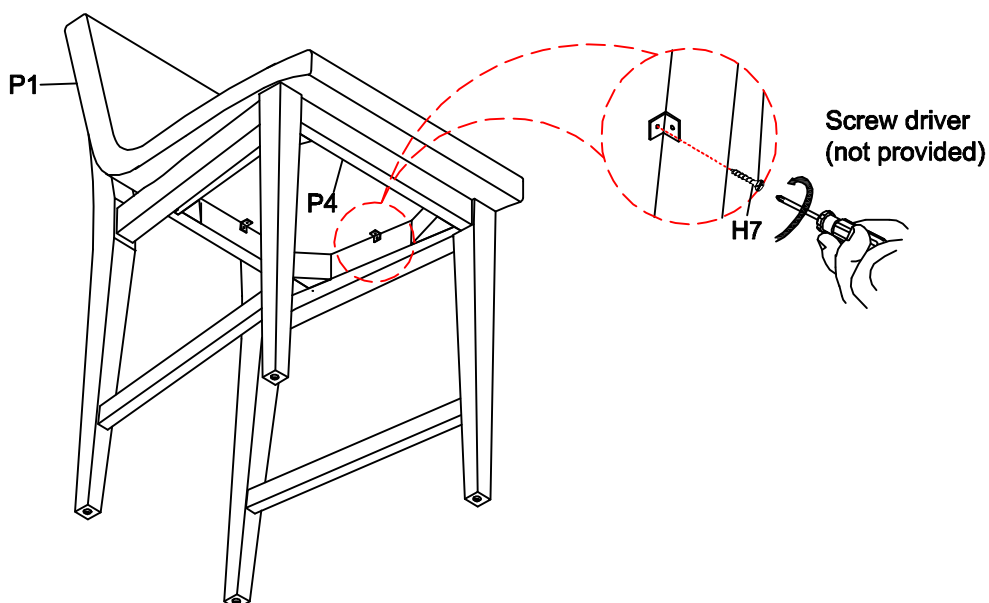

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase