













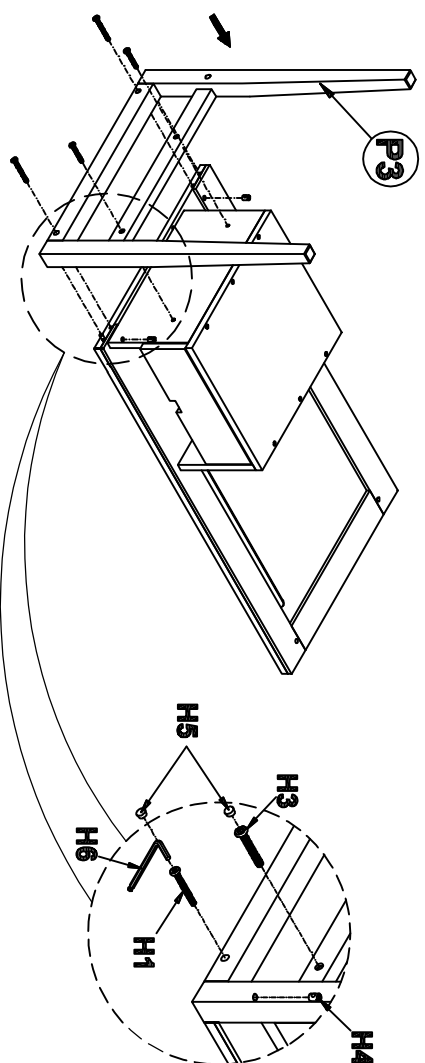
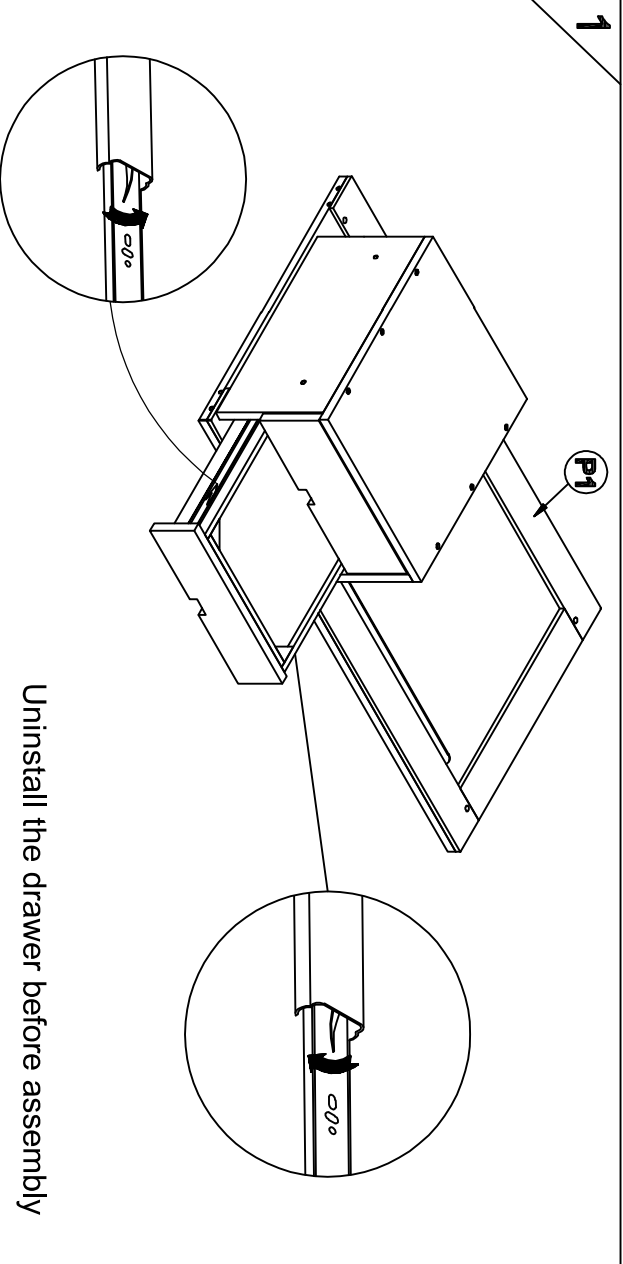
Assembly instructions:

PARTS LIST			
No.	DESCRIPTION	IMAGE	QTY
P1	BODY		1
P2	LEFT SIDE FRAME		1
P3	RIGHT SIDE FRAME		1
P4	BACK FRAME		1

HARDWARE LIST

No.	DESCRIPTION	IMAGE	QTY
H1	Bolt 1/4"x85mm		4
H2	Bolt 1/4"x63mm		2
H3	Bolt 1/4"x30mm		2
H4	Nut (1/4")		6
H5	Wooden Plug		8
H6	Allen Key		1
H7	Screw		1
H8	Screw Driver		Not Provided


NOTE: PO# is located underneath/ inside of each item. Please be prepared to provide this # should any claim be necessary.
CAUTION: Item is heavy assembly should be performed by two people.




MADISON PARK SCANDI 2 DRAWER DESK

Assembly instructions:


2

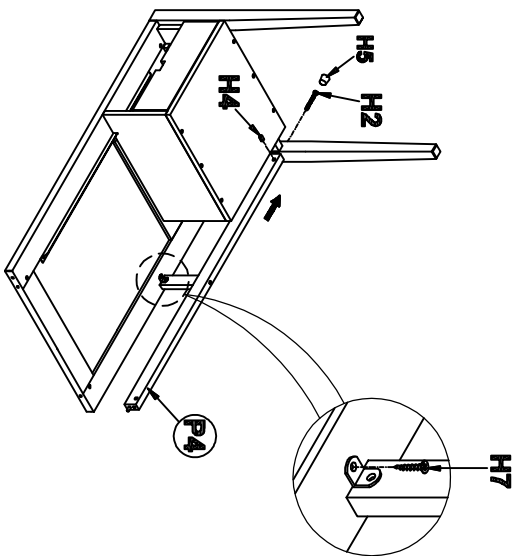

3

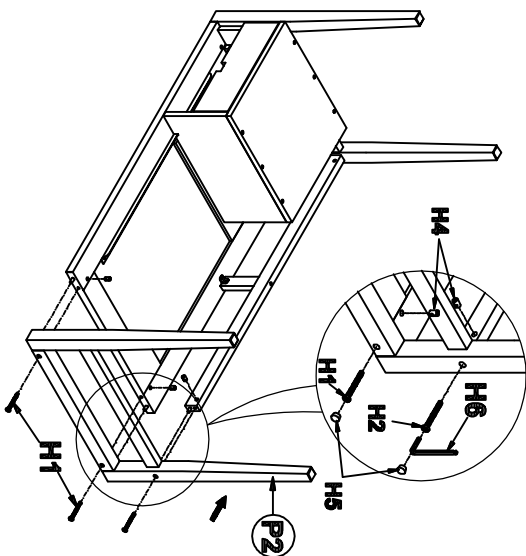


4

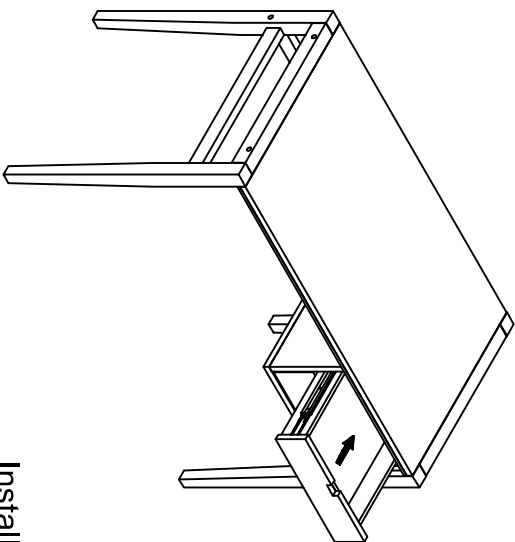

Install the drawer

5

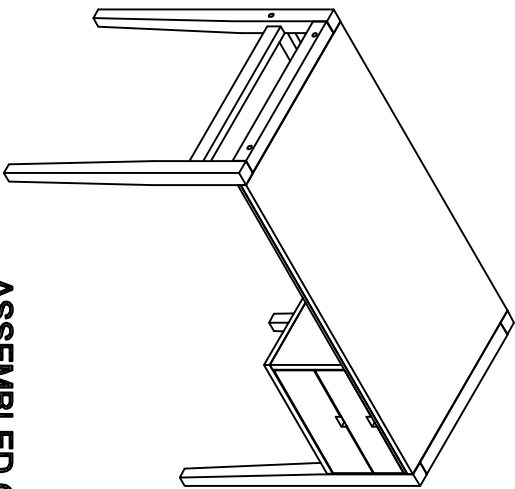

ASSEMBLED COMPLETE