






Important safety instructions:


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.








Pre-assembly:

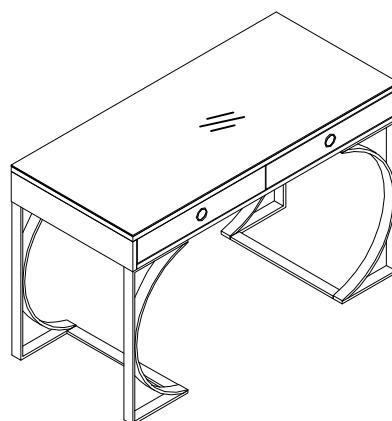- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

| Item | Description | | QTY |
|------|-------------|---|-----|
| P1 | Desk Top |  | 1 |
| P2 | Glass Top |  | 1 |
| P3 | Leg1 |  (P3) | 2 |
| P4 | Leg 2 |  (P4) | 2 |
| P5 | Stretcher |  | 2 |

**Hardware List**

| Item | Description | | QTY |
|------|--|---|-----|
| H1 | Long Bolts $\varnothing 1/4 \times 1-3/8$ "L |  | 4 |
| H2 | Medium Bolts $\varnothing 1/4 \times 3/4$ "L |  | 8 |
| H3 | Short Bolts $\varnothing 1/4 \times 1/2$ "L |  | 4 |
| H4 | Lock Washers 1/4" |  | 12 |
| H5 | Flat Washers 1/4" |  | 12 |
| H6 | Allen Wrench 1/4" |  | 1 |
| H7 | Clear Plastic Pads |  | 4 |


Assembly Procedures:

Step 1. Assemble the desk on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the stretcher (P5) to the leg 1 (P3) and leg 2 (P4) as shown below.

(H3)x4 Short Bolts $\varnothing 1/4 \times 1/2$ " 


(H6)x1 Allen Wrench 1/4" 

Note: Please know there are labels with parts number under each legs.

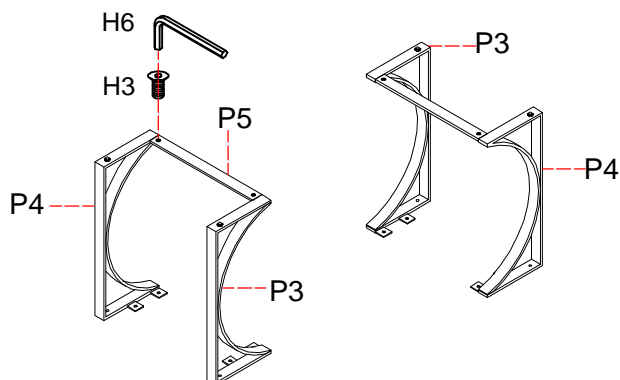

Step 2. Attach the assembled leg 1 (P3) and leg 2 (P4) to the bottom of desk (P1) as shown below.


- (H1)x4 Long Bolts $\phi 1/4'' \times 1-3/8''$ L 
- (H2)x8 Medium Bolts $\phi 1/4'' \times 3/4''$ L 
- (H4)x12 Lock Washers $1/4''$ 
- (H5)x12 Flat Washers $1/4''$ 
- (H6)x1 Allen Wrench $1/4''$ 

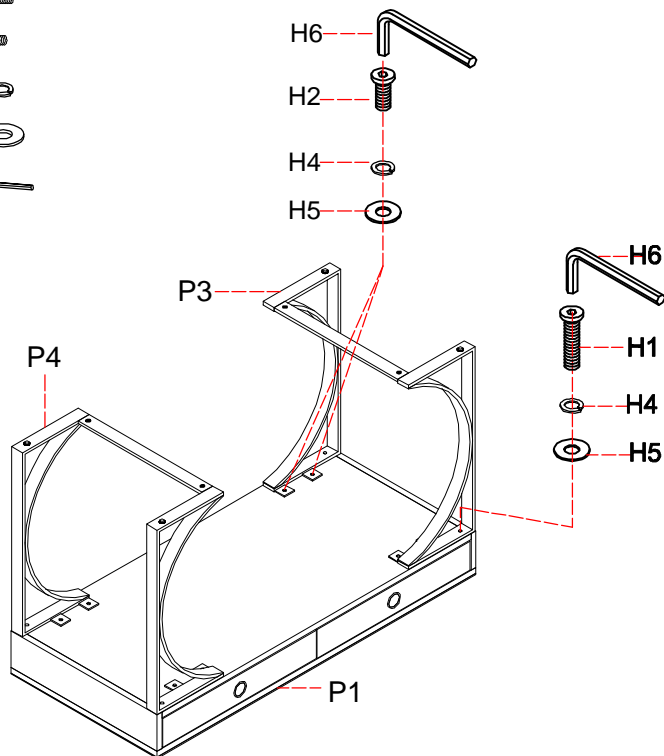

Step 3.

- 1) Securely tighten all bolts. Turn the assembled desk to an upright position.
- 2) To level desk. If there is a gap between a leg and the floor, please adjust the adjustable leveler up or down under each leg.
- 3) Put the clear plastic pads (H7) on the table top (P1) as shown below, then gently lay the glass top (P2) on the clear plastic pads (H7).
- 4) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

- (H7)x4 Clear Plastic Pad 

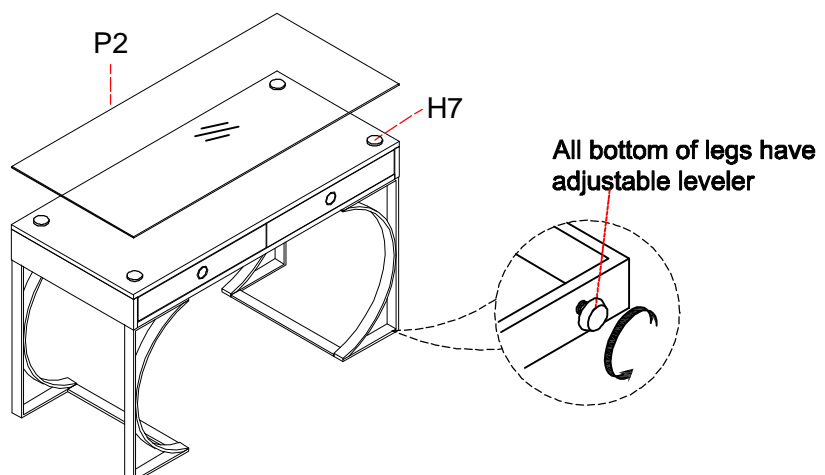

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase