

Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Cabinet Top	1
P2	Right Side Frame	1
P3	Left Side Frame	1
P4	Front Top Rail	1
P5	Back Top Rail	1
P6	Stretchers	2

Hardware List


Item	Description	QTY
H1	Bolts $\phi 1/4" \times 1-3/4"$	12
H2	Lock Washers $\phi 1/4"$	12
H3	Small Flat Washers $\phi 1/4"$	8
H4	Big Flat washers $\phi 1/4"$	4
H5	Allen Wrench $1/4"$	1
H6	Wooden Plugs	8
H7	Anti Tip Kit	1 SET

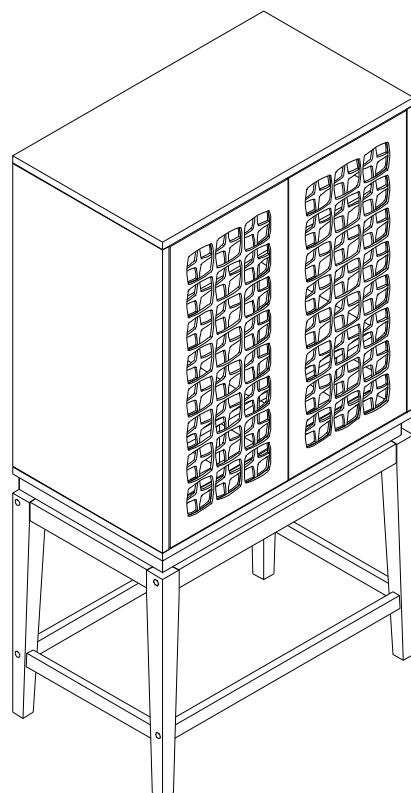

Assembly Procedures:


Step 1. Assembly the cabinet on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the top rails (P4, P5) and stretchers (P6) to the left side frame (P3) following the label "P3", "P4", "P5" on left side frame (P3) and top rails (P4, P5) accordingly and using bolts (H1), lock washers (H2) and flat washers (H3) as shown below.

(H1)x4	Bolts	●
(H2)x4	Lock Washers	○
(H3)x4	Small Flat Washers	○
(H5)x1	Allen Wrench	L

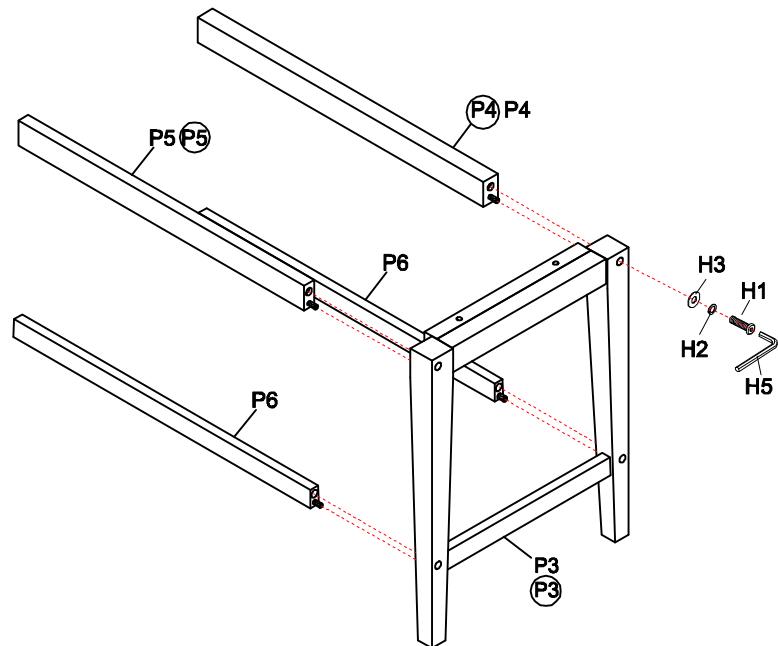

Step 2. Loosely attach right side frame (P2) to the assembled top rails (P4, P5) and stretchers (P6) using bolts (H1), lock washers (H2) and flat washers (H3) as shown below.

(H1)x4	Bolts	●
(H2)x4	Lock Washers	○
(H3)x4	Small Flat Washers	○

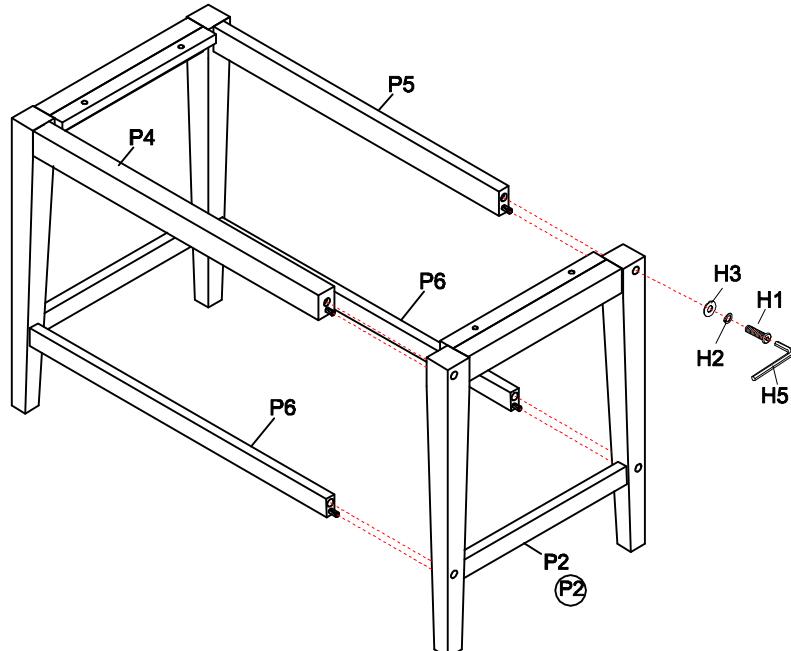

Step 3. Attach the assembled base to the bottom of cabinet top (P1) using bolts (H1), lock washers (H2) and flat washers (H4) as shown below.


(H1)x4 Bolts



(H2)x4 Lock Washers




(H4)x4 Big Flat washers

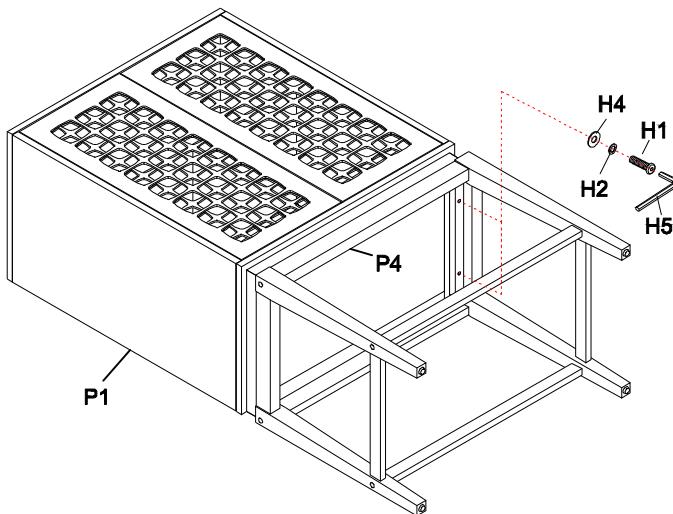

Step 4.

- 1) Securely tighten all the bolts with Allen wrench (H5). Then turn the assembled cabinet to an upright position.
- 2) Attach wooden plugs (H6) to each exposed bolt hole, tighten with rubber hammer to knock the wooden plug till its tighten. Note: use a soft cloth between the wooden plug and hammer to prevent damage to wooden plug finish.
- 3) Leveler adjustment: Leveler are installed on the legs and adjust as needed to make sure the cabinet is level. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**
- 4) Recommend that you attach the products to your wall as a safety precaution. Please see the other instructions "Furniture Safety Bracket Tip Resistant".

(H6)x8 Wooden Plugs

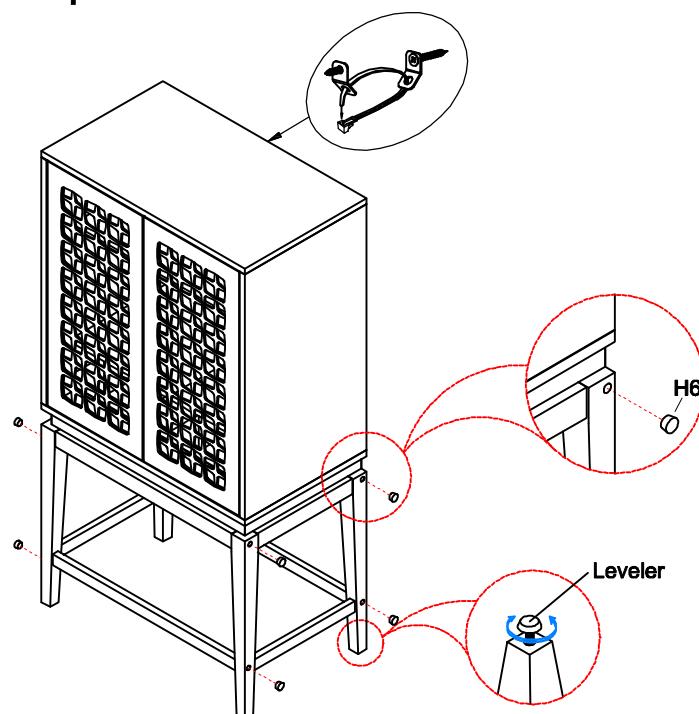

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase

Furniture Safety Bracket Tip Resistant

- Designed to help prevent furniture tipover.
- Detachable strap allows for easy moving of furniture for cleaning.
- Also helps prevent furniture tipover during minor tremore.

Installation:

Short Screw (1pcs)




Long Screw (1pcs)



Strap (1pcs)




Bracket (2pcs)

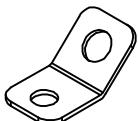


1. Locate a wall stud behind your furniture. Position a bracket on the stud approximately 1" below the top frame of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Attach a bracket to the stud with the long screws provided.



2. On the back of the furniture, a bracket will need to be attached to the furniture frame at the top. To do this, temporarily move the furniture into its final position and mark the location of the wall bracket on the furniture frame. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for screws with a 3/32" drill bit. Attach the bracket to the furniture with the short screws provided.

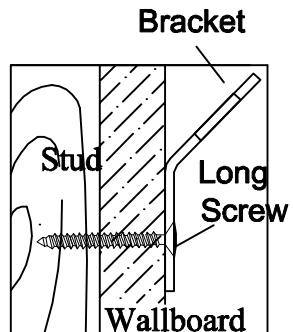

3. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug. Do not overtighten.

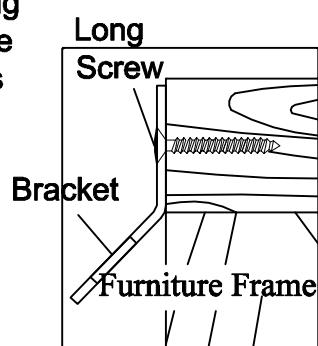

Important:

Check to be sure the wall bracket is firmly screwed into wall stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

Caution:

This product is not to be a substitute for proper parental supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws brackets or straps.

