

**Important safety instructions:**

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.


**Pre-assembly:**


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

**Parts List**

| Item | Description |                                                                                   | QTY |
|------|-------------|-----------------------------------------------------------------------------------|-----|
| P1   | Chest       |  | 1   |
| P2   | Side Frame  |  | 2   |


**Hardware List**

| Item | Description       |                                                                                     | QTY   |
|------|-------------------|-------------------------------------------------------------------------------------|-------|
| H1   | Bolts Ø1/4"x5/8"L |    | 8     |
| H2   | Allen Wrench 1/4" |   | 1     |
| H3   | Anti Tip Kit      |  | 1 SET |

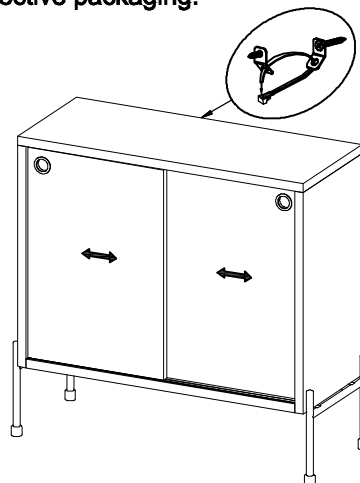**Assembly Procedures:**

Step 1. Assemble the chest on a flat, soft surface such as a carpet or cloth to prevent scratching the finish.

- 1) Loosely attach each side frame (P2) to the metal rails on the bottom of chest (P1) as shown below.
- 2) Securely tighten all the bolts with Allen wrench (H2).
- 3) Turn the assembled chest to an upright position.
- 4) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**
- 5) **Recommend that you attach the products to a wall as a safety precaution. Please see the other instructions "Furniture Safety Bracket Tip Resistant".**

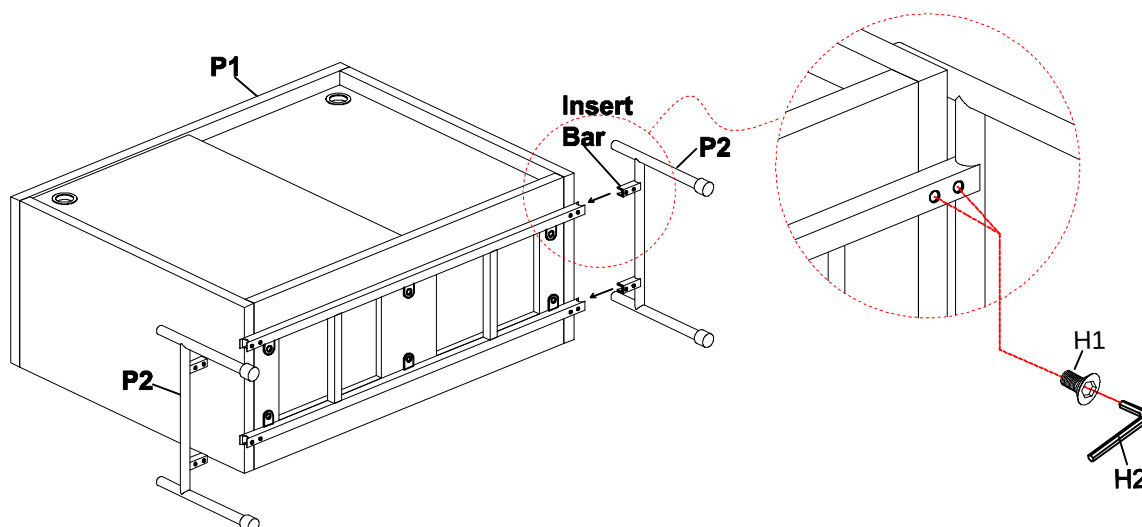

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.**


Thank you for you purchase

## Install / Remove the Sliding door




### 1). Install the sliding doors.

- a). In order to install the sliding doors, the top guide pins must be locked in the fully retracted position. If they are not already, push them down until they click lock. (Illustration #1)
- b). Place the rear door bottom rollers in the back bottom track. Pivot the top of the door to align the top guide pins with the back upper track on the buffet. Push the button on the back of the top guide pins to release the lock allowing repeat with the other door in the front set of tracks.

### 2). Reverse "install the sliding doors" steps to remove the sliding doors if necessary.

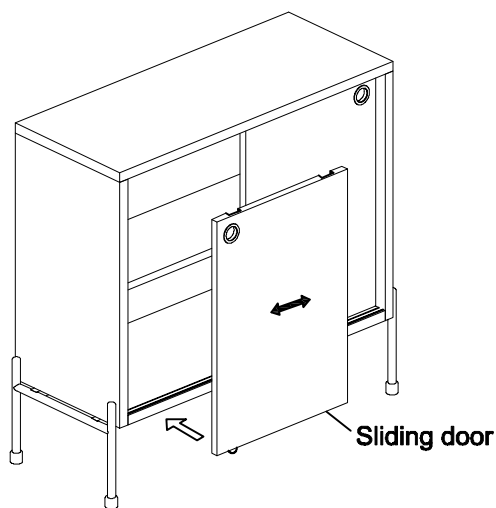

Note: Be sure door pulls face outward

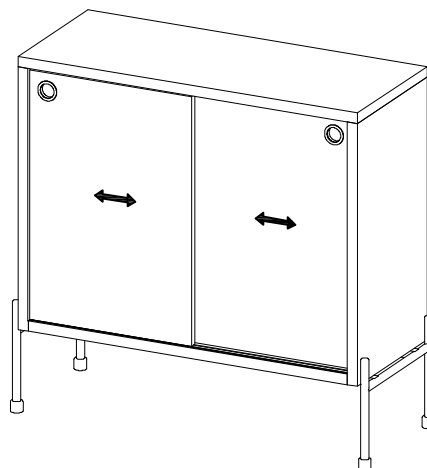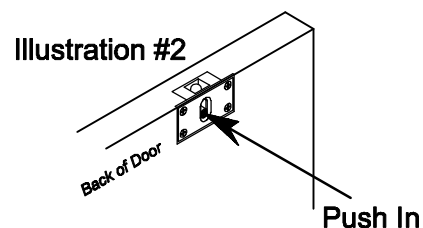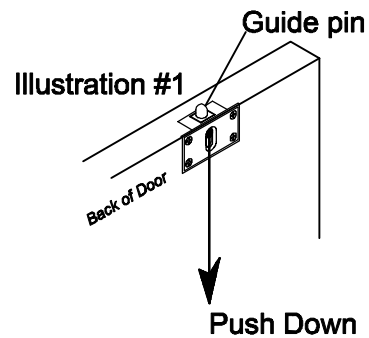

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.**

Thank you for you purchase

# Furniture Safety Bracket Tip Resistant

- Designed to help prevent furniture tipover.
- Detachable strap allows for easy moving of furniture for cleaning.
- Also helps prevent furniture tipover during minor tremore.

## Installation:

### Short Screw (1pcs)




### Long Screw (1pcs)



### Strap (1pcs)





### Bracket (2pcs)

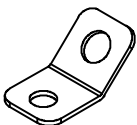

1. Locate a wall stud behind your furniture. Position a bracket on the stud approximately 1" below the top frame of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Attach a bracket to the stud with the long screws provided.

2. On the back of the furniture, a bracket will need to be attached to the furniture frame at the top. To do this, temporarily move the furniture into its final position and mark the location of the wall bracket on the furniture frame. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for screws with a 3/32" drill bit. Attach the bracket to the furniture with the short screws provided.

3. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snup. Don not overtighten.

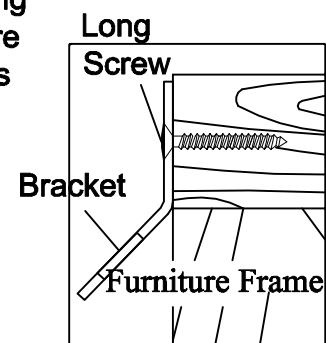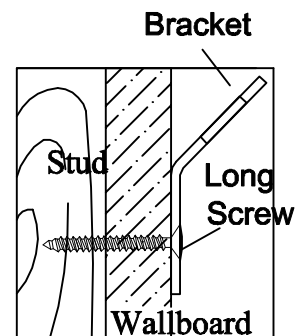

## Important:

Check to be sure the wall bracket is firmly screwed into wall stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

## Caution:

This product is not to be a substitute for proper parental supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws brackets or straps.

