

Important safety instructions:


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Top Rails	2
P2	Bottom Rails	2
P3	Left Side Frames	2
P4	Front Frame	1
P5	Back Frame	1
P6	Top Panel	1
P7	Bottom Panel	1
P8	Shelves	4
P9	Right Side Frames	2

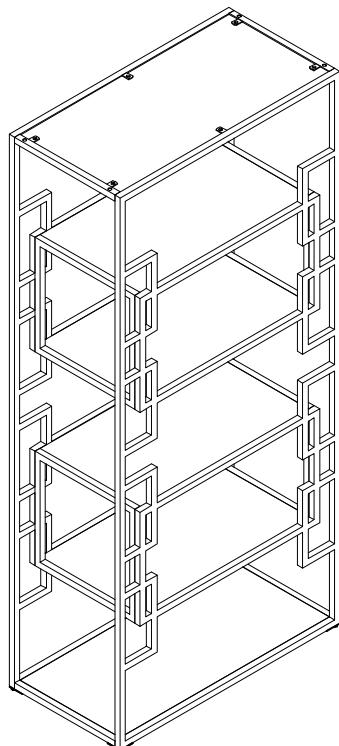**Hardware List**

Item	Description	QTY
H1	Short bolts Ø1/4"**1/2"L	44
H2	Long bolts Ø1/4"**1-1/4"L	16
H3	Allen Wrench Ø1/4	1
H4	Anti Tip Kit	1 SET

Assembly Procedures:




Step 1. Assemble the bookcase on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the top rails (P1), bottom rails (P2), left side frames (P3) and right side frame (F9) to the front frame (P1) . **Loosely** tighten all bolts with Allen wrench (H3) .

(H1)x6 Short bolts Ø1/4"**1/2" L 


(H2)x8 Long bolts Ø1/4"**1-1/4" L 

(H3)x1 Allen Wrench 1/4" 

Note: All holes without nuts will face outside as shown the diagram.

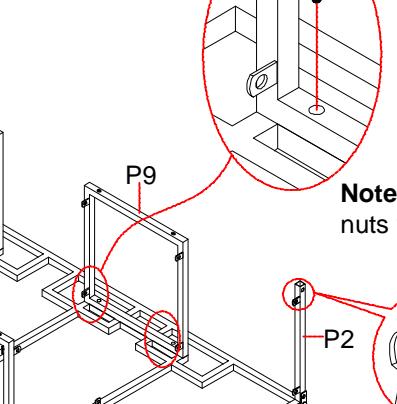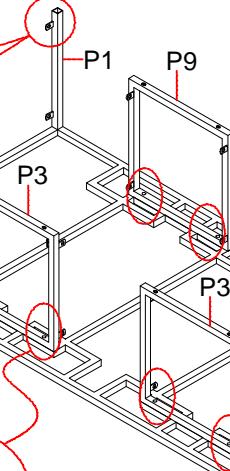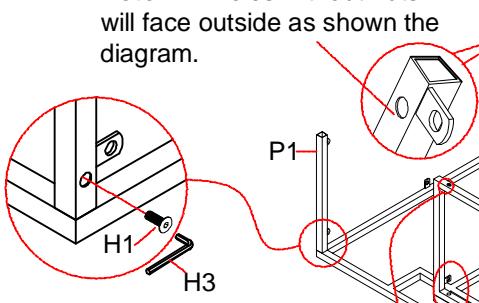

Note: Make sure that the holes with nuts location on top of side frame when assembling.

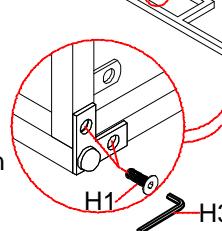


Note: the holes with nuts will face down.

P4 (**Note:** the front of front frame without any hole will face on the floor.)

Step 2. Loosely attach top panel (P6), bottom panel (P7) and shelves (P8) to the top rails (P1), bottom rails (P2), side frames (P3&P9) and front frame (P4) . **Loosely** tighten all bolts with Allen wrench (H3) .

(H1)x30 Short bolts Ø1/4"**1/2" L 

(H3)x1 Allen Wrench 1/4" 

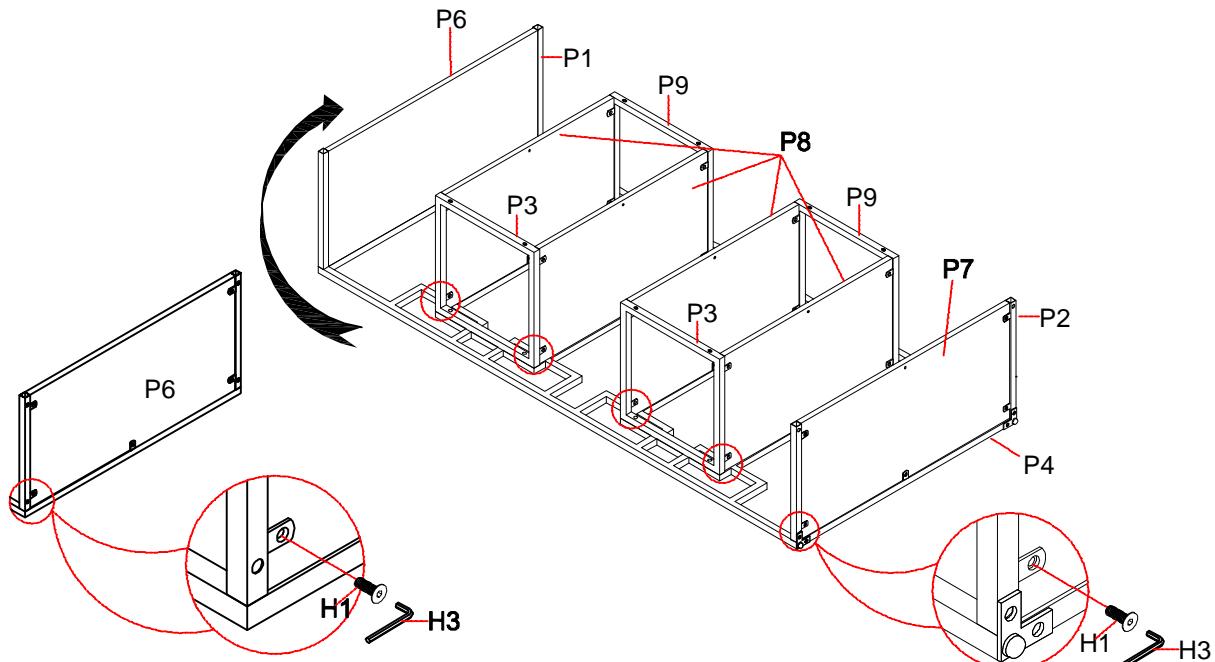

Step 3.

- Loosely attach the back frame (P5) to the top rails (P1), bottom rails (P2) and side frames(P3 & P9).
- Loosely attach the back frame to top panel (P6), bottom panel (P7) and shelves (P8).
- Securely tighten all bolts with Allen wrench (H3).


(H1)x8 Short bolts Ø1/4" *1/2" L



(H2)x8 Long bolts Ø1/4" *1-1/4" L




(H3)x1 Allen Wrench 1/4"

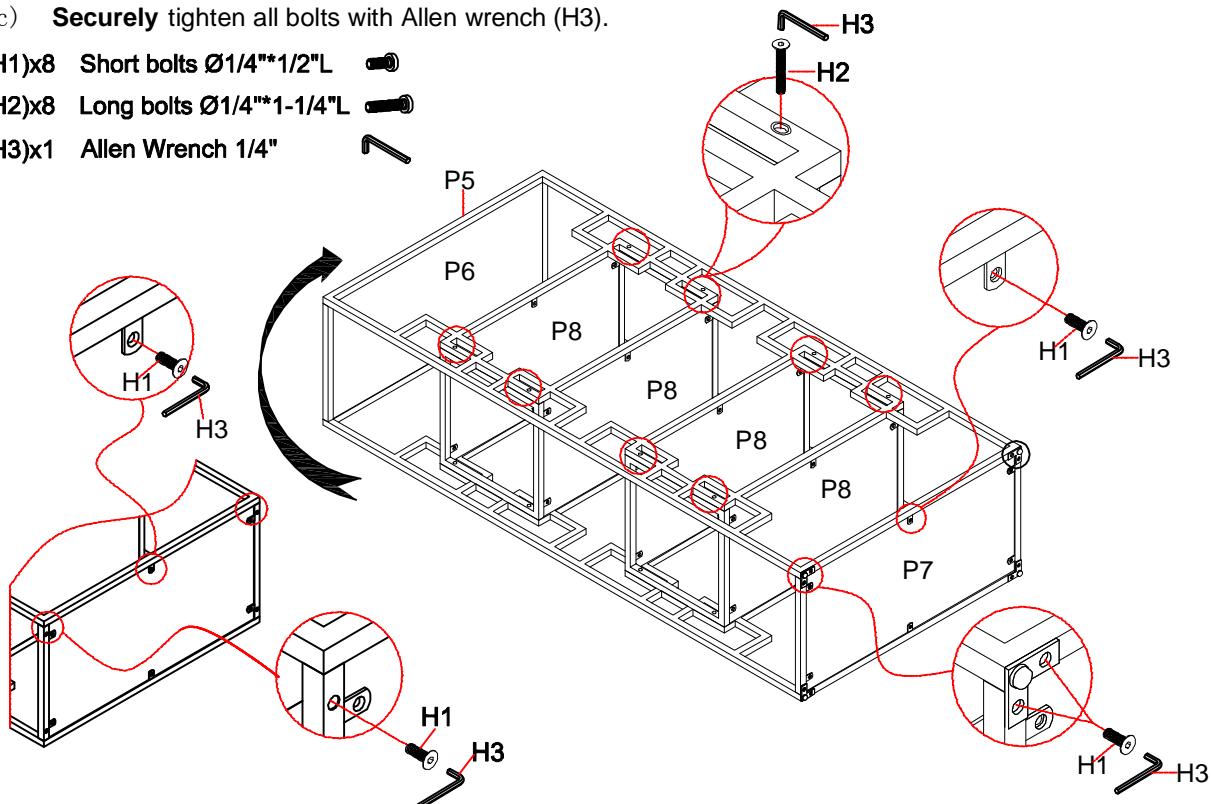

Step 4.

- Turn the assembled bookcase to an upright position. Make sure the bookcase is level and securely tighten all bolts with Allen wrench (H3).
- Recommend that you attach the products to your wall as a safety precaution.** Please see the other instructions "Furniture Safety Bracket Tip Resistant".
- Leveler adjustment:** Leveler are installed on the bottom corner and adjust as needed to make sure the bookcase is level. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

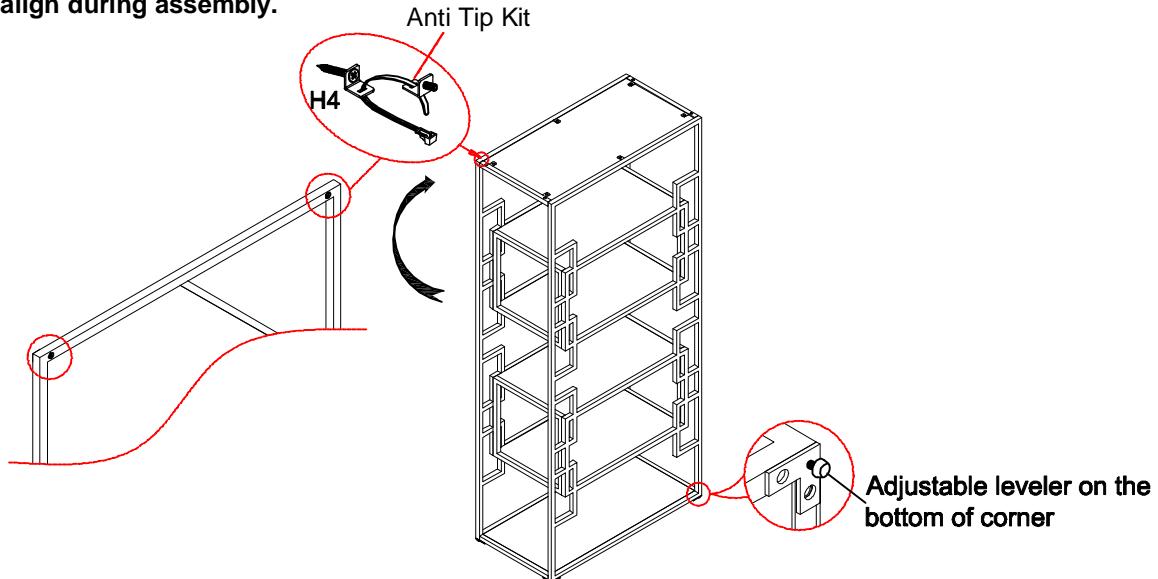

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase

Furniture Safety Bracket Tip Resistant

- Designed to help prevent furniture tipover.
- Detachable strap allows for easy moving of furniture for cleaning.
- Also helps prevent furniture tipover during minor tremore.

Installation:

Bolt (1pc)




Long Screw (1pc)



Strap (1pc)




Bracket (2pcs)




1. Locate a wall stud behind your furniture. Position a bracket on the stud approximately 1" below the top frame of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Attach a bracket to the stud with the long screws provided. Making sure the metal bracket extend UPWARD as shown.



2. On the back of the furniture. Attach the metal bracket to the back of top frame with bolt, making sure the metal bracket extend DOWNWARD as shown.

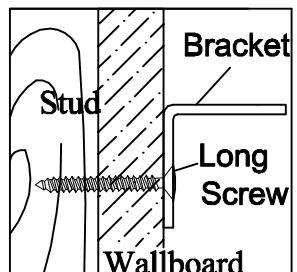

3. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug. Do not over tighten.

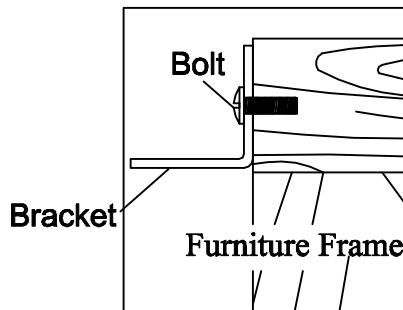

Important:

Check to be sure the wall bracket is firmly screwed into wall stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

Caution:

This product is not to be a substitute for proper parental supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws brackets or straps.

