

ASSEMBLY INSTRUCTIONS

Description: Parkdale Bookcase








Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.








Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Shelf and Bottom Panel (the arrow on the bottom of shelf.)		3
P2	Top Panel (the arrow on the bottom of top panel)		1
P3	Back Panel		3
P4	Top Back Panel		1
P5	Metal Support Leg		4
P6	Metal Post		12
P7	Mending Plate		8

Hardware List

Item	Description		QTY
H1	Bolts $\phi 1/4'' \times 3/4''$ L		30
H2	Lock Washers 1/4"		30
H3	Flat Washers 1/4"		30
H4	Allen Wrench 1/4"		1
H5	Wood Screw #8*5/8"L		14
H6	Anti Tip Kit		1 SET
H7	Screw Driver		Not included

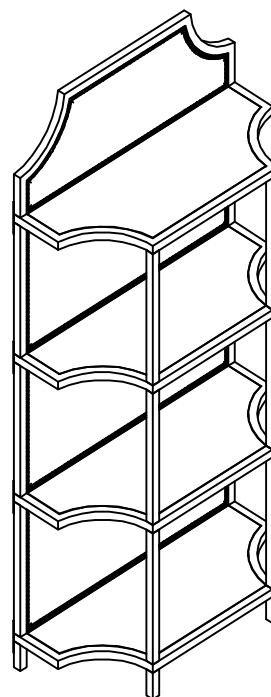

Assembly Procedures:

Step 1. Assemble the bookcase on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Insert the support legs (P5) to the bottom panel (P1), then insert posts (P6) to the bottom panel (P1), and then attach the metal plate (P7) to the posts (P5 & P6) as shown below.

(H1)x24 Bolts $\varnothing 1/4'' \times 1-3/4''$ L



(H2)x24 Lock Washers 1/4"




(H3)x24 Flat Washers 1/4"



(H4)x1 Allen Wrench 1/4"



(Note: Please note that all arrows should be face down.

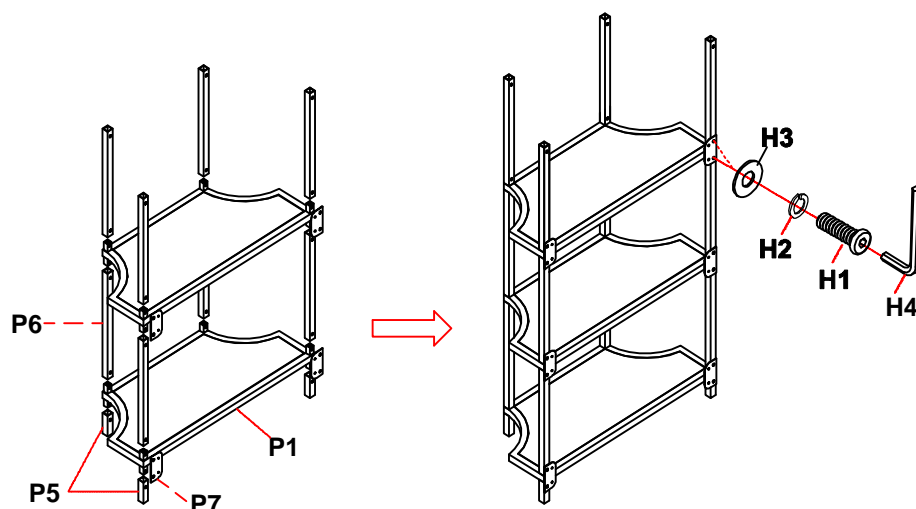

Step 2. Attach top panel (P2) to the assembled frame, then attach top back panel (P4) to the top panel (P2), and then attach mending plate (P7) to the post (P6) and top back panel (P4) as shown below.

(H1)x6 Bolts $\varnothing 1/4'' \times 1-3/4''$ L




(H2)x6 Lock Washers 1/4"



(H3)x6 Flat Washers 1/4"




(H4)x1 Allen Wrench 1/4"

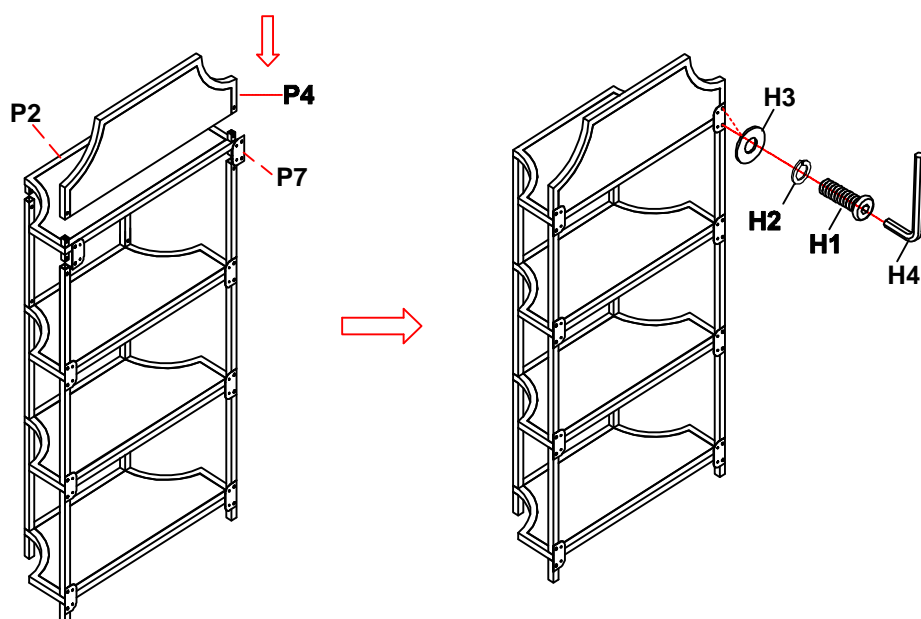


Step 3. Insert the back panels (P3) to the assembled bookcase frame as shown below.

(H5)x14 Wood Screw #8*5/8"L 

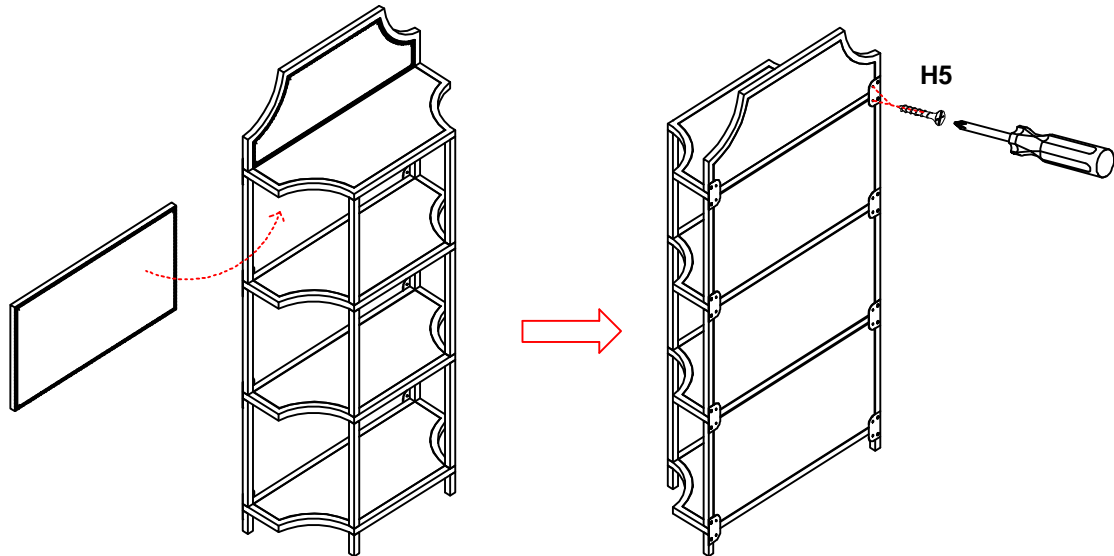

Step 4.

- 1) Leveler adjustment: Leveler are installed on the legs and adjust as needed to make sure the product is level. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**
- 2) **Recommend that you attach the products to a wall as a safety precaution. Please see the other instructions "Furniture Safety Bracket Tip Resistant".**

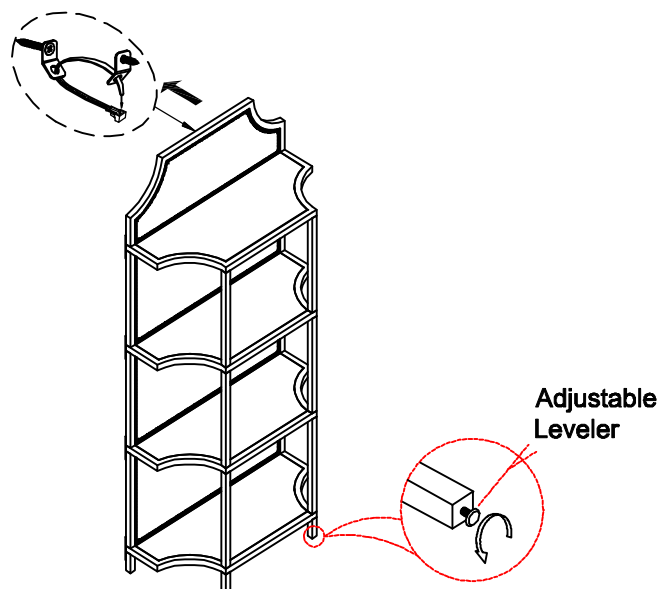

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase

Furniture Safety Bracket Tip Resistant

- Designed to help prevent furniture tipover.
- Detachable strap allows for easy moving of furniture for cleaning.
- Also helps prevent furniture tipover during minor tremore.

Installation:

Short Screw (1pcs)




Long Screw (1pcs)



Strap (1pcs)





Bracket (2pcs)

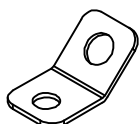

1. Locate a wall stud behind your furniture. Position a bracket on the stud approximately 1" below the top frame of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Attach a bracket to the stud with the long screws provided.

2. On the back of the furniture, a bracket will need to be attached to the furniture frame at the top. To do this, temporarily move the furniture into its final position and mark the location of the wall bracket on the furniture frame. Move the furniture away from the wall and place a bracket on the mark. Mark and drill holes for screws with a 3/32" drill bit. Attach the bracket to the furniture with the short screws provided.

3. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snup. Don not overtighten.

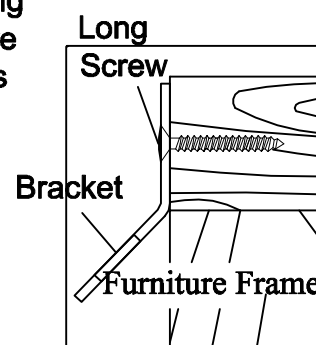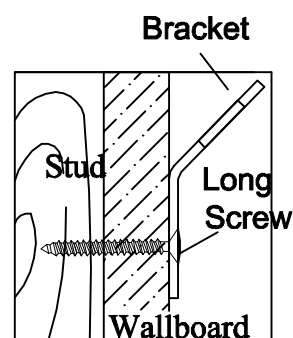

Important:

Check to be sure the wall bracket is firmly screwed into wall stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

Caution:

This product is not to be a substitute for proper parental supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws brackets or straps.

