









Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.





Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Top Panel		1
P2	Small Shelves		2
P3	Medium Shelf		1
P4	Large Shelf		1
P5	Left Leg Frame		1
P6	Middle Leg Frame		1
P7	Right Leg Frame		1
P8	"X" Crossing rails		1

Hardware List


Item	Description		QTY
H1	Bolts Ø1/4"x3/4"		30
H2	Lock Washers 1/4"		30
H3	Flat Washers 1/4"		30
H4	Allen Wrench 1/4"		1

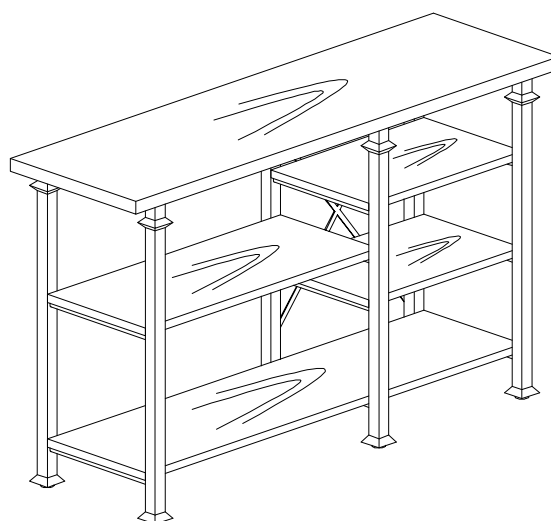

Assembly Procedures:


Step 1. Assemble the sideboard on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Loosely attach each leg frame (P5,P6,P7) to the bottom of top panel (P1) using bolts (H1), lock washer (H2) and flat washers (H3). Then loosely tighten the bolts with Allen wrench (H4).

- (H1)x6 **Bolts**
- (H2)x6 **Lock Washers**
- (H3)x6 **Flat Washers**
- (H4)x1 **Allen Wrench**

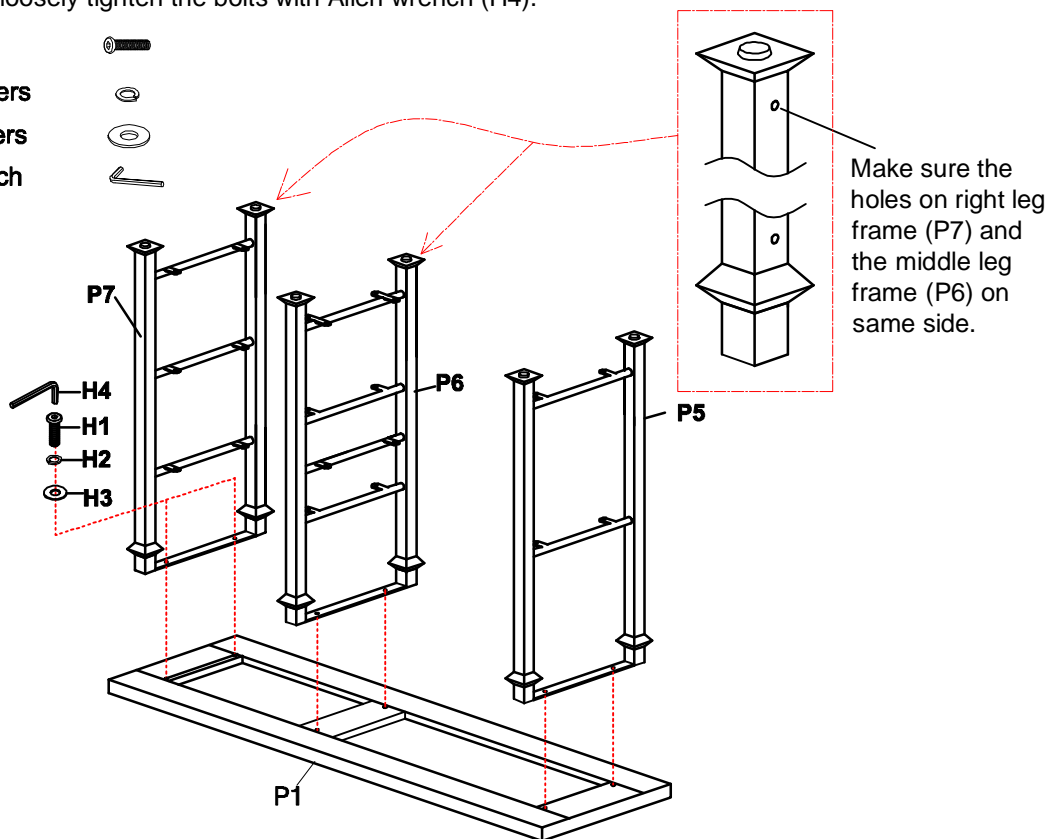

Step 2. Loosely attach large shelf (P4) to each frame (P5,P6,P7) using bolts (H1), lock washer (H2) and flat washers (H3) as shown below.

- (H1)x8 **Bolts**
- (H2)x8 **Lock Washers**
- (H3)x8 **Flat Washers**

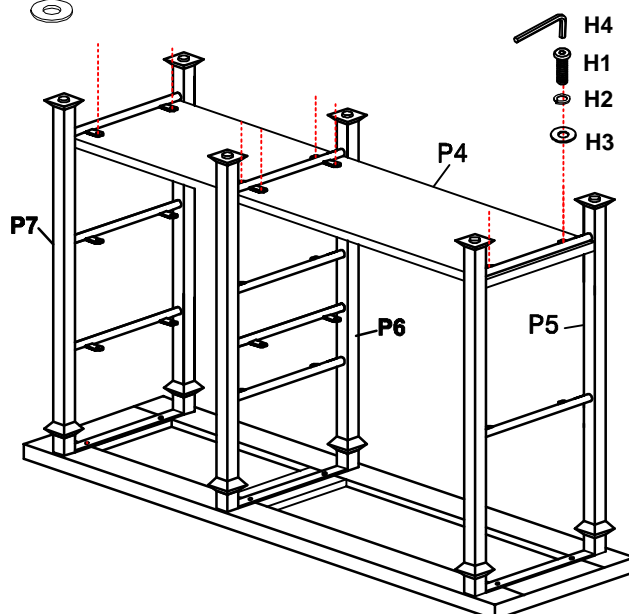

Step 3. Attach medium shelf (P3) and small shelves (P2) to each frame (P5,P6,P7) using bolts (H1), lock washer (H2) and flat washers (H3) as shown below.


(H1)x12 Bolts



(H2)x12 Lock Washers



(H3)x12 Flat Washers

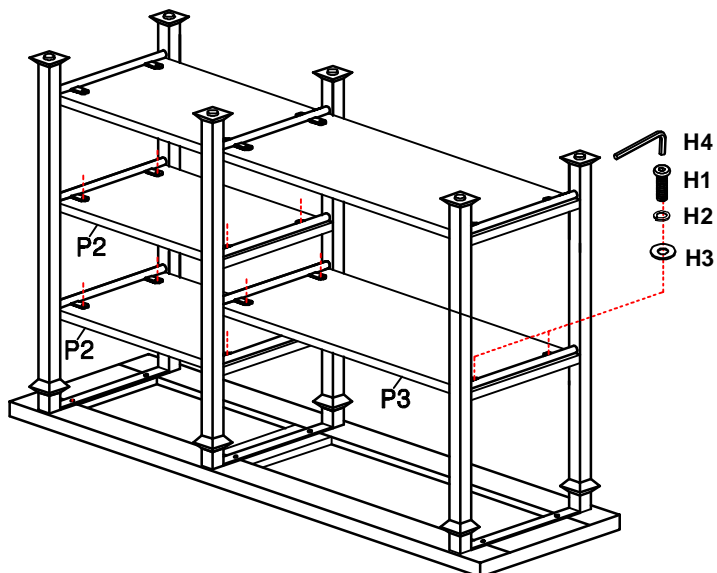

Step 4.

- 1) Attach "X" crossing rail (P8) to the assembled sideboard using bolts (H1), lock washer (H2) and flat washers (H3) as shown below.
- 2) Make sure the sideboard is level and securely tighten all bolts with allen wrench (H4).
- 3) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**


(H1)x4 Bolts



(H2)x4 Lock Washers



(H3)x4 Flat Washers

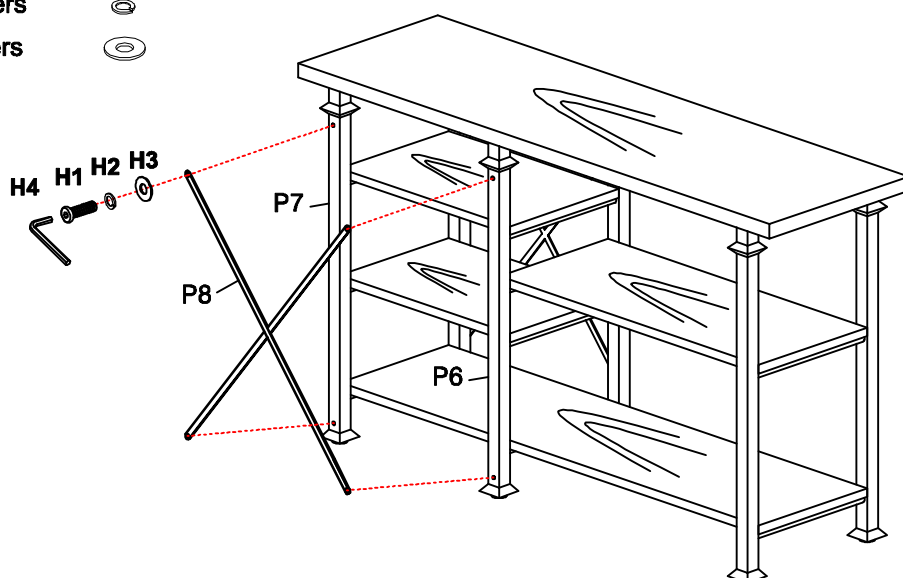

Thank you for you purchase