

# MADISONPARK ASSEMBLY INSTRUCTIONS

**Description:** Lacey Bar Cart











## Important safety instructions:


- Please carefully read all instructions before assembling the bar cart.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

## Pre-assembly:




- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

## Parts List

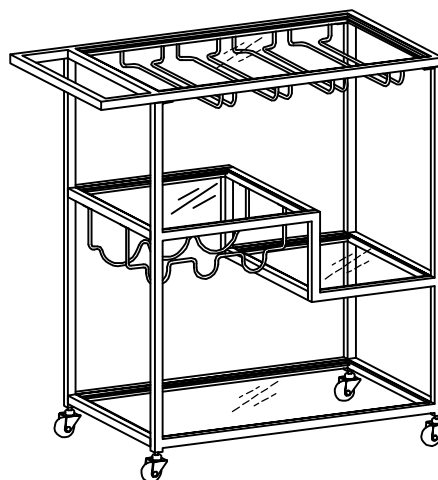Item	Description		QTY
P1	Top Frame		1
P2	Left Side Frame		1
P3	Right Side Frame		1
P4	Rails 1	 W/Four bolt holes on each rail	2
P5	Rails 2		4
P6	Wire of wine rack 1		1
P7	Wire of wine rack 2		1
P8	Big shelf glass		2
P9	Medium shelf glass		1
P10	Small shelf glass		1



## Hardware List

Item	Description		QTY
H1	Bolts $\varnothing 1/4"$ x $1/2"$ L		36
H2	Plastic Pad		16
H3	Allen Wrench 4mm		1

## Assembly Procedures:

**Step 1.** Assemble the bar cart on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Loosely attach each rail (P4&P5) to the left side frame (P2) as shown below.

(H1)x12

**Bolts**




(H3)x1

**Allen Wrench**




**Caution:** Each rail (P4) have four bolt holes in center.

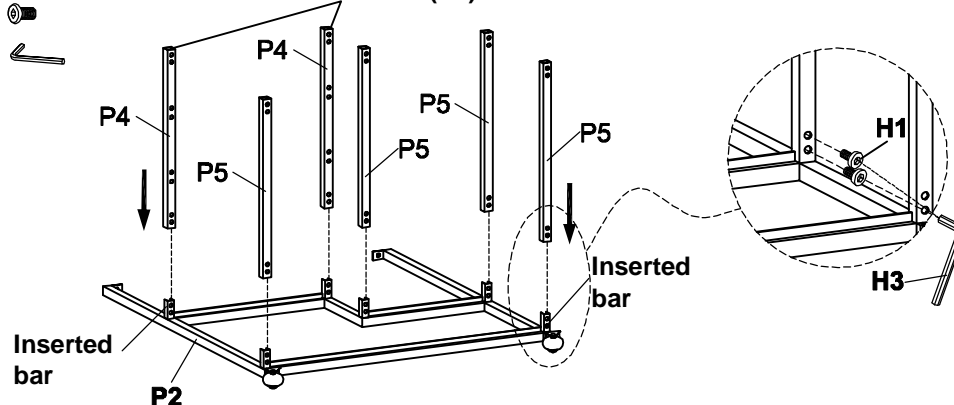

**Step 2.** Attach the right side frame (P3) to the assembled each rail (P4&P5) as shown below.


(H1)x12    **Bolts**      
 (H3)x1    **Allen Wrench**    

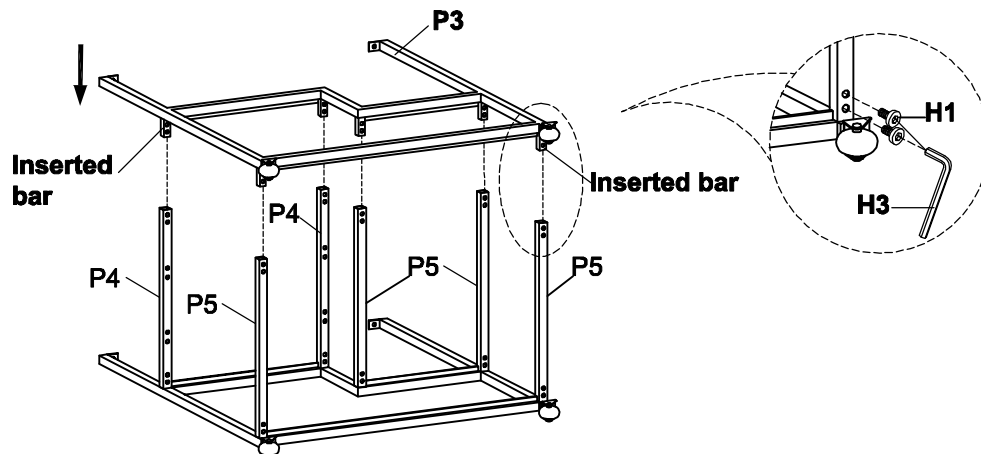

**Step 3.**

- 1) Turn the assembled bar cart base to an upright position.
- 2) Attach top frame to assembled bar cart base as shown below.
- 3) Attach metal wire rack ( P6 & P7 ) to assembled rail 1 ( P4 ) as shown below.


(H1)x12    **Bolts**      
 (H3)x1    **Allen Wrench**    

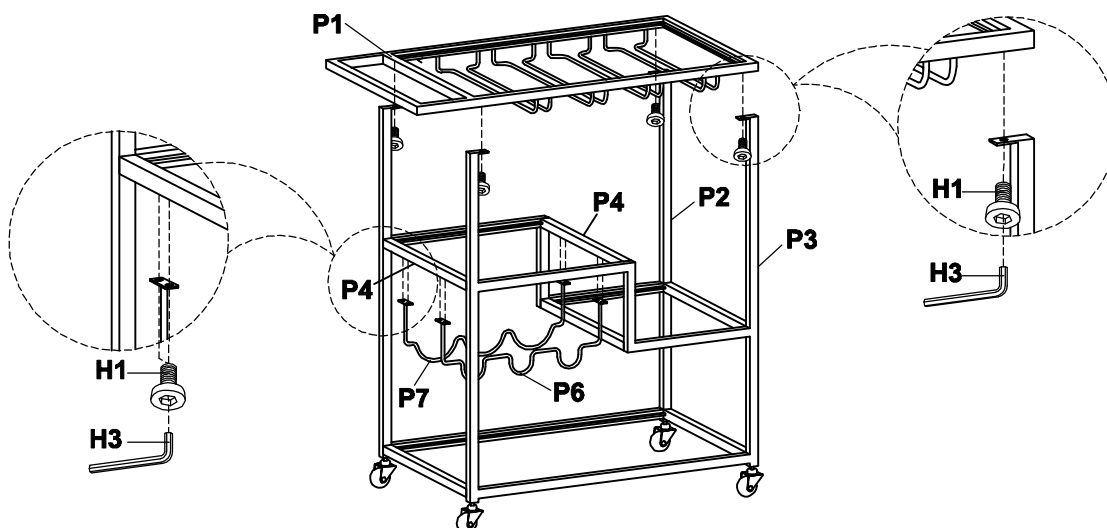

Step 4.

- 1) Make sure the table is level and securely tighten all bolts with Allen wrench (H3).
- 2) Place the plastic pad (H2) on each top frame as shown below.
- 3) Gently lay each glass (P8, P9, P10) on the assembled bar cart.
- 4) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(H2)x16 **Plastic Pad** ○

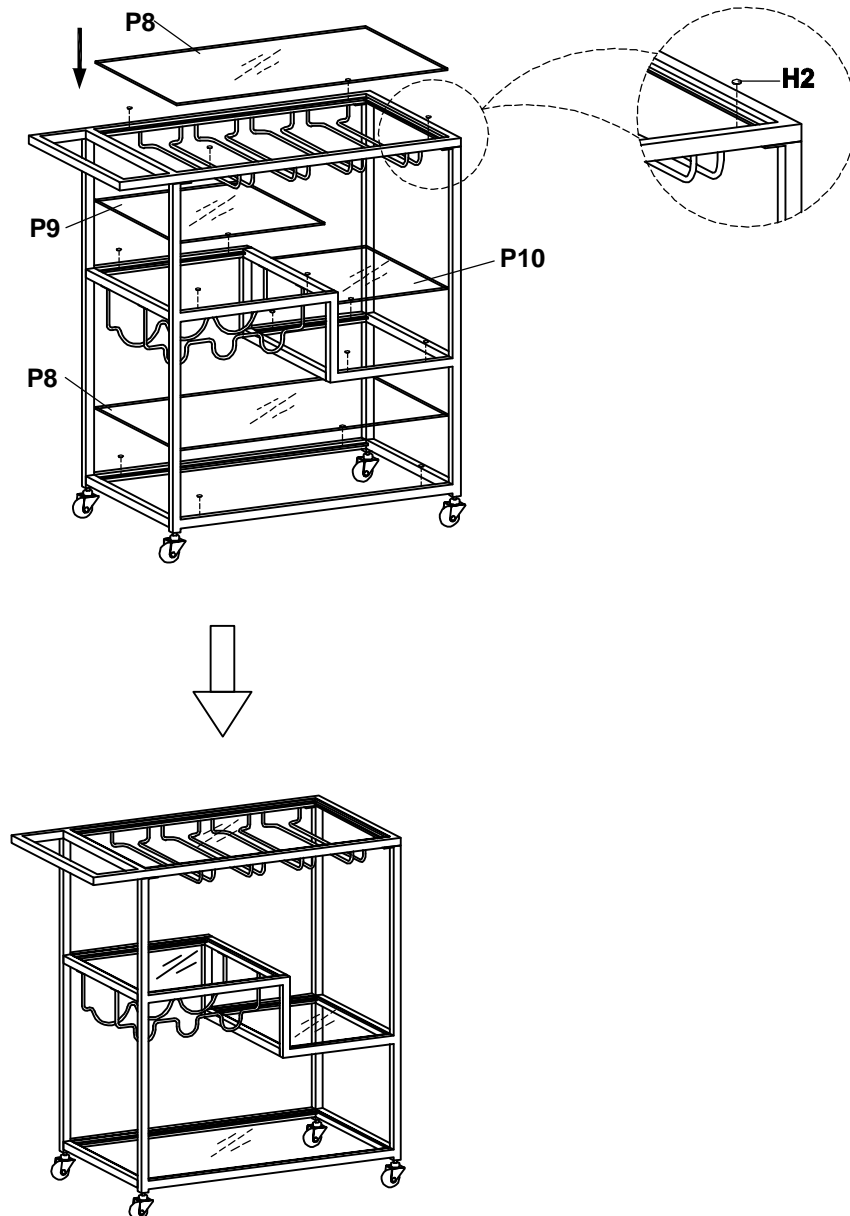

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

**Thank you for your purchase**