


MADISON **PARK**

Assembly Instruction-- Scarlett Corner


PARTS #	PARTS NAME	DRAWING	QTY
P1	Seat		1
P2	Backrest1		1
P3	Backrest2		1
P4	Back cushion		2
P5	Seat cushion		1

Hardware#	PARTS NAME	DRAWING	QTY
H1	Flat Washers		8
H2	Long Bolts		8
H3	Plastic bolt cap		10
H4	Allen Wrench		1
H5	Short Bolts		2
H6	Aluminum Sheet		1


Step1. Place the backrests(P2) ,(P3) against the seat (P1) ,and turn over ,fix backrest(P2) ,(P3) to seat (P1) from seat bottom by using H1, H2 ,do not tighten the bolt .

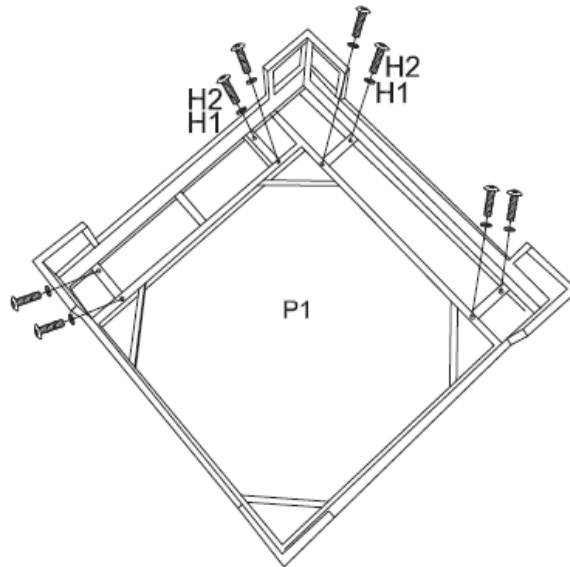

Step2. Upright the step1 part ,fix backrest1(P2) and (P3) by using H1, H5, H6 ,screw tighten with H4 ,then cover the cap(H3) on the bolt.

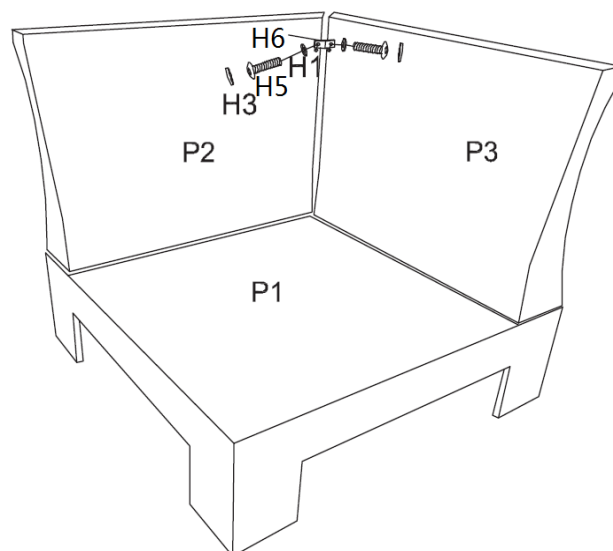

Step3. Turn over the corner ,tighten Bolt(H2) by using H4,then cover the cap H3 on the bolt .

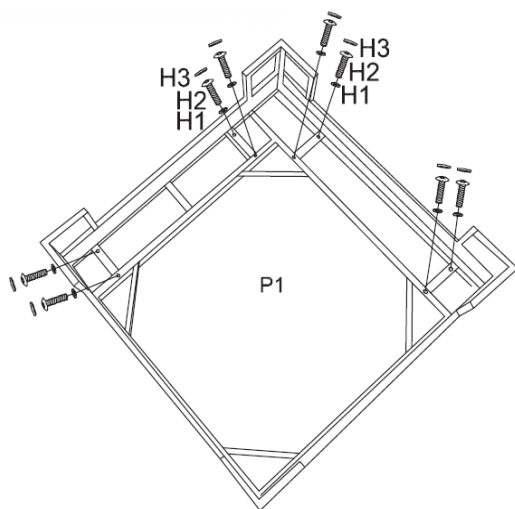

Step4. Upright the corner on a level surface and place the back cushion(P4) and seat cushion(P5) on it .

