



ASSEMBLY INSTRUCTIONS

Auden Accent Chair

Important safety instructions:

- Please read carefully all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is completed to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any protective packaging.


Parts List

Item	Description	DRAWING	QTY
P1	Chair Top	A line drawing of the chair top, showing the backrest and seat.	1
P2	U-shaped Support Bar	A line drawing of a U-shaped metal support bar.	1
P3	Right Support Bar	A line drawing of a vertical L-shaped support bar.	1
P4	Left Support Bar	A line drawing of a vertical L-shaped support bar, identical to P3 but oriented differently.	1
P5	Middle Support Bar	A line drawing of a vertical L-shaped support bar, identical to P3 but oriented differently.	2


Hardware List

Item	Description	DRAWING	QTY
H1	Allen Wrench		1
H2	Bolts $\varphi 1/4 * 3/5$		12
H3	Bolts $\varphi 1/4 * 1-2/5$		2


Step 1. Assemble the chair on a flat, soft surface such as carpet or cloth to prevent scratching. Insert support bar(P3&P4) to the U-Shaped Support Bar(P2), Using Allen wrench(H1) to tighten bolts(H2) as illustration below.

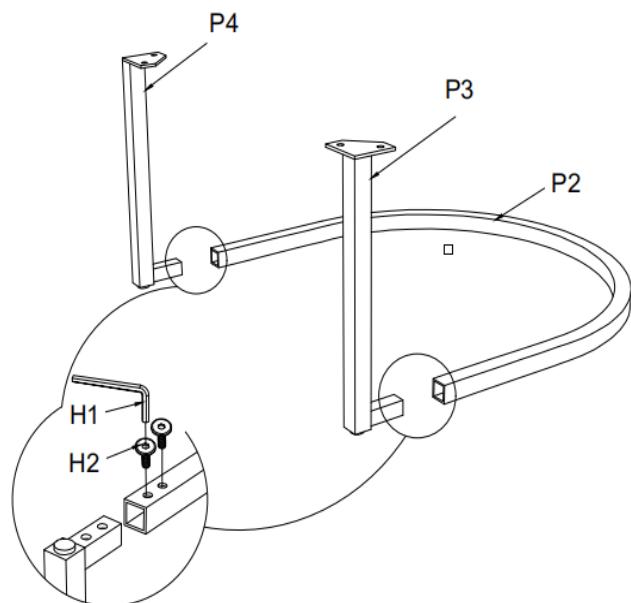

Step 2.Attach Middle Support Bar(P5) to U-shaped Support Bar(P2) with bolt(H3),tighten the bolts(H3) with Allen wrench(H1) as illustration below.

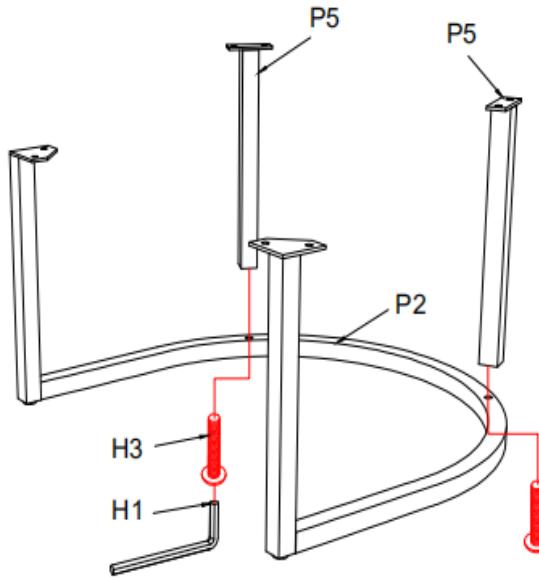

Step 3.Attach assembled U-shaped Support Bar(P2) to Chair Top(P1) with bolt(H2),tighten the bolts(H2) with Allen wrench(H1) as illustration below.

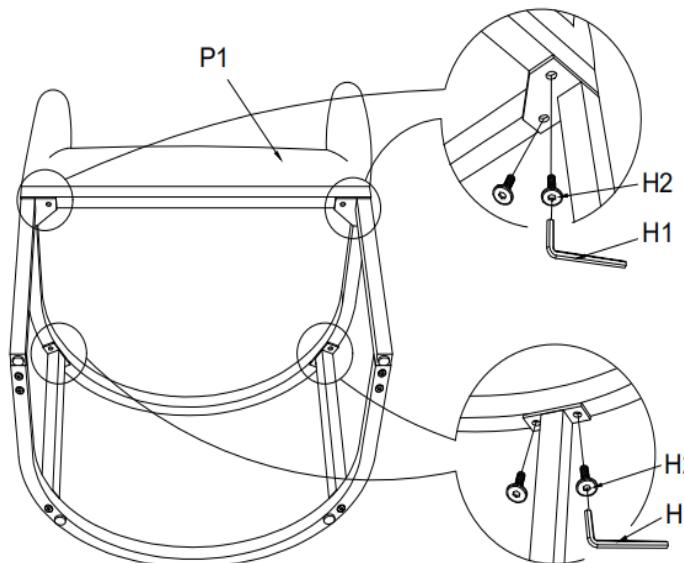

Step 4. Place accent chair upright on a level surface. Adjust levelers (as drawing) as necessary.



ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase