

ASSEMBLY INSTRUCTIONS

Description: Alston Queen Bed








Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.




Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description		QTY
P1	Headboard		1
P2	Footboard		1
P3	Legs		2
P4	Side Rails		2
P5	Slats		4
P6	Support Legs		4
P7	Finials		4

Hardware List


Item	Description		QTY
H1	Flat Washers 1/4"		20
H2	Lock Washer 1/4"		12
H3	Short Bolts Ø1/4"×3/4"		12
H4	Curved Washer 1/4"		12
H5	Medium Bolts Ø1/4"×1-3/8"		4
H6	Long Bolts Ø1/4"×2-1/8"		8
H7	Allen Wrench 1/4"		1
H8	Nuts Ø1/4"		8
H9	Open Wrench 1/4"		1

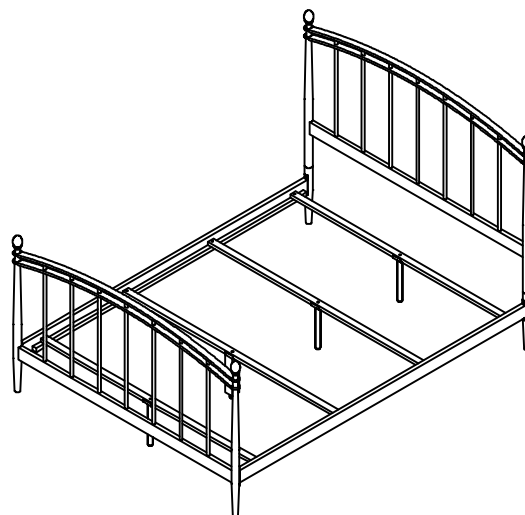

Assembly Procedures:


Step 1. Assemble the bed on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the legs (P3) to the headboard (P1) as shown below. Securely tighten all bolts with Allen wrench (H7).

- (H3)x4 Short Bolts $\varnothing 1/4 \times 3/4$ " 
- (H2)x4 Lock Washer 1/4" 
- (H4)x4 Curved Washer 1/4" 
- (H7)x1 Allen Wrench 1/4" 

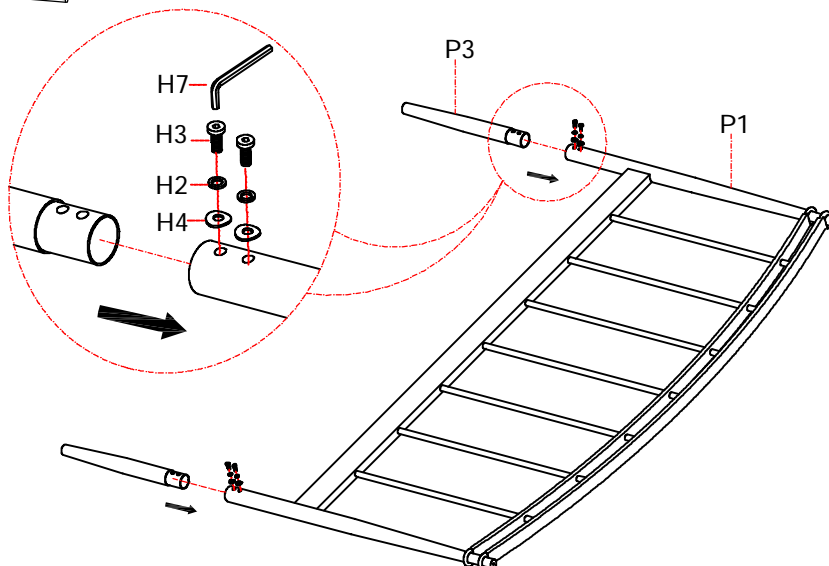

Step 2. With one or two person for help, attach the side rails (P4) to the assembled headboard and footboard (P2) as shown below. Securely tighten all bolts with Allen wrench (H7).

- (H3)x8 Short Bolts $\varnothing 1/4 \times 3/4$ " 
- (H2)x8 Lock Washer 1/4" 
- (H4)x8 Curved Washer 1/4" 
- (H7)x1 Allen Wrench 1/4" 

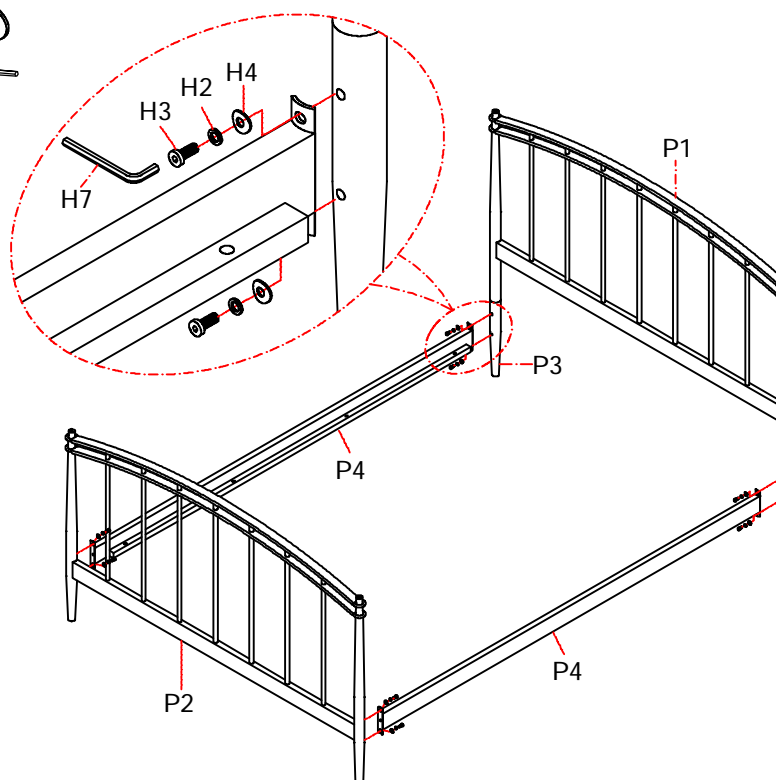

Step 3. Attach the support legs(P6) to the slats (P5), then attach the slats (P5) to the side rails (P4) and as shown below. Securely tighten all bolts with open wrench (H9) and Allen wrench (H7) .

(H5)x4 Medium Bolts Ø1/4"*1-3/8"


(H6)x8 Long Bolts Ø1/4"*2-1/8"

(H1)x20 Flat Washers 1/4"

(H8)x8 Nuts Ø1/4"

(H7)x1 Allen Wrench 1/4"

(H9)x1 Open Wrench 1/4"

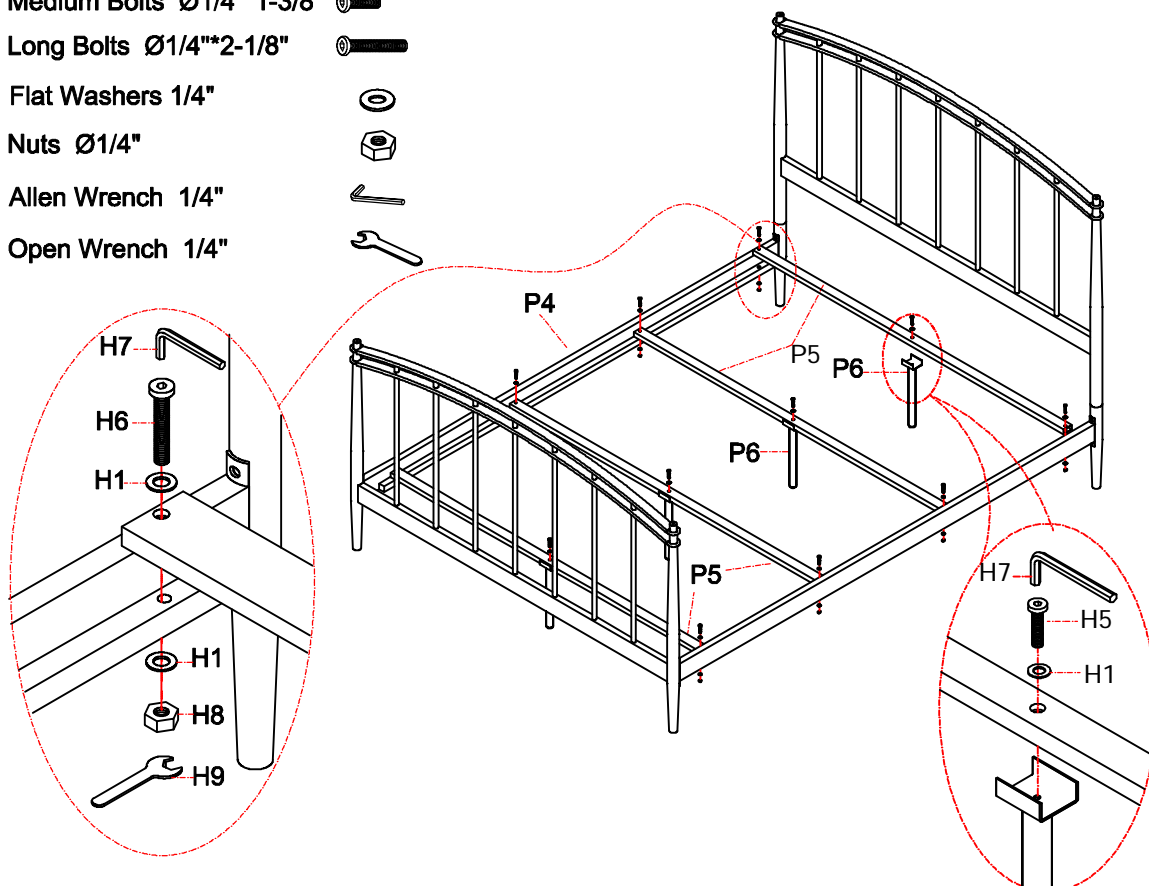


Step 4.

a) Attach the finials (P7) to the posts of headboard and footboard as show below. Assembly is complete.

b) To level bed. If there is a gap between a leg and the floor, please adjust the adjustable leveler up or down under each support leg.

c) Failure to follow these instructions may cause the bolts to misalign during assembly.

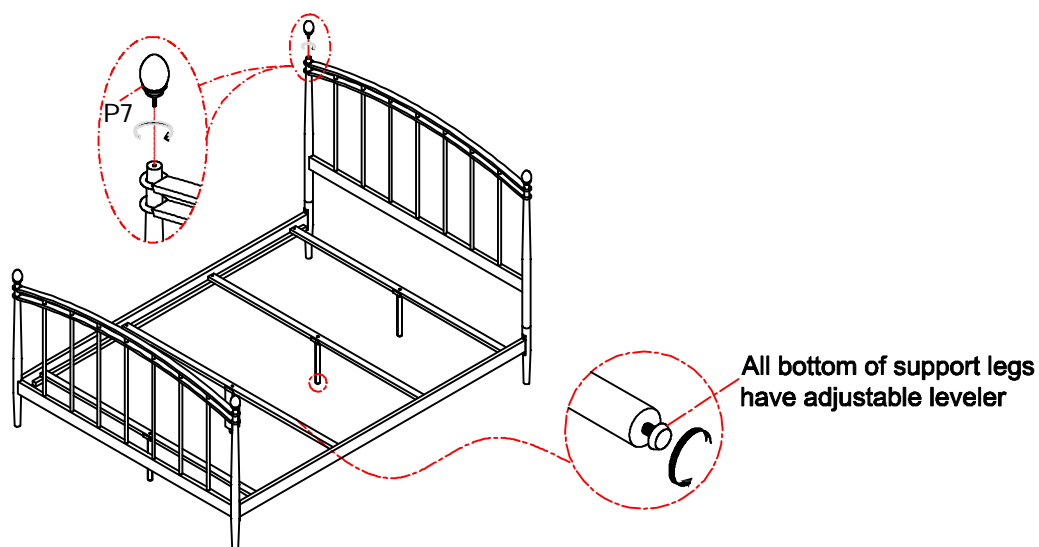

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase