

Description: Headboard







Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.












Pre-assembly:

- Remove all parts and hardware from box along with any plastic protective packaging.
- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware

Parts List


Item	Description		QTY
P1	Headboard		1
P2	Left Support Leg with 3 Mounting Brackets (With the sticker "Left" on the bottom)		1
P3	Right Support Leg with 3 Mounting Brackets (With the sticker "Right" on the bottom)		1
P4	Left Wing		1
P5	Right Wing		1
P6	Wing Legs		2

Hardware List


Item		Description		QTY
Pack A (Used to assemble the headboard)	H1	Bolts $\Phi 5/16$ "x1"L		5
	H2	Spring Washer Ring 5/16"		5
	H3	Flat Washer Ring 5/16"		5
	H4	Allen Key 5/16"		1
Pack B (assemble the headboard to the bed frame)	H5	Bolts $\Phi 5/16$ "x1"L		4
	H6	Spring Washer Ring 5/16"		4
	H7	Flat Washer Ring 5/16"		4
	H8	Nut Cap 5/16"		4
	H9	Solid Wrench 5/16"		1
Pack C (assemble the wings)	H10	Bolts $\Phi 5/16$ "x2"L		11
	H11	Spring Washer Ring 5/16"		11

to the headboard)	H12	Small Flat Washer Ring 5/16"		11
-------------------	-----	------------------------------	---	----

Step 1: Take out Legs and hardware under the headboard

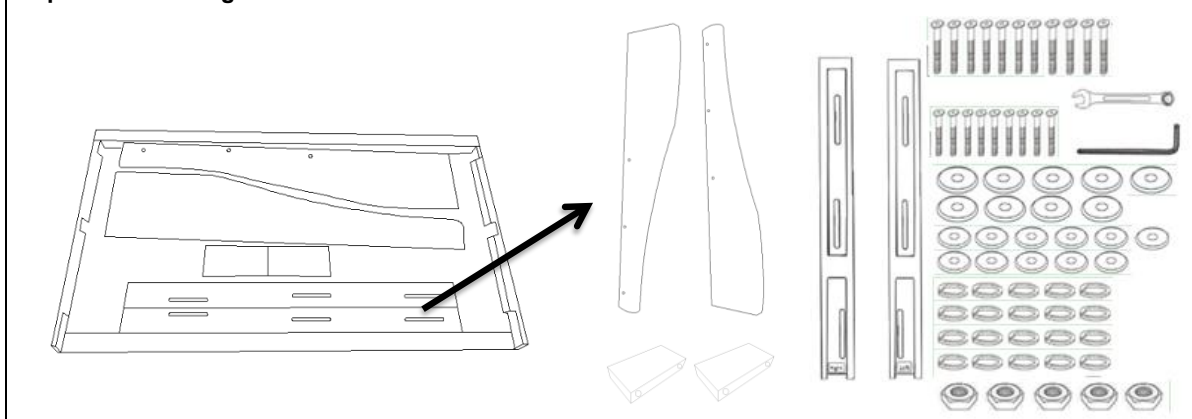

Step 2:

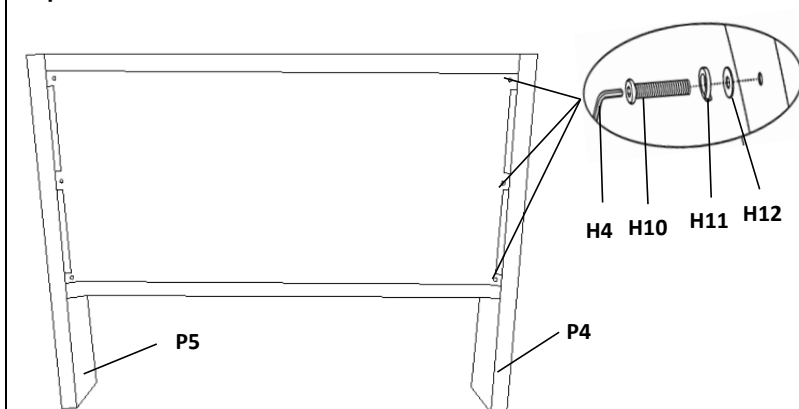


Put the Headboard onto a flat surface.

Align the mounting position on Headboard to the mounting position on Left Wing(P4).

Then, lock the mounting positions by using Flat washer (H12), Spring washer(H11), bolt(H10), Then tighten the bolts with allen wrench (H4) .

Repeat the same steps to install the Right Wing(P5).

Step 3:

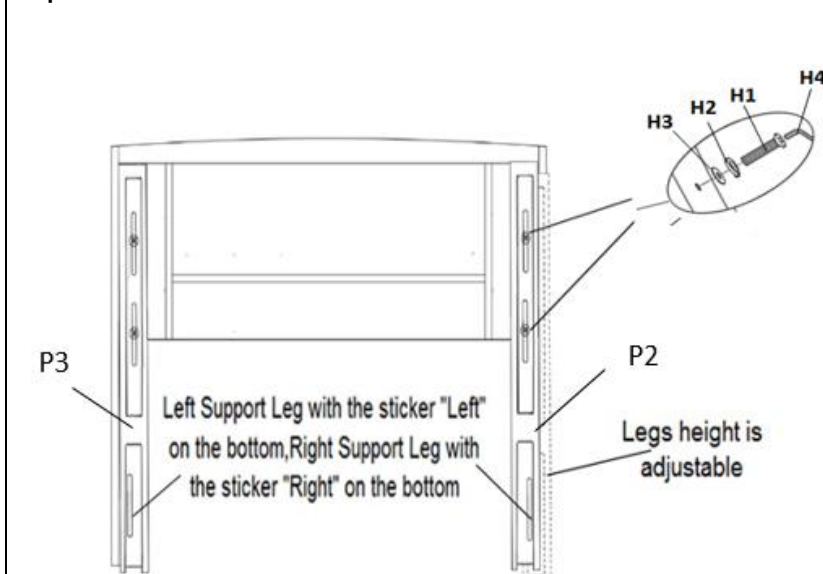

Put the Headboard onto a flat surface.

Align the mounting position on Headboard to the mounting position on Left Support Leg(P2).


Then, lock the top and the middle mounting positions by using Flat washer (H3), Spring washer(H2), bolt(H1), Then tighten the bolts with allen wrench (H4) .

Repeat the same steps to install the Right Support Leg(P3).At this point of assembly, DO NOT overfasten the connections.


The final height of the Headboard may be adjusted to your own need.

Step 4 :Put the Headboard onto a flat surface.

Align the mounting position on Left Wing(P4) to the mounting position on Wing Legs(P6). Then, lock the mounting positions by using Flat washer (H12), Spring washer(H11), bolt(H10), Then tighten the bolts with allen wrench (H4).Repeat the same steps to install the Right Wing(P5).

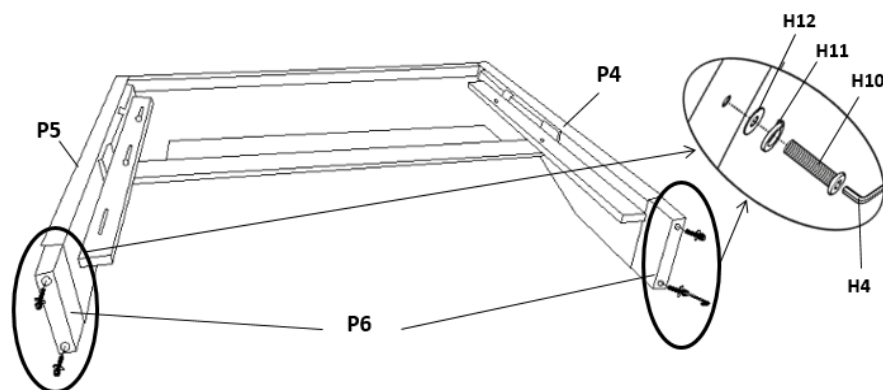

Step 5 :Once upright tighten all hardware, ensuring legs and wings are level with the floor.Headboard is ready to be assembled to bed frame using Pack B Parts.

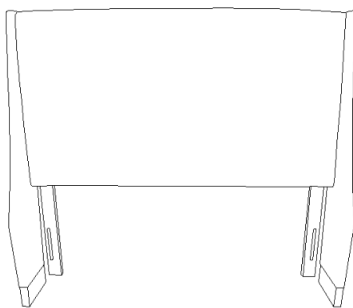

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Use and Care instructions for your Madison Park Signature Furniture

- Your wood furniture can be cleaned using a damp soft cotton cloth to wipe it down,then wipe dry with a second soft cotton cloth.
- Some spray and liquid furniture polishes can change the sheen(how shiny your furniture is) of the finish.
- If you plan to use a product like this to clean your furniture you should first test it in an inconspicuous part of the furniture.
- Upholstery should be cleaned using a quality product intended for furniture upholstery.
- It is best to not place your furniture in direct sunlight as it can fade the finish over time.

- Always lift your furniture when moving it as dragging it can cause damage.

Thank you for your purchase