

## ASSEMBLY INSTRUCTIONS

Description: Triton End Table






### Important safety instructions:

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.






### Pre-assembly:


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

### Parts List

| Item | Description |  | QTY |
|------|-------------|--|-----|
| P1   | Mirror Top  |   | 1   |
| P2   | Top Frame   |   | 1   |
| P3   | Posts       |   | 4   |
| P4   | Stretcher   |   | 1   |
| P5   | Feet        |  | 4   |

### Hardware List

| Item | Description                   |   | QTY |
|------|-------------------------------|---|-----|
| H1   | Countersunk bolts Ø1/4"×1/2"L |  | 8   |
| H2   | Long Bolts Ø1/4"×7-5/8"L      |  | 4   |
| H3   | Allen Wrench Ø1/4             |  | 1   |
| H4   | Clear Plastic Pad             |  | 8   |
| H5   | Plastic Plug                  |  | 4   |

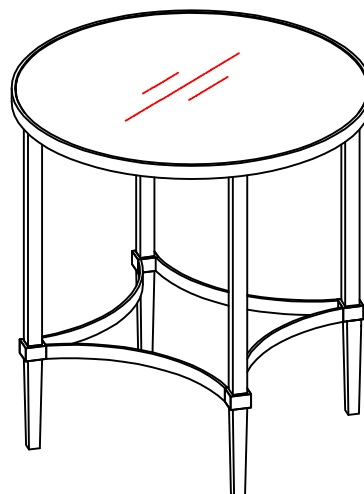


### Assembly Procedures:

Step 1. Assemble the table on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Loosely attach each post (P3) to the bottom of top frame (P2) using bolts (H1) as shown below.

(H1)x8 Countersunk bolts Ø1/4"×1/2"L



(H3)x1 Allen Wrench Ø1/4

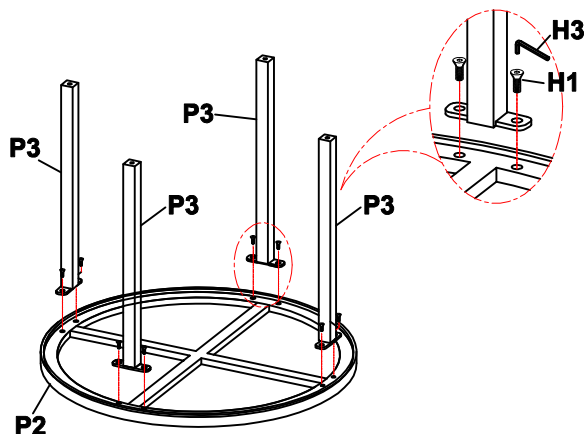


### Step 2.

- 1) Attach the feet (P5) to the bottom of posts (P3) through the corner of stretchers (P4) using long bolts (H2) as shown below.
- 2) Use the plastic plug (H5) to cover the bottom hole of feet (P5).

(H2)x4 Long Bolts  $\varnothing 1/4 \times 7-5/8"$  L




(H5)x4 Plastic Plugs

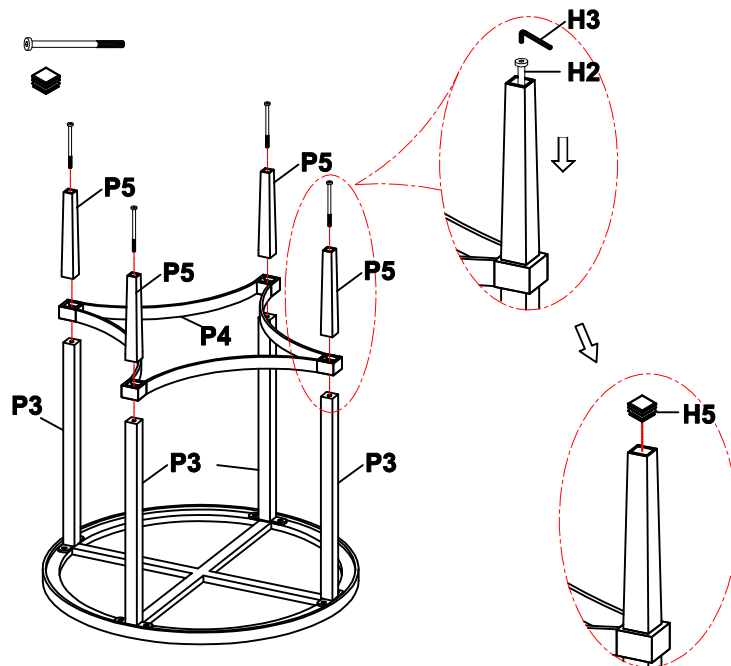

### Step 3.

- 1) Securely tighten all bolts with Allen wrench (H3). Turn the assembled table to an upright position.
- 2) Place the clear plastic pad (H4) on the top frame (P2) as shown below.
- 3) Gently lay the mirror top (P1) on the top frame (P2).
- 4) Assembly is complete.

(H4)x8 Clear Plastic Pad

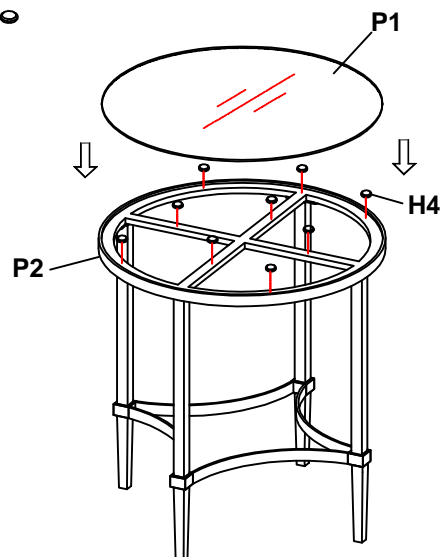

**Caution:** Failure to follow these instructions may cause the bolts to misalign during assembly.

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase