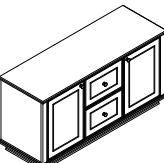


Signature
MADISON PARK EVERLEIGH CREDENZA

Assembly instructions:

PART LIST





No.	DESCRIPTION	IMAGE	QTY
P1	EVERLEIGH CREDENZA		1
P2	FRONT LEGS		2
P3	BACK LEGS(R)		1
P4	BACK LEGS(L)		1
P5	SUPPORT LEG		1

HARDWARE LIST

No.	DESCRIPTION	IMAGE	QTY
H1	BOLT($\varnothing 5/16 * 2-1/4"$)		8
H2	SPRING WASHER($\varnothing 5/16 * 13 * 1.2MM$)		8
H3	FLAT WASHER($\varnothing 5/16 * 19 * 1.8MM$)		8
H4	ALLEN KEY(L57MM * 4MM)		1
H5	TIPPING RESTRAINT		1 set

NOTE: PO# is located underneath/ at the back panel of each item. Please be prepared to provide this # should any claim be necessary.

CAUTION: Item is heavy assembly should be performed by two people.

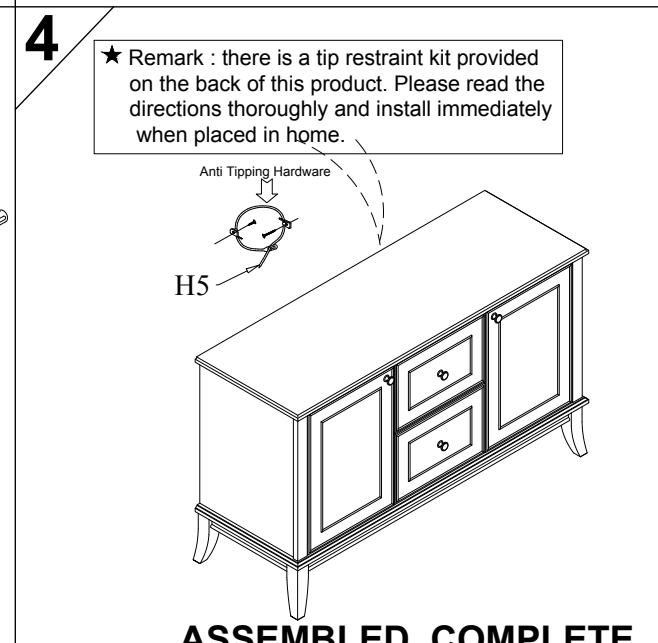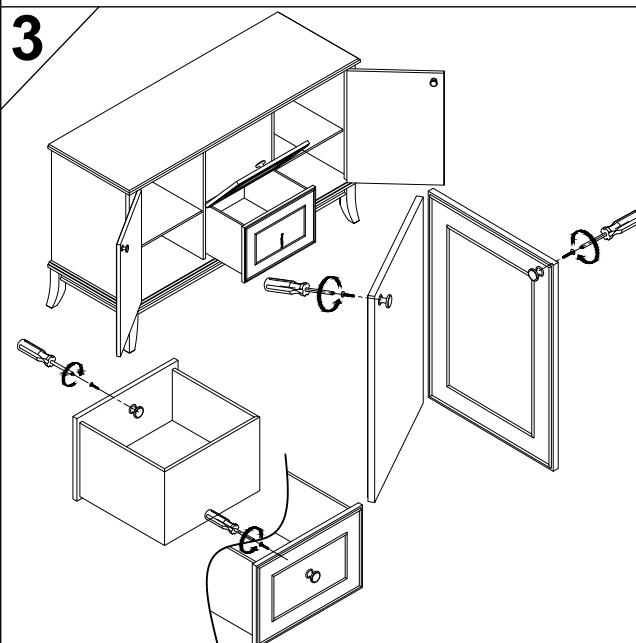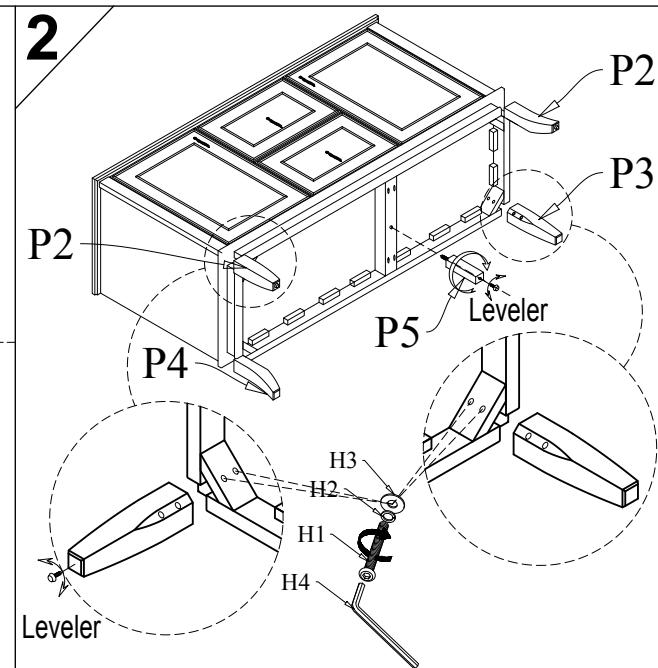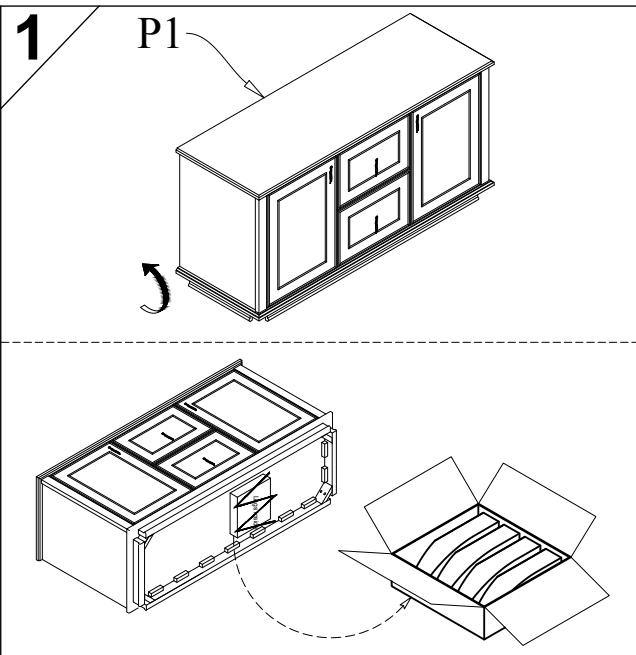

ASSEMBLED COMPLETE