


BECKETT CREDENZA

Assembly instructions:


PARTS LIST

No.	DESCRIPTION	IMAGE	QTY
P1	CABINET BODY		1
P2	LEG		4
P3	TIKT KIT BRACKET		1

1

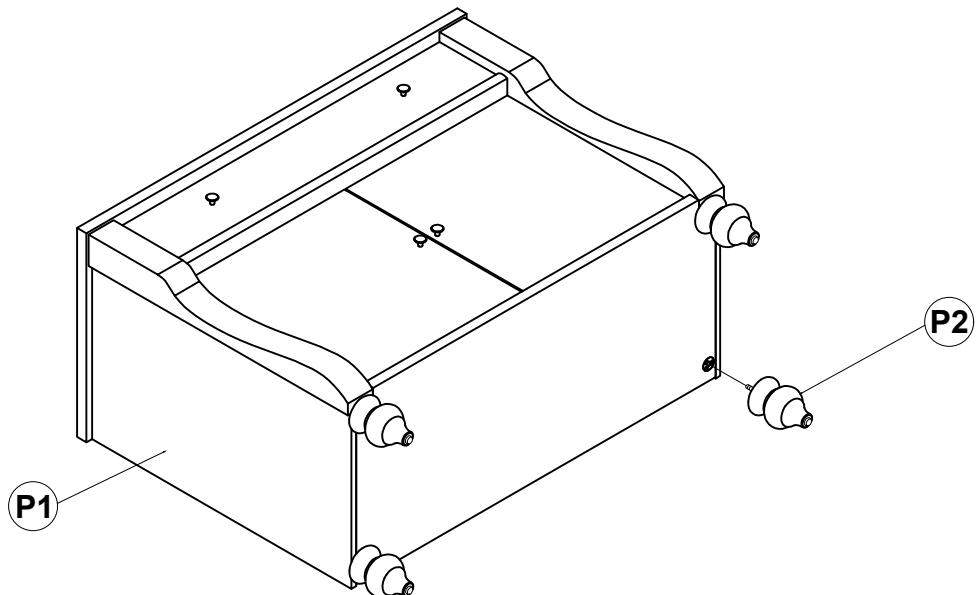

2

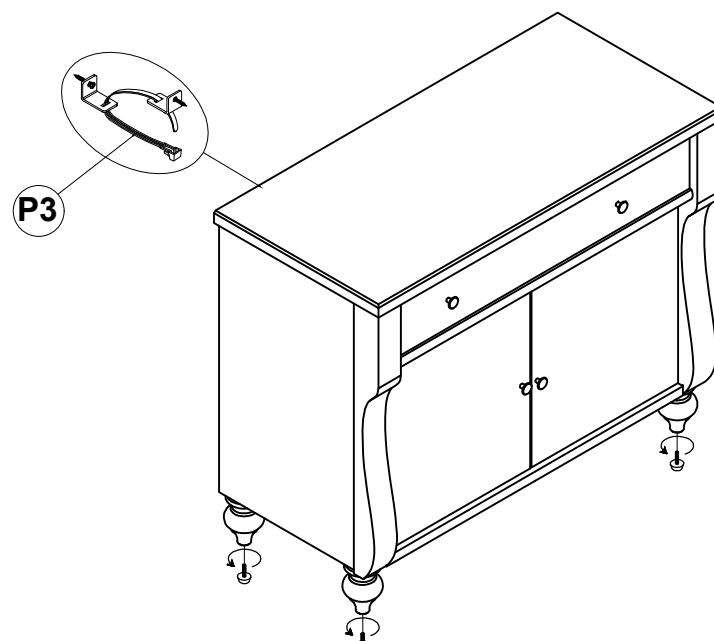

NOTE: PO# is located underneath/ at the back panel of each item . Please be prepared to provide this # should any claim be necessary.

CAUTION: Item is heavy. Assembly should be performed by two people.

ASSEMBLED COMPLETE