

**Important safety instructions:**

- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

**Pre-assembly:**


- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

**Parts List**

| Item | Description        | QTY |
|------|--------------------|-----|
| P1   | Short Shelf Frames | 4   |
| P2   | Long Shelf Frames  | 5   |
| P3   | Short Side Frame   | 1   |
| P4   | Long Middle Frame  | 1   |
| P5   | Long Side Frame    | 1   |
| P6   | Short Glass Shelf  | 4   |
| P7   | Long Glass Shelf   | 5   |

**Hardware List**


| Item | Description         | QTY   |
|------|---------------------|-------|
| H1   | Bolts Ø1/4" *3/4" L | 36    |
| H2   | Allen Wrench Ø1/4   | 1     |
| H3   | Levelers            | 6     |
| H4   | Clear Plastic Pads  | 36    |
| H5   | Anti Tip Kit        | 2 SET |

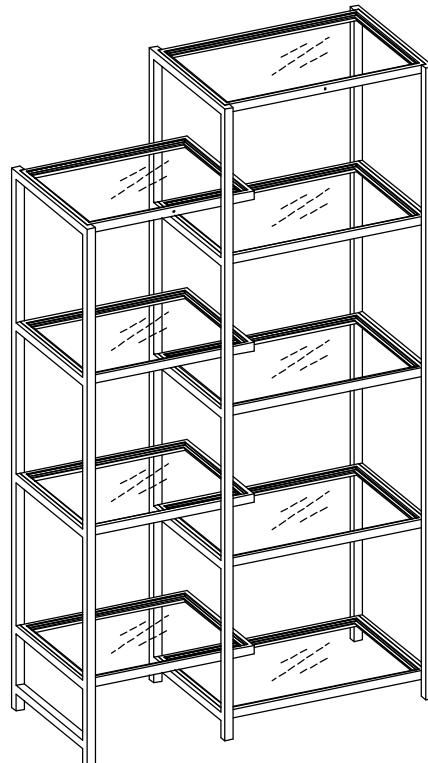

### Assembly Procedures:


**Step 1.** Assemble the shelf on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach each short side frame (P3) to short shelf frame (P1) using bolts (H1) as shown below. Loosely tighten the bolts with Allen wrench (H2).

(H1)x8      **Bolts**        
(H2)x1      **Allen Wrench**      

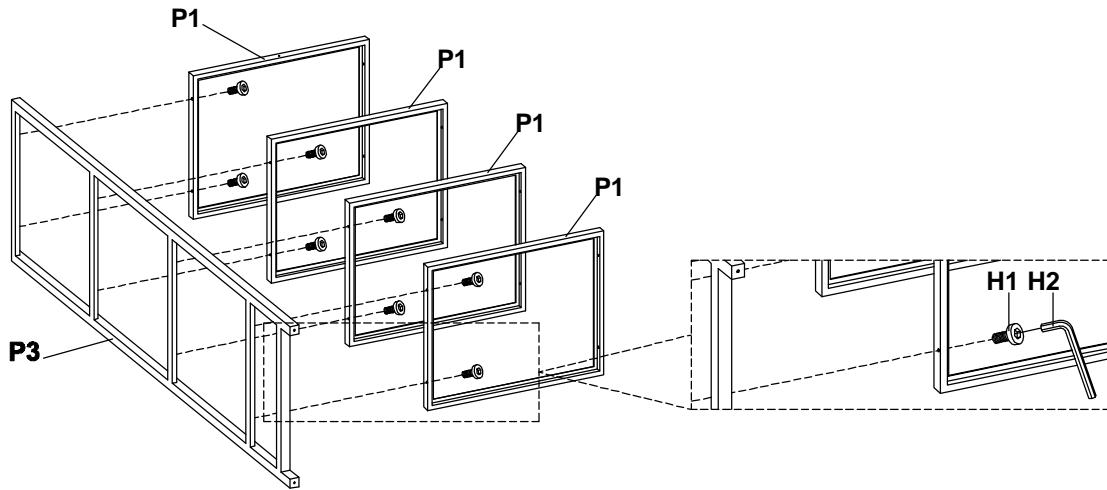

**Step 2.** Attach each short shelf frame (P1) between two posts of long middle frame (P4) as shown below. Loosely tighten the bolts with Allen wrench (H2).


(H1)x8      **Bolts**      

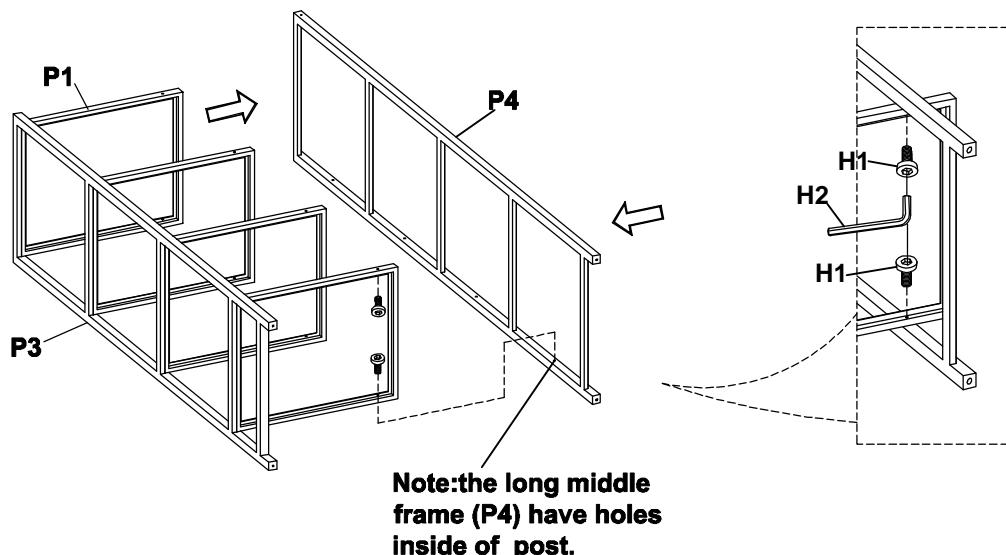

**Step 3.** Attach each long shelf frame (P2) to long middle frame (P4) as shown below. Loosely tighten the bolts with Allen wrench (H2).

(H1)x10

Bolts

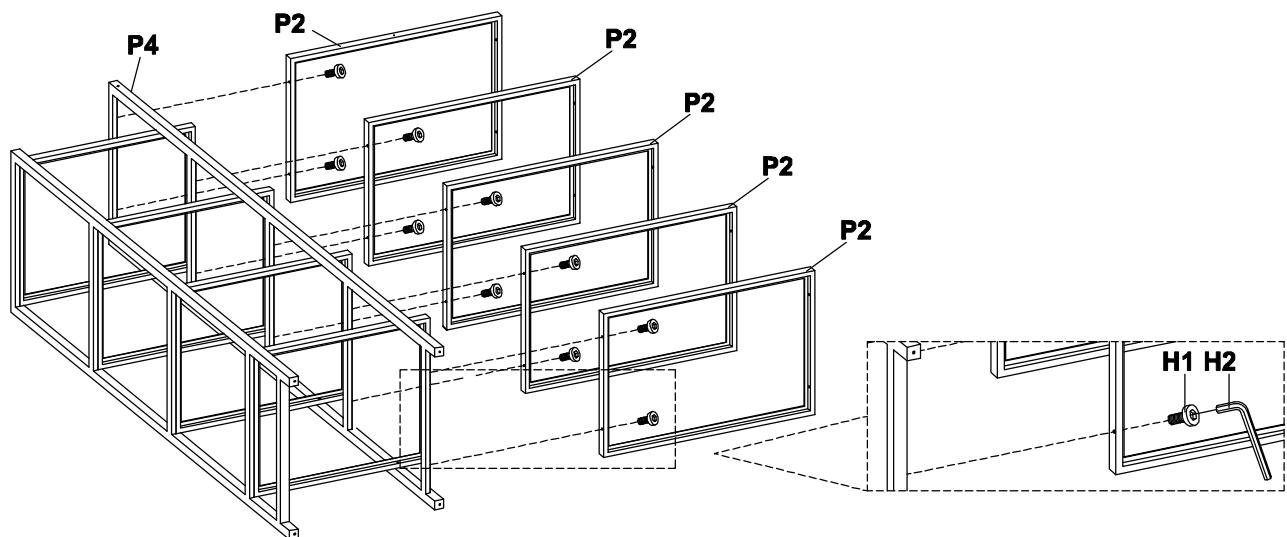

**Step 4.**

- 1) Attach long right side frame (P5) to the assembled long shelf frame (P2) as shown below. Loosely tighten the bolts with Allen wrench (H2).
- 2) Securely tighten the levelers (H3) into the holes on the bottom of side frames (P3, P4, P5).


(H1)x10

Bolts




(H3)x6

Levelers

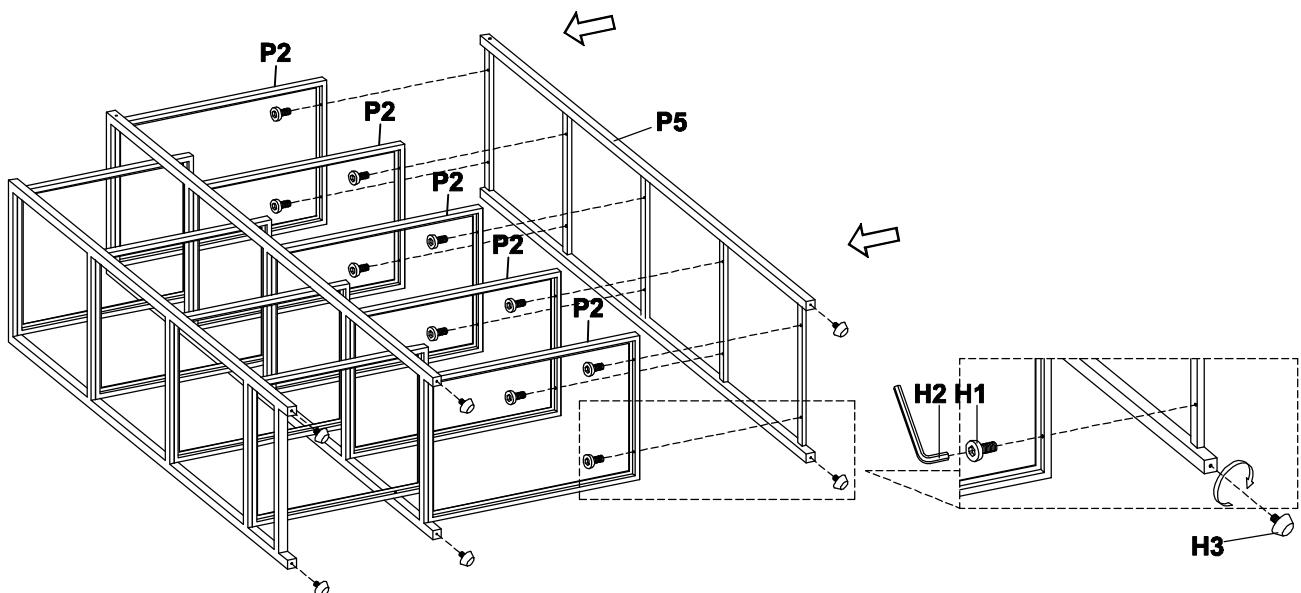


**Step 5.**

- 1) Turn the assembled shelf to an upright position. Make sure the shelf is level, and then securely tighten all bolts with Allen wrench (H2).
- 2) **Recommended that you attach the product to your wall as a safety precaution.** Please see the other instructions "Furniture Safety Bracket Tip Resistant".

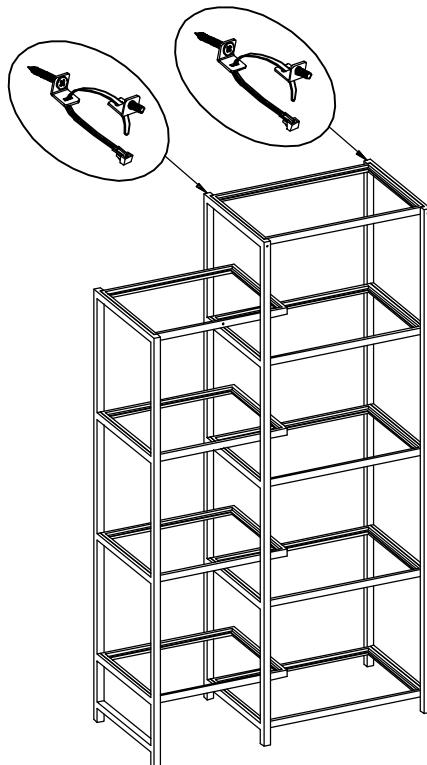**Step 6.**

- 1) Place the clear plastic pad (H4) on each assembled frame of shelf as shown below.
- 2) Gently lay the glass shelves (P6,P7) on the assembled frame of shelf.
- 3) **Leveler adjustment:** Levelers are installed on the legs and adjust as needed to make sure the table is level. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(H4)x36 Clear Plastic Pads

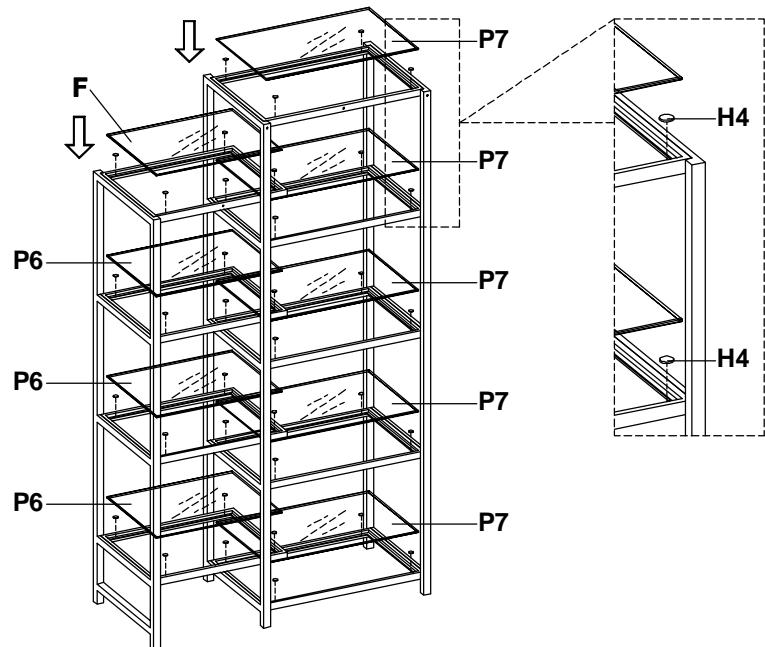

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase

# Furniture Safety Bracket Tip Resistant

- Designed to help prevent furniture tipover.
- Detachable strap allows for easy moving of furniture for cleaning.
- Also helps prevent furniture tipover during minor tremore.

## Installation:

**Short Screw  
(2pcs)**




**Long Screw  
(2pcs)**



**Strap  
(2pcs)**



**Bracket  
(4pcs)**

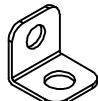

**Plastic anchor  
(2pcs)**



## Important:

Check to be sure the wall bracket is firmly screwed into wall stud, the furniture bracket is firmly attached to the frame, and the strap is snug.

## Caution:

This product is not to be a substitute for proper parental supervision. Manufacturer assumes no liability for improper installation or excessive loads placed on screws brackets or straps.

1. Locate a wall stud behind your furniture. Position a bracket on the stud approximately 1" below the top of the furniture. Mark and drill pilot hole into the center of the stud with a 3/32" drill bit. Press the plastic anchors in the holes and gently tap until the flange on the plastic anchor is against the wall surface, then attach a bracket to the stud with the long screws provided.

2. On the back of the furniture. Attach the metal bracket to the back of top frame with bolt, making sure the metal bracket extend DOWNWARD as shown.

3. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug. Do not over tighten.

