



# ASSEMBLY INSTRUCTIONS

## Auden Accent Chair

### Important safety instructions:

- Please read carefully all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

### Pre-assembly:

- Do not discard any content until assembly is completed to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any protective packaging.

### Parts List

Item	Description	DRAWING	QTY
P1	Chair Top		1
P2	U-shaped Support Bar		1
P3	Right Support Bar		1
P4	Left Support Bar		1
P5	Middle Support Bar		2

### Hardware List


Item	Description	DRAWING	QTY
H1	Allen Wrench		1
H2	Bolts φ1/4*3/5		12
H3	Bolts φ1/4*1-2/5		2

### DISCLAIMER:


WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

### Assembly Procedures:


Step 1. Assemble the chair on a flat, soft surface such as carpet or cloth to prevent scratching. Insert support bar(P3&P4) to the U-Shaped Support Bar(P2), Using Allen wrench(H1) to tighten bolts(H2) as illustration below.

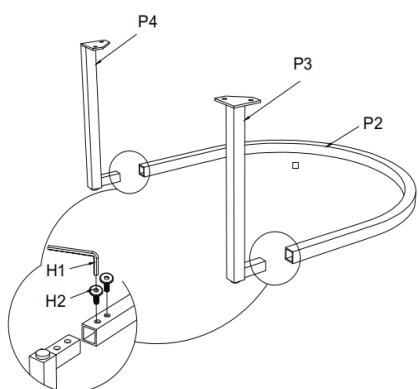


Step 2.Attach Middle Support Bar(P5) to U-shaped Support Bar(P2) with bolt(H3),tighten the bolts(H3) with Allen wrench(H1) as illustration below.

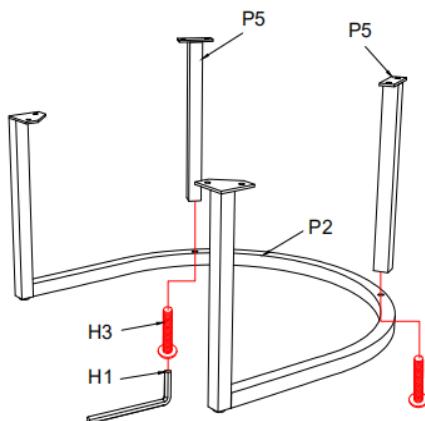

Step 3.Attach assembled U-shaped Support Bar(P2) to Chair Top(P1) with bolt(H2),tighten the bolts(H2) with Allen wrench(H1) as illustration below.

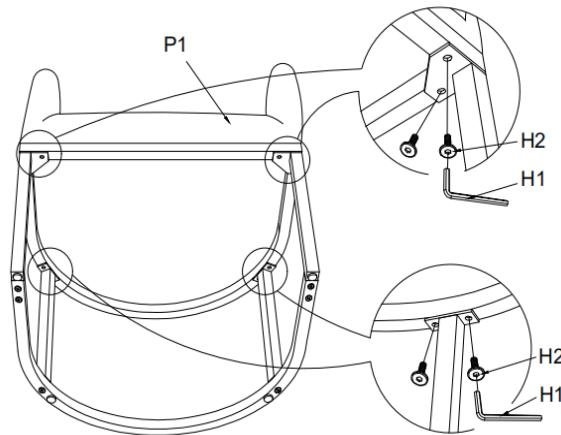

Step 4. Place accent chair upright on a level surface. Adjust levelers (as drawing) as necessary.

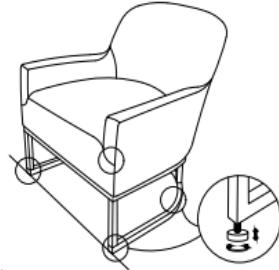

**ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.**

Thank you for your purchase

Page 2 of 2