



ASSEMBLY INSTRUCTIONS

Description: Bleden Accent Chair





Important safety instructions:


- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:






- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

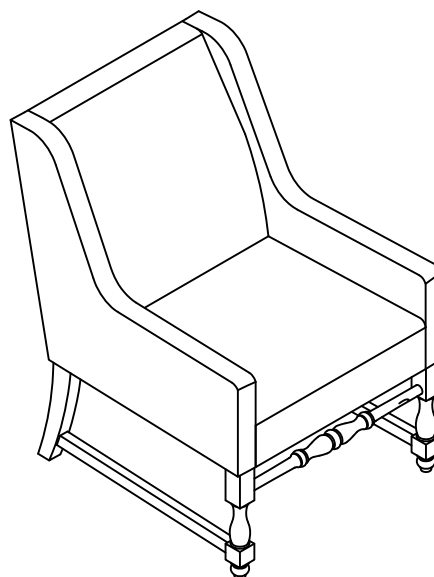Parts List

Item	Description		QTY
P1	Chair Body		1
P2	Left Front Leg	 (P2)	1
P3	Right Front Leg	 (P3)	1
P4	Left Back Leg	 (P4)	1
P5	Right Back Leg	 (P5)	1
P6	Front Rail		1
P7	Side Rails		2



Hardware List


Item	Description		QTY
H1	Bolts Ø1/4"*3/4"		14
H2	Lock Washers Ø1/4"		14
H3	Flat Washers Ø1/4"*16mm		14
H4	Allen Wrench 1/4"		1
H5	Screw #8*1-3/4"		6

DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.


Assembly Procedures:

Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Insert the front rail (P6) to the left front leg (P2) and right front leg (P3) as shown below.

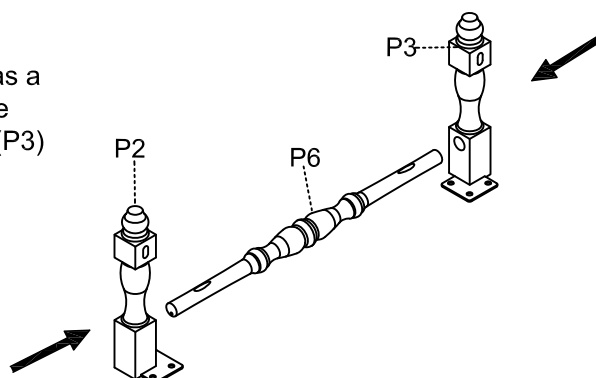

Step 2. Attach the left front leg (P2) and right front leg (P3) to the chair body (P1) as shown below.


- (H1)X6 Bolts $\varnothing 1/4'' \times 3/4''$
 (H2)X6 Lock Washers $\varnothing 1/4''$
 (H3)X6 Flat Washers $\varnothing 1/4'' \times 16\text{mm}$
 (H4)X1 Allen Wrench $1/4''$

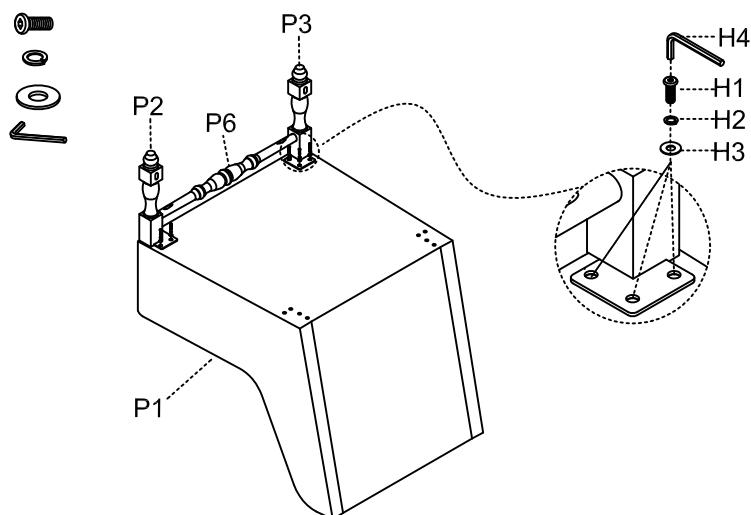

Step 3.


- a). Insert the side rails (P7) to the left front leg (P2) and the right front leg (P3).
 b). Attach the left back leg (P4) and the right back leg (P5) to the side rails (P7) and the bottom of chair body (P1).

- (H1)X8 Bolts $\varnothing 1/4'' \times 3/4''$
 (H2)X8 Lock Washers $\varnothing 1/4''$
 (H3)X8 Flat Washers $\varnothing 1/4'' \times 16\text{mm}$
 (H4)X1 Allen Wrench $1/4''$

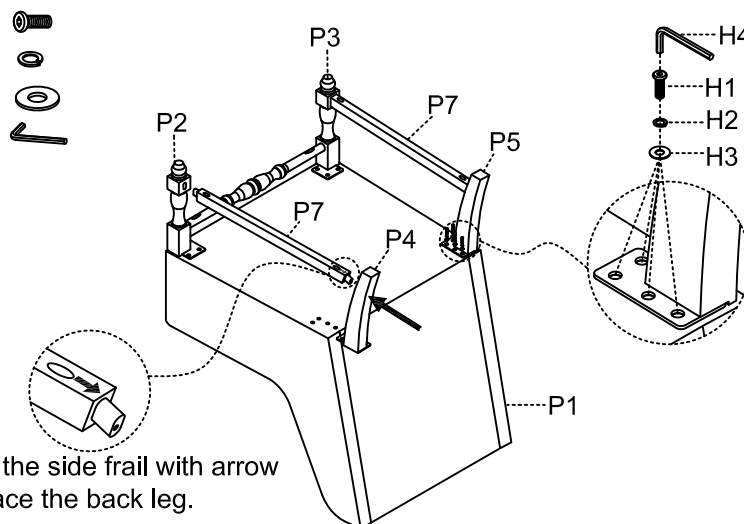

Step 4. Screw the screw (H5) through the front rail (P6) and side rails (P7) to the legs (P2, P3, P4 & P5). Securely tighten all bolts. Turn the assembled chair to an upright position. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

- (H5)X6 Screw $\#8 \times 1-3/4''$

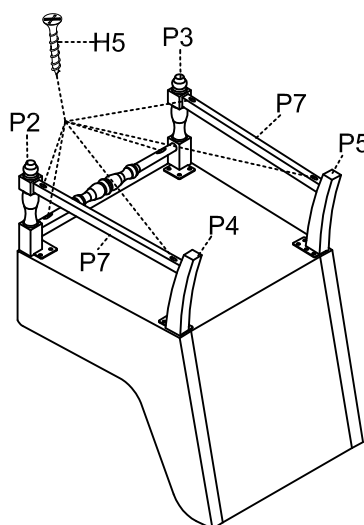

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase