



ASSEMBLY INSTRUCTIONS

Description: Braxton Rocking Chair

Important safety instructions:


- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description	QTY
P1	Back Cushion	1
P2	Seat	1
P3	Back Frame	1
P4	Finial	2
P5	Left Arm	1
P6	Right Arm	1
P7	Left Front Leg	1
P8	Right Front Leg	1
P9	Bottom Rail	2

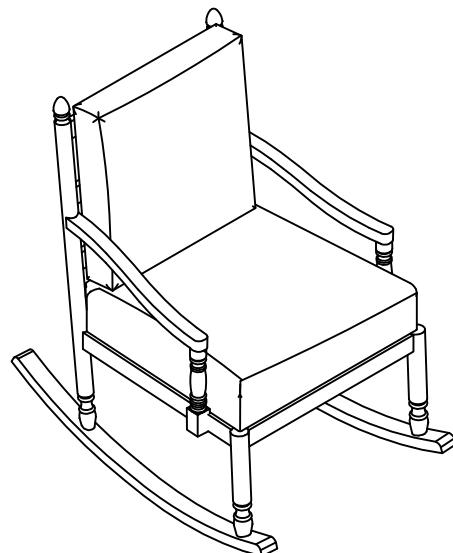

Hardware List

Item	Description	QTY
H1	Big Long Bolts Ø5/16"**3-1/4"	4
H2	Big Medium Bolts Ø5/16"**2-1/2"	4
H3	Big Short Bolts Ø5/16"**1-3/4"	1
H4	Big Lock Washers 5/16"	9
H5	Big Flat Washers 5/16"**19mm	9
H6	Big Allen Wrench 5/16"	1
H7	Small Bolts Ø1/4"**1-3/4"	10
H8	Small Lock Washers 1/4"	10
H9	Small Flat Washers 1/4"**12mm	2
H10	Small Flat Washers 1/4"**19mm	8
H11	Small Allen Wrench 1/4"	1
H12	Wooden Plugs	2



DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:


Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the seat (P2) to the back frame (P3) as shown below.

- (H1)x4 Big Long Bolts $\varnothing 5/16" * 3-1/4"$
- (H3)x1 Big Short Bolts $\varnothing 5/16" * 1-3/4"$
- (H4)x5 Big Lock Washers $5/16"$
- (H5)x5 Big Flat Washers $5/16" * 19mm$
- (H6)x1 Big Allen Wrench $5/16"$

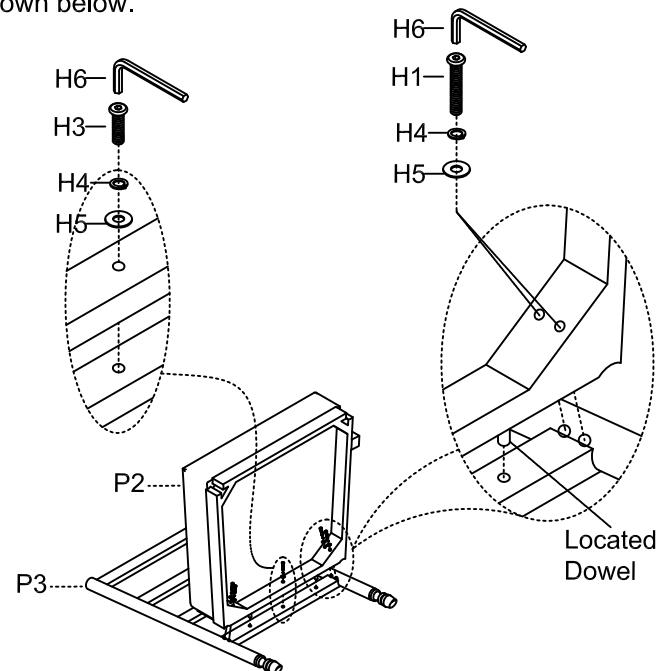



Step 2. Attach the left front leg (P7) and right front leg (P8) to the seat (P2) as shown below.

- (H2)x4 Big Medium Bolts $\varnothing 5/16" * 2-1/2"$
- (H4)x4 Big Lock Washers $5/16"$
- (H5)x4 Big Flat Washers $5/16" * 19mm$
- (H6)x1 Big Allen Wrench $5/16"$

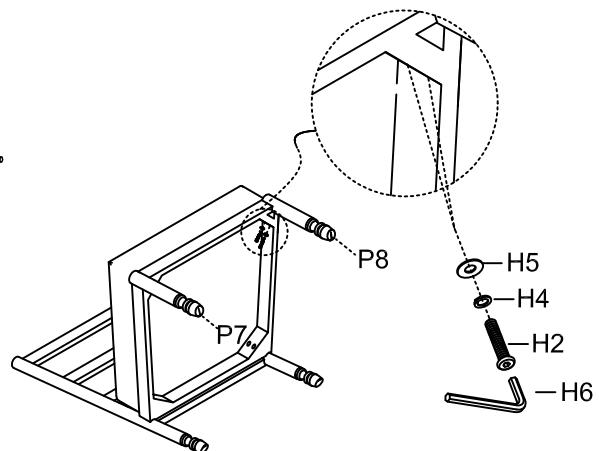

Step 3. Loosely attach the left arm (P5) and right arm (P6) to the seat (P2) as shown below.

- (H7)x4 Small Bolts $\varnothing 1/4" * 1-3/4"$
- (H8)x4 Small Lock Washers $1/4"$
- (H10)x4 Small Flat Washers $1/4" * 19mm$
- (H11)x1 Small Allen Wrench $1/4"$

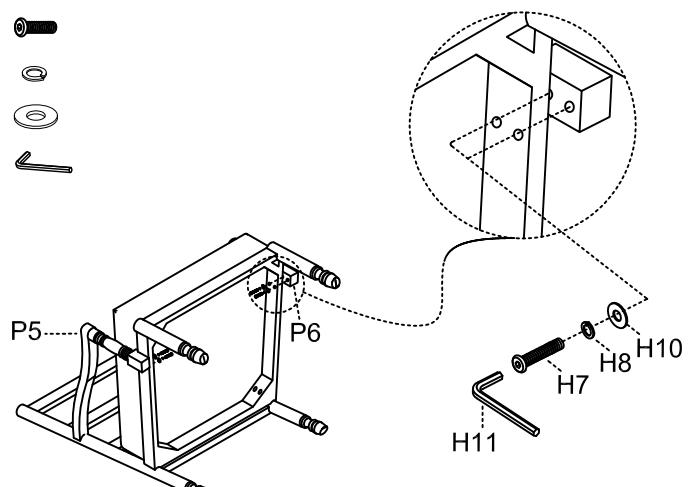


Step 4. Attach the left arm (P5) and right arm (P6) to the back frame (P3) as shown below.

(H7)x4 Small Bolts Ø1/4"**1-3/4" 

(H8)x4 Small Lock Washers 1/4" 

(H9)x4 Small Flat Washers 1/4"**12mm 

(H11)x1 Small Allen Wrench 1/4" 

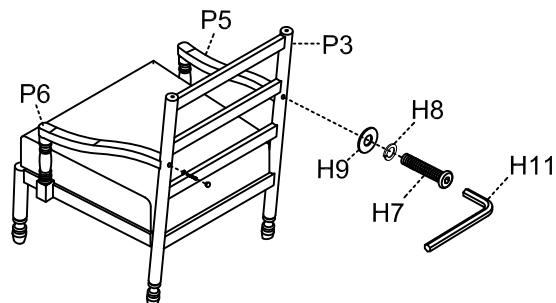


Step 5. Attach the bottom rail (P9) to the assembled back frame (P3) and front legs(P7,P8) as shown below.

(H7)x4 Small Bolts Ø1/4"**1-3/4" 

(H8)x4 Small Lock Washers 1/4" 

(H10)x4 Small Flat Washers 1/4"**19mm 

(H11)x1 Small Allen Wrench 1/4" 

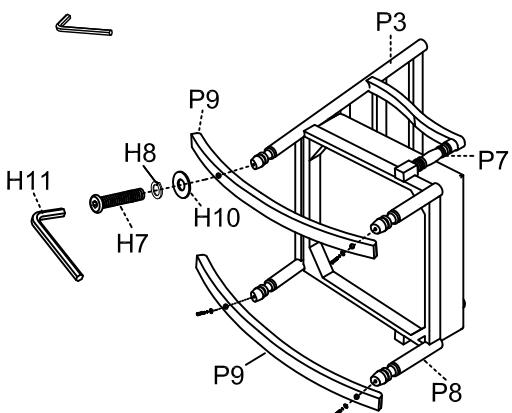


Step 6. Securely tighten all bolts. Turn the assembled chair to the upright position.

- 1). Screw the finial (P4) to the post top of back frame (P3) as shown below.
- 2). Insert wood plugs (H12) into the bolt holes, tap with rubber hammer or mallet until the wood plug edge are even with wood surface.
- 3). Place the back cushion (P1) to the seat (P2) and the back frame(P3) as shown.

Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

(H12)x2 Wooden Plugs 

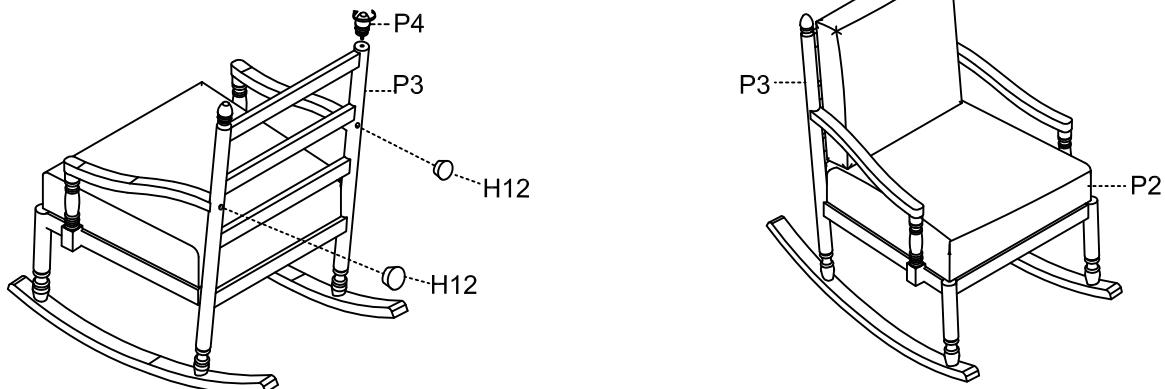

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase