



# ASSEMBLY INSTRUCTIONS

Description: Braxton Accent Chair

## Important safety instructions:


- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

## Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

## Parts List

Item	Description	QTY
P1	Back Cushion	1
P2	Seat	1
P3	Back Frame	1
P4	Finial	2
P5	Left Arm	1
P6	Right Arm	1
P7	Front Legs	2

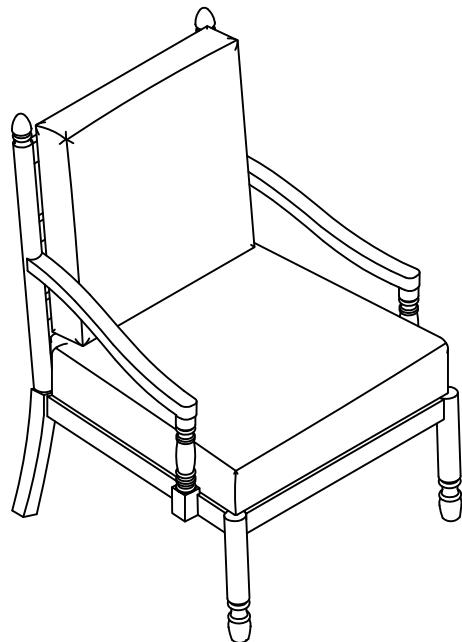

## Hardware List

Item	Description	QTY
H1	Big Long Bolts Ø5/16" * 3-1/4"	4
H2	Big Medium Bolts Ø5/16" * 2-1/2"	4
H3	Big Short Bolts Ø5/16" * 1-1/2"	1
H4	Big Lock Washers 5/16"	9
H5	Big Flat Washers 5/16" * 19mm	9
H6	Big Allen Wrench 5/16"	1
H7	Small Bolts Ø1/4" * 1-3/4"	6
H8	Small Lock Washers 1/4"	6
H9	Small Flat Washers 1/4" * 12mm	2
H10	Small Flat Washers 1/4" * 19mm	4
H11	Small Allen Wrench 1/4"	1
H12	Wooden Plugs	2


## DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

### Assembly Procedures:


Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the seat (P2) to the back frame (P3) as shown below.

(H1)x4 Big Long Bolts Ø5/16"\*\*3-1/4"  
 (H3)x1 Big Short Bolts Ø5/16"\*\*1-1/2"  
 (H4)x5 Big Lock Washers 5/16"  
 (H5)x5 Big Flat Washers 5/16"\*\*19mm  
 (H6)x1 Big Allen Wrench 5/16"

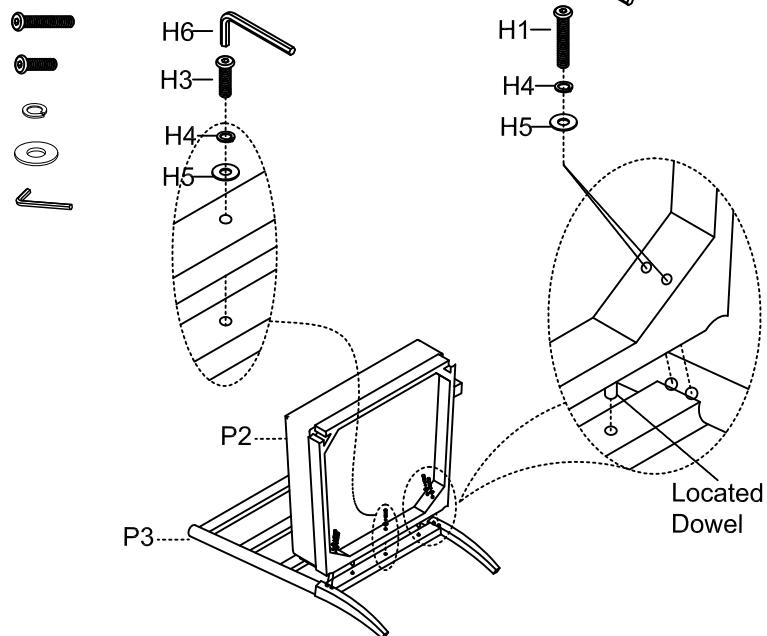


Step 2. Attach the front legs (P7) to the seat (P2) as shown below.

(H2)x4 Big Medium Bolts Ø5/16"\*\*2-1/2"  
 (H4)x4 Big Lock Washers 5/16"  
 (H5)x4 Big Flat Washers 5/16"\*\*19mm  
 (H6)x1 Big Allen Wrench 5/16"

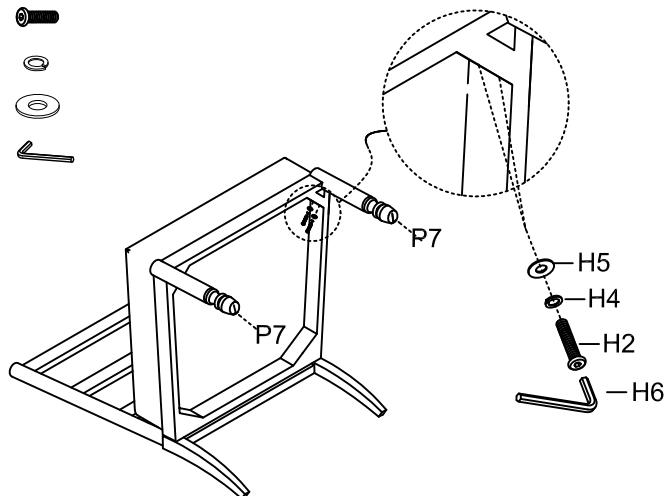

Step 3. Loosely attach the left arm (P5) and right arm (P6) to the seat (P2) as shown below.

(H7)x4 Small Bolts Ø1/4"\*\*1-3/4"  
 (H8)x4 Small Lock Washers 1/4"  
 (H10)x4 Small Flat Washers 1/4"\*\*19mm  
 (H11)x1 Small Allen Wrench 1/4"

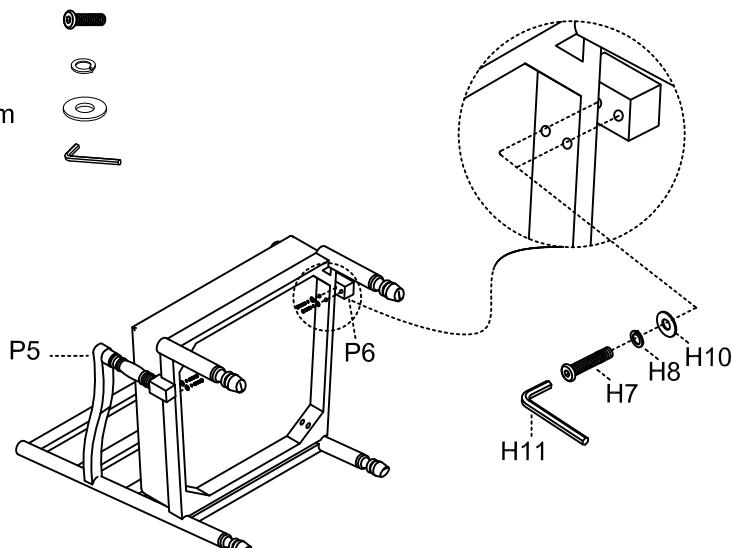

Step 4. Turn the assembled chair to an upright position. Attach the left arm (P5) and right arm (P6) to the back frame (P3) as shown below. Securely tighten all bolts.

(H7)x2 Small Bolts Ø1/4"\*\*1-3/4"




(H8)x2 Small Lock Washers 1/4"



(H9)x2 Small Flat Washers 1/4"\*\*12mm




(H11)x1 Small Allen Wrench 1/4"

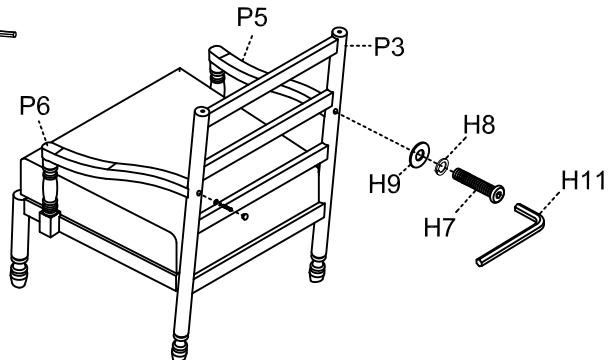


Step 5. 1). Screw the finial (P4) to the post top of back frame (P3) as shown below.

2). Insert wood plugs (H12) into the bolt holes, tap with rubber hammer or mallet until the wood plug edge are even with wood surface.

(H12)x2 Wooden Plugs

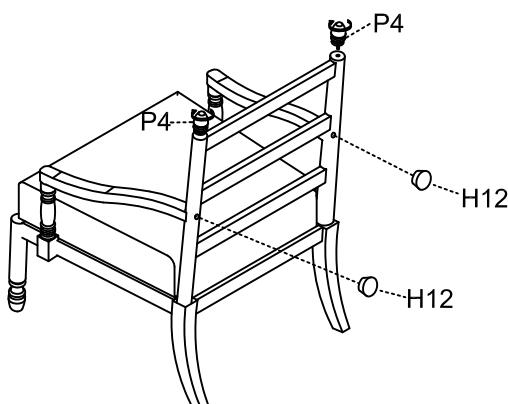

Step 6. Place the back cushion (P1) to the seat (P2) and the back frame(P3) as shown. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

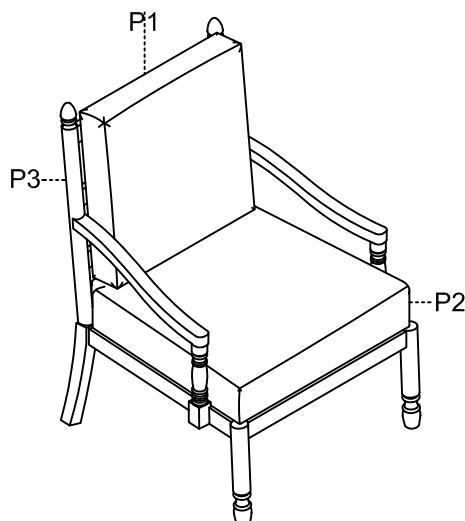

#### ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase