



# ASSEMBLY INSTRUCTIONS

Description: Clyde Accent Chair

## Important safety instructions:


- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

## Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

## Parts List

Item	Description	QTY
P1	Back Frame	1
P2	Seat Frame	1
P3	Left Leg	1
P4	Right Leg	1
P5	Back Cushion	1
P6	Seat Cushion	1

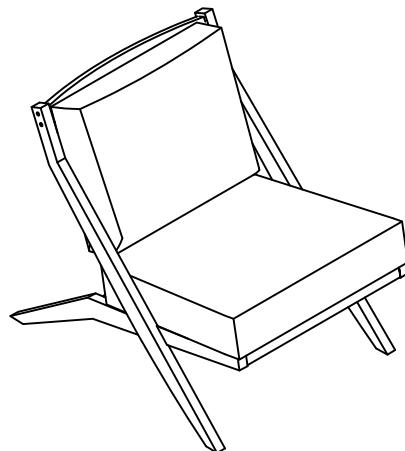


## Hardware List

Item	Description	QTY
H1	Long Bolts Ø1/4"**2"	4
H2	Medium Bolts Ø1/4"**1-3/4"	3
H3	Short Bolts Ø1/4"**1-1/2"	4
H4	Lock Washers 1/4"	11
H5	Flat Washers 1/4"**12mm	4
H6	Flat Washers 1/4"**19mm	7
H7	Allen Wrench 1/4"	1
H8	Wooden Dowel Ø10*30	4
H9	Wooden Plugs	4

## DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

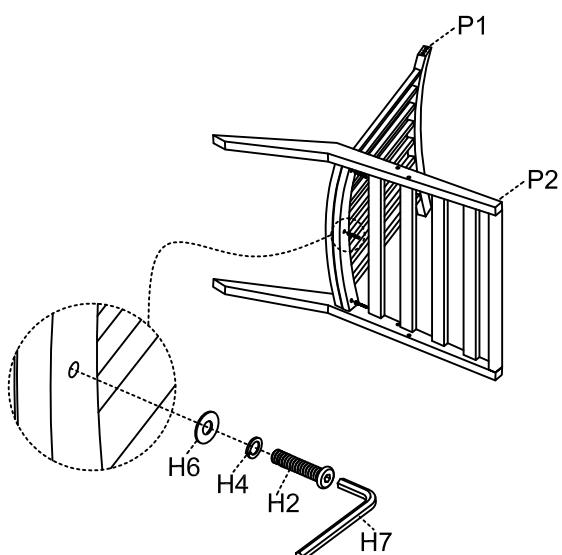

## Assembly Procedures:

Step 1. Assemble the chair on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Attach the back frame (P1) to the seat frame (P2) as shown below.

(H2)x3 Medium Bolts Ø1/4"\*\*1-3/4"


(H4)x3 Lock Washers 1/4"

(H6)x3 Flat Washers 1/4"\*\*19mm

(H7)x1 Allen Wrench 1/4"


Step 2. Attach the left leg (P3) and right leg (P4) to the back frame (P1) and seat frame (P2) as shown below.

(H1)x4 Long Bolts Ø1/4"\*\*2"  
(H3)x4 Short Bolts Ø1/4"\*\*1-1/2"  
(H4)x8 Lock Washers 1/4"  
(H5)x4 Flat Washers 1/4"\*\*12mm  
(H6)x4 Flat Washers 1/4"\*\*19mm  
(H7)x4 Allen Wrench 1/4"  
(H8)x4 Wooden Dowel Ø10\*30

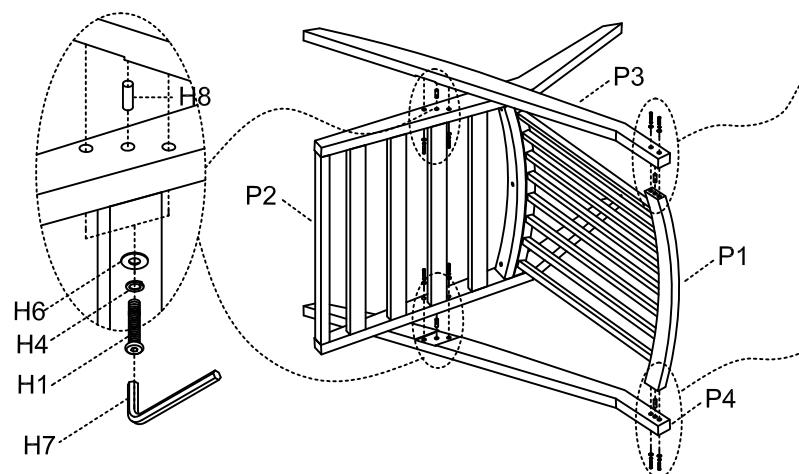


Step 3. Securely tighten all bolts. Turn the assembled chair to an upright position. Insert wood plugs (H9) into the bolt holes, tap with rubber hammer or mallet until the wood plug edge are even with wood surface.

(H9)x4 Wooden Plugs ○

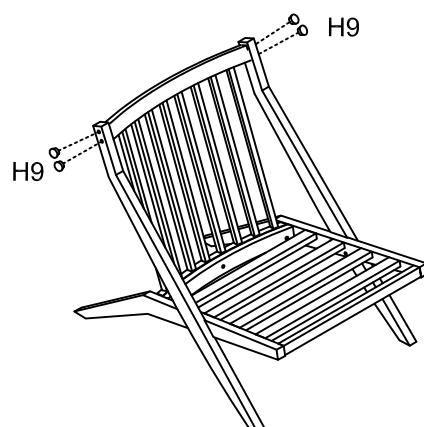

Step 4. Place the back cushion (P5) and seat cushion (P6) to the seat frame (P2) and the back frame (P1) as shown below. Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

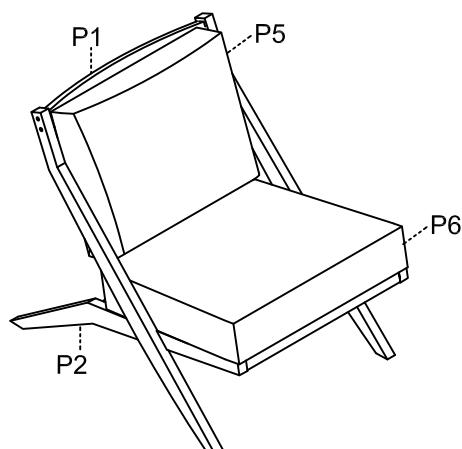

**ADDITIONAL NOTE ABOUT SAFETY:**

**BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.**

**THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.**

Thank you for your purchase