



| Parts # | Parts Name | Drawing | QTY |
|---------|--------------|---------|-----|
| P1 | Legs | | 4 |
| P2 | Accent Bench | | 1 |

| Hardware# | Parts Name | Drawing | QTY |
|-----------|-------------------------------------|---------|-----|
| H1 | Bolts $\phi 5/16" \times 2-3/8"$ | | 8 |
| H2 | Lock Washers $\phi 5/16"$ | | 8 |
| H3 | Flat Washers $\phi 5/16"$ | | 8 |
| H4 | Allen Wrench $\phi 5/16"$ | | 1 |

1. Turn the bench upside down and lay on protective carpet, take out the legs and hardwares from the bottom.

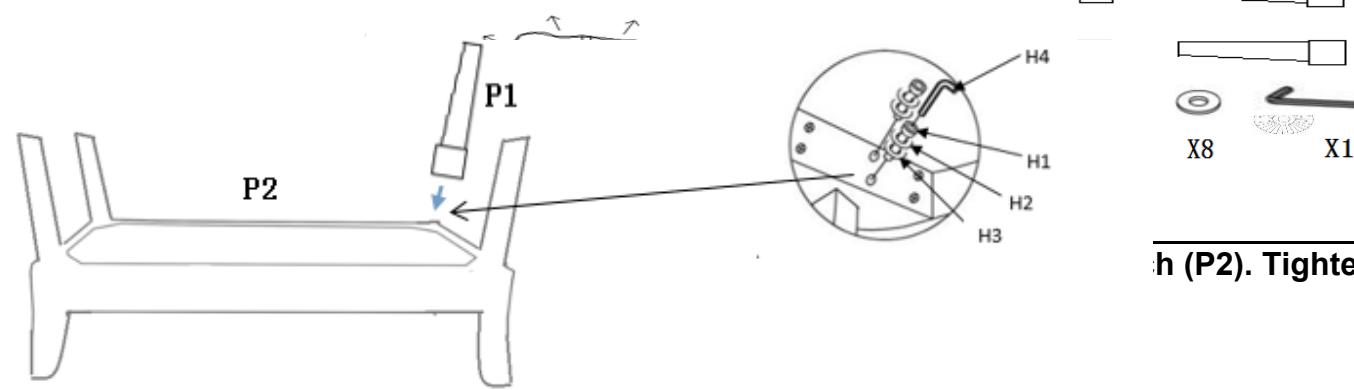

2.
b

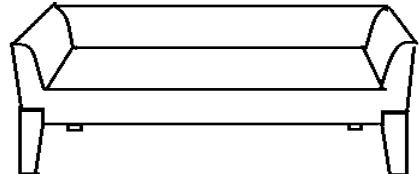

h (P2). Tighten

3. Place bench upright on a level surface. Assembly is complete.