

Important safety instructions:


- Please carefully read all instructions before assembling.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.

Pre-assembly:

- Do not discard any contents until after assembly is complete to avoid accidentally discarding small parts or hardware.
- Remove all parts and hardware from box along with any plastic protective packaging.

Parts List

Item	Description	QTY
P1	Chair Top	1
P2	Front Left Leg & Back Right Leg	2
P3	Front Right Leg & Back Left Leg	2
P4	Front Stretcher	1
P5	Side Stretcher	2
P6	Back Stretcher	1

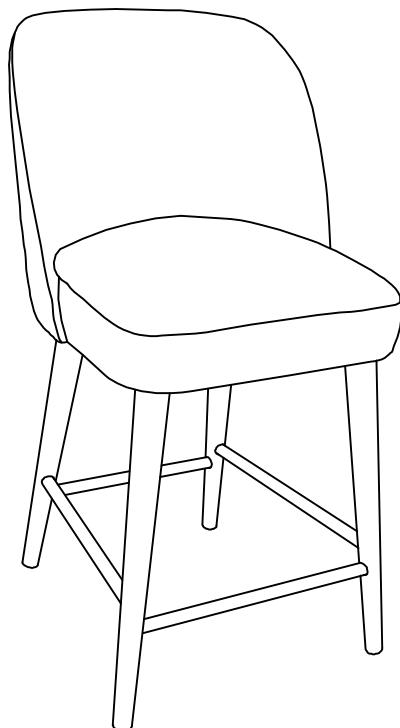
**Hardware List**

Item	Description	QTY
H1	Bolts Ø5/16" *2" L	8
H2	Lock Washers 5/16"	8
H3	Flat Washers 5/16"	8
H4	Allen Wrench 5/16"	1
H5	Screws #8*1-1/2"	8
H6	Screw Driver	Not included

Assembly Procedures:


Step 1. Assemble the stool on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Insert front legs (P2 & P3) to the seat bottom, and insert front stretcher (P4) between the legs, loosely attach legs as shown below image 1.

(H1)x4 Bolts $\varnothing 5/16" * 2" L$
(H2)x4 Lock Washers $5/16"$
(H3)x4 Flat Washers $5/16"$
(H4)x1 Allen Wrench $5/16"$

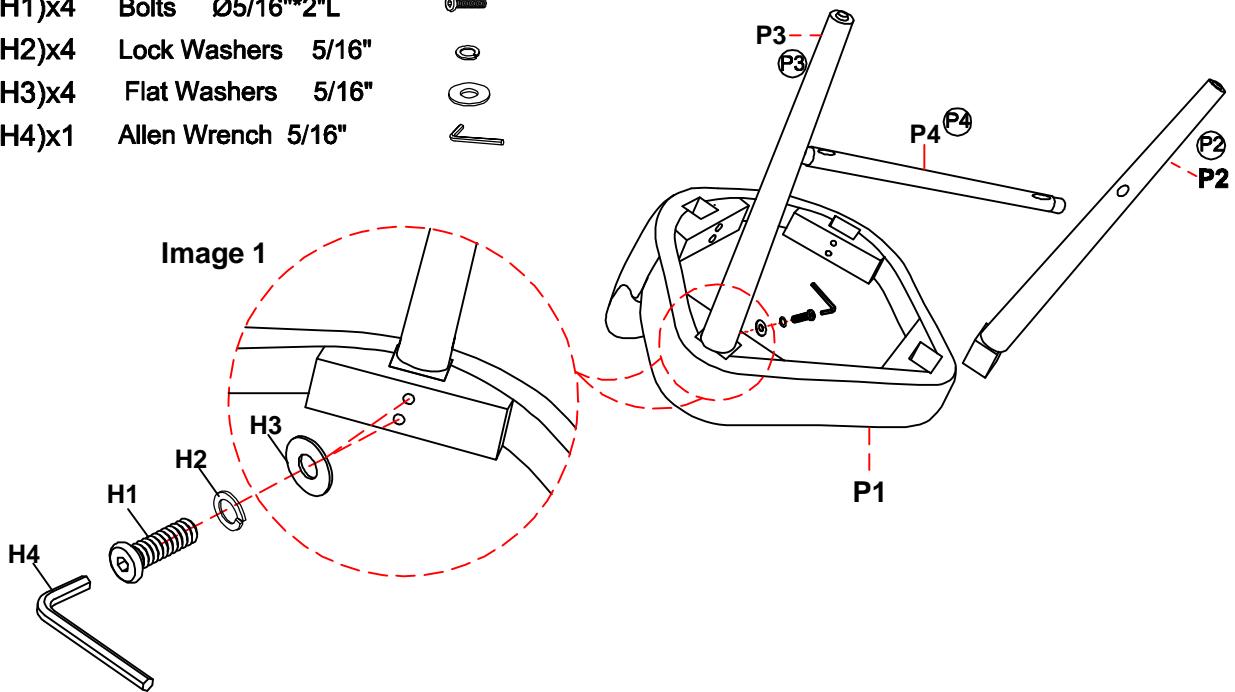

Step 2. Insert back leg (P3) to the bottom of seat, and insert side stretcher (P5) between the legs, then loosely attach back leg as shown below image 2.


(H1)x2 Bolts $\varnothing 5/16" * 2" L$
(H2)x2 Lock Washers $5/16"$
(H3)x2 Flat Washers $5/16"$

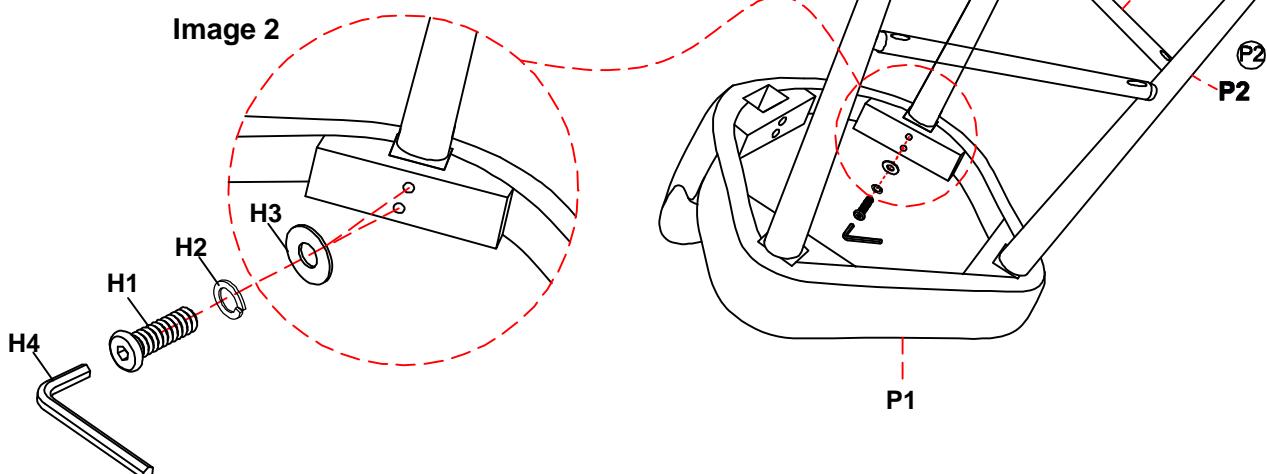

Step 3.


- 1) Insert back leg (P2) to the seat bottom, and insert back stretcher (P6) and side stretcher (P5) to the assembled legs, then loosely attach back leg as shown below image 3.
- 2) Make sure the screw holes face to the bottom of leg, then tighten all screws (H5) with screw driver (not provided) see image 4.

(H1)x2	Bolts	Ø5/16" *2" L	
(H2)x2	Lock Washers	5/16"	
(H3)x2	Flat Washers	5/16"	
(H5)x8	Screws	#8*1-1/2"	

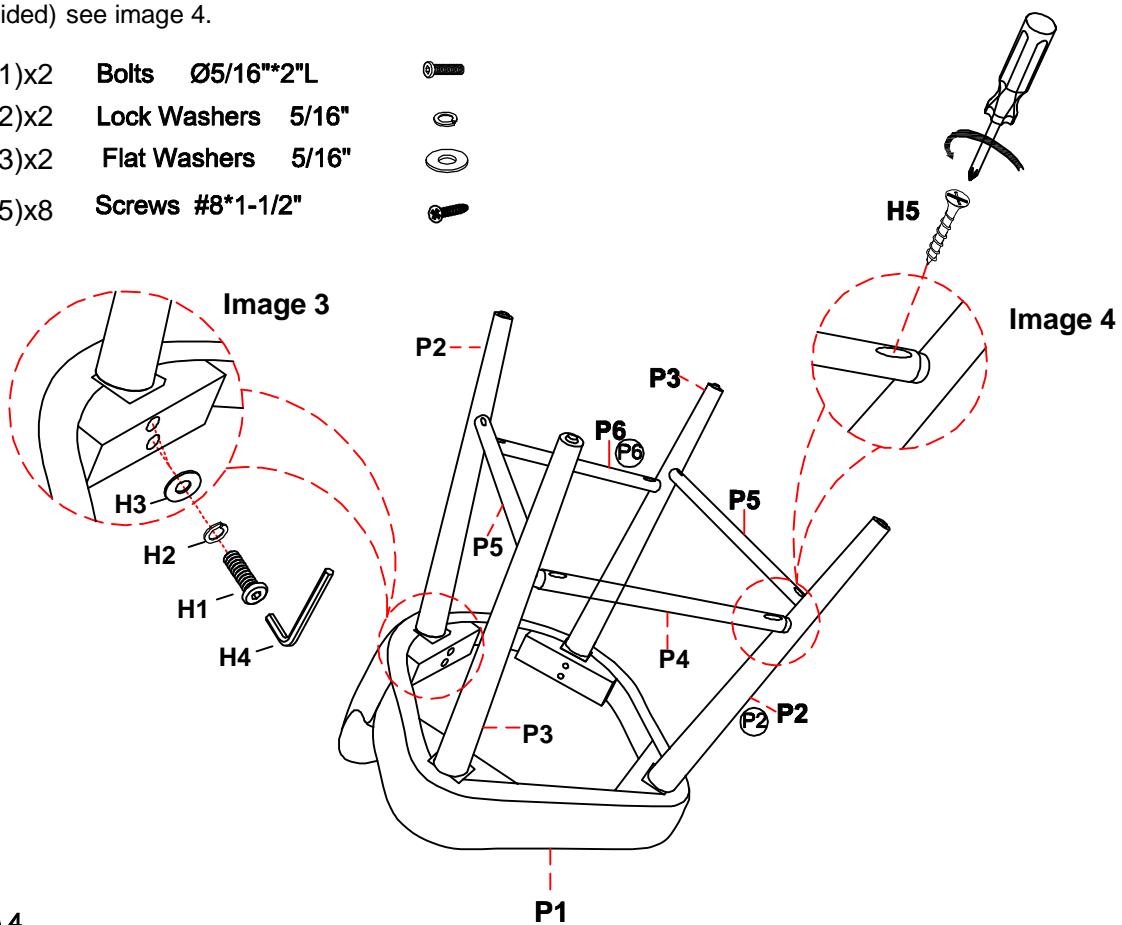

Step 4.

- 1) Make sure the stool is level and securely tighten all bolts by Allen wrench (H4). Turn the assembled stool to an upright position
- 2) Assembly is complete. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

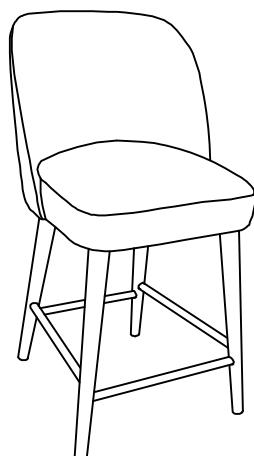

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO BE SURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase